

Sample &

Buy



UCD90160A

SLVSDD4-SEPTEMBER 2016

UCD90160A 16-Rail Power Supply Sequencer and Monitor With ACPI Support

Technical

Documents

Features 1

- Monitor and Sequence 16 Voltage Rails
 - All Rails Sampled Every 400 μs
 - 12-bit ADC With 2.5-V, 0.5% Internal VREE
 - Sequence Based on Time, Rail and Pin Dependencies
 - Four Programmable Undervoltage and Overvoltage Thresholds per Monitor
- Nonvolatile Error and Peak-Value Logging per Monitor (up to 12 Fault Detail Entries)
- Closed-Loop Margining for 10 Rails ٠
 - Margin Output Adjusts Rail Voltage to Match **User-Defined Margin Thresholds**
- Programmable Watchdog Timer and System Reset
- Easily Cascade Multiple Power Sequencers and ٠ Take Coordinated Fault Responses
- Pin Selected Rail States for ACPI Support
- Flexible Digital I/O Configuration
- **Cascading Multiple Devices**
- Response and Monitor to GPI-Triggered Fault
- Multiphase PWM Clock Generator
 - Clock Frequencies from 15.259 kHz to 125 MHz
 - Capability to Configure Independent Clock Outputs for Synchronizing Switch-Mode Power Supplies
- JTAG and I²C/SMBus/PMBus[™] Interfaces

2 Applications

- Industrial and ATE
- **Telecommunications and Networking Equipment**
- Servers and Storage Systems
- Systems Requiring Sequencing and Monitoring of **Multiple Power Rails**

3 Description

The UCD90160A is a 16-rail PMBus/I²C addressable power supply sequencer and monitor. The device integrates a 12-bit ADC for monitoring up to 16 power supply voltage inputs. Twenty-six GPIO pins can be used for power supply enables, power-on reset signals, external interrupts, cascading, or other system functions. Twelve of these pins offer PWM functionality. Using these pins, the UCD90160A offers support for margining, and general-purpose PWM functions.

Specific power states can be achieved using the Pin-Selected Rail States feature. This feature allows with the use of up to 3 GPIs to enable and disable any rail. This is useful for implementing system low-power modes and the Advanced Configuration and Power Interface (ACPI) specification that is used for hardware devices.

Support &

Community

20

Tools &

Software

The Fault Pin feature enables easily cascading multiple devices and coordinates among those devices to take synchronized fault responses.


The TI Fusion Digital Power™ designer software is provided for device configuration. This PC-based graphical user interface (GUI) offers an intuitive interface for configuring, storing, and monitoring all system operating parameters.

Device Information⁽¹⁾

PART NUMBER	PACKAGE	BODY SIZE (NOM)
UCD90160A	VQFN (64)	9.00 mm × 9.00 mm

(1) For all available packages, see the orderable addendum at the end of the data sheet.

Simplified Application Schematic

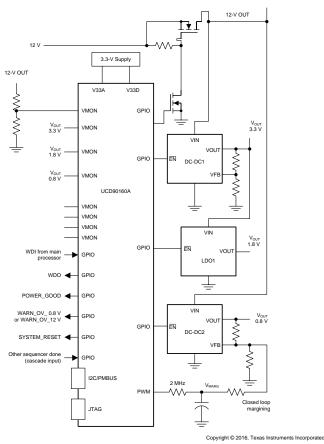

An IMPORTANT NOTICE at the end of this data sheet addresses availability, warranty, changes, use in safety-critical applications, intellectual property matters and other important disclaimers. PRODUCTION DATA.

Texas Instruments

www.ti.com

Table of Contents

1	Feat	tures	1
2	Арр	lications	1
3	Des	cription	1
4	Rev	ision History	2
5	Pin	Configuration and Functions	2
6	Spe	cifications	6
	6.1	Absolute Maximum Ratings	6
	6.2	ESD Ratings	6
	6.3	Recommended Operating Conditions	6
	6.4	Thermal Information	6
	6.5	Electrical Characteristics	7
	6.6	Timing Requirements: I ² C/SMBus/PMBus	8
	6.7	Typical Characteristics	9
7	Deta	ailed Description	10
	7.1	Overview	. 10
	7.2	Functional Block Diagram	. 10
	7.3	Feature Description	. 10
	7.4	Device Functional Modes	. 16


	7.5	Programming 40
8	Арр	lication and Implementation 45
	8.1	Application Information 45
	8.2	Typical Application 45
9	Pow	er Supply Recommendations 48
10	Lay	out 48
	10.1	Layout Guidelines 48
	10.2	Layout Example 49
11	Dev	ice and Documentation Support 51
	11.1	Device Support 51
	11.2	Documentation Support 51
	11.3	Receiving Notification of Documentation Updates 51
	11.4	Community Resources 51
	11.5	Trademarks 51
	11.6	Electrostatic Discharge Caution 51
	11.7	Glossary 51
12		hanical, Packaging, and Orderable
	Info	rmation 51

4 Revision History

DATE	REVISION	NOTES
September 2016	*	Initial release.

5 Pin Configuration and Functions



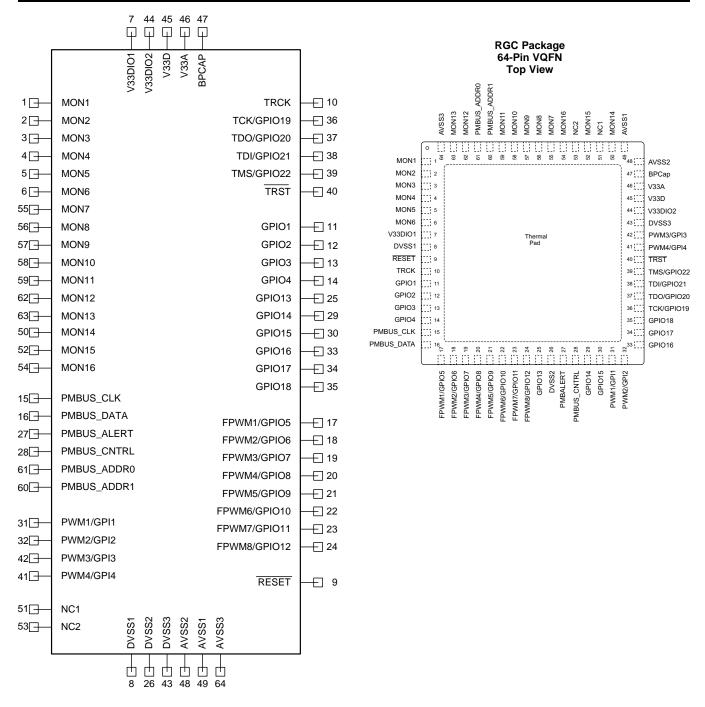

UCD90160A SLVSDD4-SEPTEMBER 2016

www.ti.com

STRUMENTS

EXAS

	Pin Functions ⁽¹⁾				
PIN		I/O	DESCRIPTION		
NAME	NO.	1/0	DESCRIPTION		
ANALOG MONITOR	INPUTS				
MON1	1	I	Analog input (0 to 2.5 V)		
MON2	2	I	Analog input (0 to 2.5 V)		
MON3	3	I	Analog input (0 to 2.5 V)		
MON4	4	I	Analog input (0 to 2.5 V)		
MON5	5	I	Analog input (0 to 2.5 V)		
MON6	6	I	Analog input (0 to 2.5 V)		
MON7	55	I	Analog input (0 to 2.5 V)		
MON8	56	I	Analog input (0 to 2.5 V)		
MON9	57	I	Analog input (0 to 2.5 V)		
MON10	58	I	Analog input (0 to 2.5 V)		
MON11	59	I	Analog input (0 to 2.5 V)		
MON12	62	I	Analog input (0 to 2.5 V)		
MON13	63	I	Analog input (0 to 2.5 V)		
MON14	50	I	Analog input (0.2 to 2.5 V)		
MON15	52	I	Analog input (0.2 to 2.5 V)		
MON16	54	I	Analog input (0.2 to 2.5 V)		
GENERAL-PURPOSE	E INPUT AN	D OUTPUT			
GPIO1	11	I/O	General-purpose discrete I/O		
GPIO2	12	I/O	General-purpose discrete I/O		
GPIO3	13	I/O	General-purpose discrete I/O		
GPIO4	14	I/O	General-purpose discrete I/O		
GPIO13	25	I/O	General-purpose discrete I/O		
GPIO14	29	I/O	General-purpose discrete I/O		
GPIO15	30	I/O	General-purpose discrete I/O		
GPIO16	33	I/O	General-purpose discrete I/O		
GPIO17	34	I/O	General-purpose discrete I/O		
GPIO18	35	I/O	General-purpose discrete I/O		
PWM OUTPUTS		•			
FPWM1/GPIO5	17	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM2/GPIO6	18	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM3/GPIO7	19	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM4/GPIO8	20	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM5/GPIO9	21	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM6/GPIO10	22	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM7/GPIO11	23	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
FPWM8/GPIO12	24	I/O/PWM	PWM (15.259 kHz to 125 MHz) or GPIO		
PWM1/GPI1	31	I/PWM	Fixed 10-kHz PWM output or GPI		
PWM2/GPI2	32	I/PWM	Fixed 1-kHz PWM output or GPI		
PWM3/GPI3	42	I/PWM	PWM (0.93 Hz to 7.8125 MHz) or GPI		
PWM4/GPI4	41	I/PWM	PWM (0.93 Hz to 7.8125 MHz) or GPI		

(1) The maximum number of configurable rails is 16. The maximum number of configurable GPIs is 8. The maximum number of configurable Boolean Logic GPOs is 16.



Pin Functions⁽¹⁾ (continued)

PIN			DECODIPTION			
NAME	NO.	I/O	DESCRIPTION			
PMBus COMM INTE	RFACE					
PMBUS_CLK	15	I/O	PMBus clock (must have pullup to 3.3 V)			
PMBUS_DATA	16	I/O	PMBus data (must have pullup to 3.3 V)			
PMBALERT	27	0	PMBus alert, active-low, open-drain output (must have pullup to 3.3 V)			
PMBUS_CNTRL	28	Ι	PMBus control			
PMBUS_ADDR0	61	Ι	PMBus analog address input. Least-significant address bit			
PMBUS_ADDR1	60	I	PMBus analog address input. Most-significant address bit			
JTAG						
TRCK	10	0	Test return clock			
TCK/GPIO19	36	I/O	Test clock or GPIO			
TDO/GPIO20	37	I/O	Test data out or GPIO			
TDI/GPIO21	38	I/O	Test data in (tie to V_{DD} with 10-k Ω resistor) or GPIO			
TMS/GPIO22	39	I/O	Test mode select (tie to V_{DD} with 10-k Ω resistor) or GPIO			
TRST	40	Ι	Test reset. Tie to ground with 10-k Ω resistor			
INPUT POWER AND	GROUNDS					
RESET	9		Active-low device reset input. Hold low for at least 2 μs to reset the device. Refer to the Device Reset section.			
V33A	46		Analog 3.3-V supply. Refer to the Layout Guidelines section.			
V33D	45		Digital core 3.3-V supply. Refer to the Layout Guidelines section.			
V33DIO1	7		Digital I/O 3.3-V supply. Refer to the Layout Guidelines section.			
V33DIO2	44		Digital I/O 3.3-V supply. Refer to the Layout Guidelines section.			
BPCap	47		1.8-V bypass capacitor. Refer to the Layout Guidelines section.			
AVSS1	49		Analog ground			
AVSS2	48		Analog ground			
AVSS3	64		Analog ground			
DVSS1	8		Digital ground			
DVSS2	26		Digital ground			
DVSS3	43		Digital ground			
NC1	51		No Connect			
NC2	52		No Connect			
QFP ground pad	NA		Thermal pad – tie to ground plane.			

6 Specifications

6.1 Absolute Maximum Ratings⁽¹⁾

	MIN	MAX	UNIT
Voltage applied at V33D to DV_{SS}	-0.3	3.8	V
Voltage applied at V33A to AV _{SS}	-0.3	3.8	V
Voltage applied to any other pin ⁽²⁾	-0.3	(V33A + 0.3)	V
Storage temperature, T _{stg}	-55	150	°C

Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only and functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.
 All units are referenced to V.

(2) All voltages referenced to V_{SS}

6.2 ESD Ratings

				VALUE	UNIT
			Human body model (HBM), per ANSI/ESDA/JEDEC JS-001 ⁽¹⁾	±2500	
V(ESD)	Electrostatic discharge	Charged device model (CDM), per JEDEC specification JESD22-C101 $^{\left(2\right) }$	±750	V

(1) JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

(2) JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.

6.3 Recommended Operating Conditions

	MIN	NOM	MAX	UNIT
Supply voltage during operation (V_{33D} , V_{33DIO} , V_{33A})	3	3.3	3.6	V
Operating free-air temperature range, T _A	-40		110	°C
Junction temperature, T _J			125	°C

6.4 Thermal Information

		UCD90160A	
	THERMAL METRIC ⁽¹⁾	RGC [VQFN]	UNIT
		64 PINS	
$R_{\theta JA}$	Junction-to-ambient thermal resistance	26.4	°C/W
R _{0JC(top)}	Junction-to-case(top) thermal resistance	21.2	°C/W
$R_{\theta JB}$	Junction-to-board thermal resistance	1.7	°C/W
ΨJT	Junction-to-top characterization parameter	0.7	°C/W
Ψјв	Junction-to-board characterization parameter	8.8	°C/W
R _{0JC(bot)}	Junction-to-case(bottom) thermal resistance	1.7	°C/W

(1) For more information about traditional and new thermal metrics, see the Semiconductor and IC Package Thermal Metrics application report.



6.5 Electrical Characteristics

over operating free-air temperature range (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	NOM	MAX	UNIT
SUPPLY CUR	RENT					
I _{V33A}		V _{V33A} = 3.3 V		8		mA
I _{V33DIO}		V _{V33DIO} = 3.3 V		2		mA
I _{V33D}	Supply current ⁽¹⁾	V _{V33D} = 3.3 V		40		mA
I _{V33D}		V_{V33D} = 3.3 V, storing configuration parameters in flash memory		50		mA
ANALOG INP	UTS (MON1–MON16)					
V _{MON}	Input voltage range	MON1-MON13	0		2.5	V
		MON14–MON16	0.2		2.5	V
INL	ADC integral nonlinearity		-4		4	LSB
DNL	ADC differential nonlinearity		-2		2	LSB
l _{lkg}	Input leakage current	3 V applied to pin			100	nA
IOFFSET	Input offset current	1-kΩ source impedance	-5		5	μA
P		MON1–MON13, ground reference	8			MΩ
R _{IN}	Input impedance	MON14–MON16, ground reference	0.5	1.5	3	MΩ
C _{IN}	Input capacitance				10	pF
t _{CONVERT}	ADC sample period	16 voltages sampled, 3.89 μsec/sample		400		μsec
V/	ADC 2.5 V, internal reference	0°C to 125°C	-0.5%		0.5%	
V _{REF}	accuracy	-40°C to 125°C	-1%		1%	
ANALOG INP	UT (PMBUS_ADDRx)					
I _{BIAS}	Bias current for PMBus Addr pins		9		11	μA
V _{ADDR_OPEN}	Voltage – open pin	PMBUS_ADDR0, PMBUS_ADDR1 open	2.26			V
V _{ADDR_SHORT}	Voltage – shorted pin	PMBUS_ADDR0, PMBUS_ADDR1 short to ground			0.124	V
DIGITAL INPU	JTS AND OUTPUTS	· · · · · · · · · · · · · · · · · · ·				
V _{OL}	Low-level output voltage	$I_{OL} = 6 \text{ mA}^{(2)}, V_{33DIO} = 3 \text{ V}$			Dgnd + 0.25	V
V _{OH}	High-level output voltage	I _{OH} = -6 mA ⁽³⁾ , V _{33DIO} = 3 V	V _{33DIO} - 0.6			V
V _{IH}	High-level input voltage	V _{33DIO} = 3 V	2.1		3.6	V
V _{IL}	Low-level input voltage	$V_{33DIO} = 3.5 V$			1.4	V
MARGINING	OUTPUTS	•				
T _{PWM_FREQ}	MARGINING-PWM frequency	FPWM1-8	15.260		125000	kHz
		PWM3-4	0.001		7800	
DUTY _{PWM}	MARGINING-PWM duty cycle range		0%		100%	
SYSTEM PER	FORMANCE				ļ	
V _{DD} Slew	Minimum V _{DD} slew rate	V _{DD} slew rate between 2.3 V and 2.9 V	0.25			V/ms
V _{RESET}	Supply voltage at which device comes out of reset	For power-on reset (POR)			2.4	V
t _{RESET}	Low-pulse duration needed at RESET pin	To reset device during normal operation	2			μS
f _(PCLK)	Internal oscillator frequency	T _A = 125°C, T _A = 25°C	240	250	260	MHz
t _{retention}	Retention of configuration parameters	$T_J = 25^{\circ}C$	100			Years
Write_Cycles	Number of nonvolatile erase/write cycles	T _J = 25°C	20			K cycles

Typical supply current values are based on device programmed but not configured, and no peripherals connected to any pins.
 The maximum total current, I_{OL}max, for all outputs combined, should not exceed 12 mA to hold the maximum voltage drop specified.
 The maximum total current, I_{OH}max, for all outputs combined, should not exceed 48 mA to hold the maximum voltage drop specified.

ISTRUMENTS

EXAS

6.6 Timing Requirements: I²C/SMBus/PMBus

 $T_A = -40^{\circ}$ C to 85°C, 3 V < V_{DD} < 3.6 V; typical values at $T_A = 25^{\circ}$ C and $V_{CC} = 2.5$ V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
FSMB	SMBus/PMBus operating frequency	Slave mode, SMBC 50% duty cycle	10		400	kHz
FI2C	I ² C operating frequency	Slave mode, SCL 50% duty cycle	10		400	kHz
t _(BUF)	Bus free time between start and stop		4.7			μS
t _(HD:STA)	Hold time after (repeated) start		0.26			μS
t _(SU:STA)	Repeated-start setup time		0.26			μS
t _(SU:STO)	Stop setup time		0.26			μS
t _(HD:DAT)	Data hold time	Receive mode	0			ns
t _(SU:DAT)	Data setup time		50			ns
t _(TIMEOUT)	Error signal/detect	See ⁽¹⁾			35	ms
t _(LOW)	Clock low period		0.5			μS
t _(HIGH)	Clock high period	See ⁽²⁾	0.26		50	μS
t _(LOW:SEXT)	Cumulative clock low slave extend time	See ⁽³⁾			25	ms
t _f	Clock/data fall time	See (4)			120	ns
t _r	Clock/data rise time	See ⁽⁵⁾			120	ns

(1)

The device times out when any clock low exceeds $t_{(TIMEOUT)}$. $t_{(HIGH)}$, Max, is the minimum bus idle time. SMBC = SMBD = 1 for t > 50 ms causes reset of any transaction that is in progress. This specification is valid when the NC_SMB control bit remains in the default cleared state (CLK[0] = 0). (2)

 $t_{(LOW:SEXT)}$ is the cumulative time a slave device is allowed to extend the clock cycles in one message from initial start to the stop. Fall time $t_f = 0.9$ VDD to ($V_{IL}MAX - 0.15$) (3)

(4) (5) Rise time $t_r = (V_{IL}MAX - 0.15)$ to $(V_{IH}MIN + 0.15)$

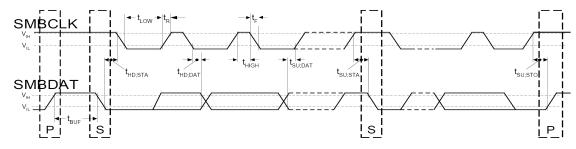


Figure 1. I²C/SMBus Timing Diagram


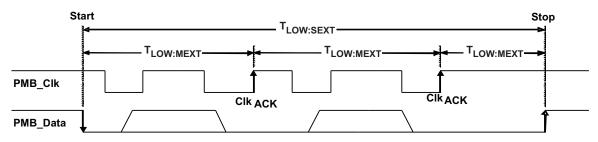


Figure 2. Bus Timing in Extended Mode



6.7 Typical Characteristics

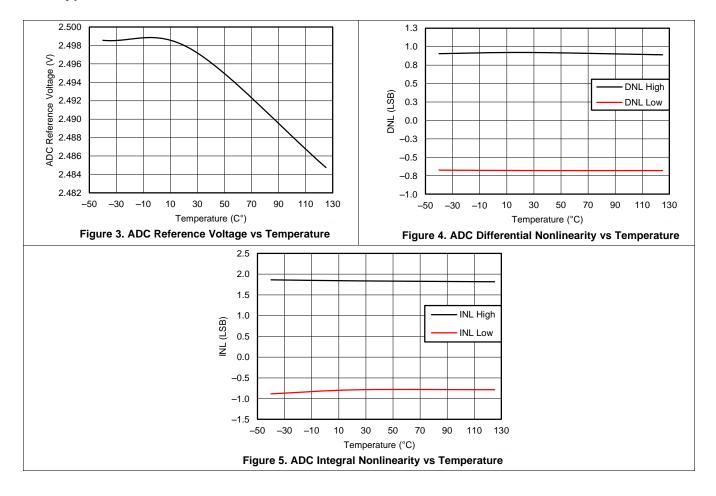

TEXAS INSTRUMENTS

www.ti.com

7 Detailed Description

7.1 Overview

Electronic systems that include CPU, DSP, microcontroller, FPGA, ASIC, etc. can have multiple voltage rails and require certain power on/off sequences in order to function correctly. The UCD90160A can control up to 16 voltage rails and ensure correct power sequences during normal condition and fault conditions.


In addition to sequencing, UCD90160A can continuously monitor rail voltages, fault conditions, and report the system health information to a PMBus host, improving systems' long term reliability.

Also, UCD90160A can protect electronic systems by responding to power system faults. The fault responses are conveniently configured by users through Fusion GUI. Fault events are stored in on-chip nonvolatile flash memory with time stamp in order to assist failure analysis.

System reliability can be improved through four-corner testing during system verification. During four-corner testing, each voltage rail is required to operate at the minimum and maximum output voltages, commonly known as margining. UCD90160A can perform closed-loop margining for up to 10 voltage rails. During normal operation, UCD90160A can also actively trim DC output voltages using the same margining circuitry.

UCD90160A supports both PMBus- and pin-based control environments. UCD90160A functions as a PMBus slave. It can communicate with PMBus host with PMBus commands, and control voltage rails accordingly. Also, UCD90160A can be controlled by up to 8 GPIO configured GPI pins. One GPI can be used as fault pin which can shut down rails. The GPIs can be used as Boolean logic input to control up to 16 Logic GPO outputs. Each Logic GPO has a flexible Boolean logic builder. Input signals of the Boolean logic builder can include GPIs, other Logic GPO outputs, and selectable system flags such as POWER_GOOD, faults, warnings, etc. A simple state machine is also available for each Logic GPO pin.

UCD90160A provides additional features such a scascading, pin-selected states, system watchdog, system reset, runtime clock, peak value log, reset counter, and so on. Pin-selected states feature allows users to use up to 3 GPIs to define up to 8 rail states. These states can implement system low-power modes as set out in the Advanced Configuration and Power Interface (ACPI) specification.

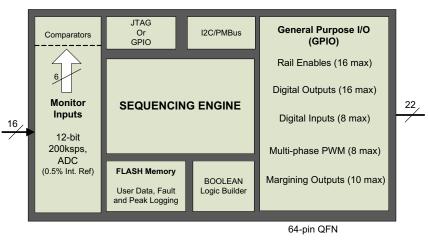

7.2 Functional Block Diagram

Copyright © 2016, Texas Instruments Incorporated

7.3 Feature Description

7.3.1 Rail Configuration

A rail includes voltage, a power supply enable and a margining output. At least one must be included in a rail definition. Once the user has defined how the power supply rails should operate in a particular system, analog input pins and GPIOs can be selected to monitor and enable each supply (Figure 6).



Feature Description (continued)

ut Config	9 Pin Assignment	·	imits Fault Loggi	ng Pin Selected S			Clock Device Info
Rails - M	lonitors & Enable:	5					3 of 16 Assigned
	Rail Name	Voltage	Temperature	Current	Enable	Trim/Margin PWM	Actions
Rail #1	Rail #1	Pin 1 MON1	N/A	N/A	<none></none>	<none></none>	Delete Configure
Rail #2	Rail #2	Pin 2 MON2	N/A	N/A	<none></none>	<none></none>	Delete Configure
Rail #3	Rail #3	Pin 3 MON3	N/A	N/A	Pin 13 GPIO3	<none></none>	Delete Configure
Add Rail	l						
PIs - G	eneral Purpose Ir	nputs					3 of 8 Assigned
GPI Nan	ne	Pin	Polarity	Special Beh	avior		Actions
GPI #1		Pin 31 GPI1 PWM1	Active Low				Delete Configure
GPI #2		Pin 32 GPI2 PWM2	Active Low				Delete Configure
GPI #3		Pin 41 GPI4 PWM4	Active Low				Delete Configure
Add GPI							
Logic Co	ntrolled GPOs - G	eneral Purpose Outpu	uts with Program	nmble State Logi	ic		4 of 16 Assigned
GPO Nar	ne	Pin	Polarity	Mode	Configuration Summa	ary	Actions
GPO #1			Active High	Actively Driven	RAIL2 * RAIL3 [POWER_	600D1	Delete Configure
GPU #1		Pin 11 GPIO1	Active High		Tance Tance Dotter		<u></u>
		Pin 11 GPIO1 Pin 20 FPWM4 GPIO8	-	Actively Driven		* RAIL3 [POWER_GOOD]	Delete Configure
GPO #2			Active High		PIN31' * PIN32' * RAIL2		
GPO #1 GPO #2 GPO #3 GPO #4		Pin 20 FPWM4 GPIO8	Active High Active High	Actively Driven	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	Delete Configure
GPO #2 GPO #3 GPO #4	ic Controlled GPO	Pin 20 FPWM4 GPI08 Pin 21 FPWM5 GPI09 Pin 22 FPWM6 GPI01	Active High Active High	Actively Driven Actively Driven	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	Delete Configure
GPO #2 GPO #3 GPO #4 Add Log		Pin 20 FPWM4 GPI08 Pin 21 FPWM5 GPI09 Pin 22 FPWM6 GPI01	Active High Active High Active Low	Actively Driven Actively Driven Open-Drain	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	Delete Configure
GPO #2 GPO #3 GPO #4 Add Log	nd Controlled GPC	Pin 20 FPWM4 GPIO8 Pin 21 FPWM5 GPIO9 Pin 22 FPWM6 GPIO1	Active High Active High O Active Low Dutputs with Fix:	Actively Driven Actively Driven Open-Drain ed State	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	<u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u>
GPO #2 GPO #3 GPO #4 Add Log	nd Controlled GPC	Pin 20 FPWM4 GPI08 Pin 21 FPWM5 GPI09 Pin 22 FPWM6 GPI01	Active High Active High O Active Low Dutputs with Fix:	Actively Driven Actively Driven Open-Drain ed State	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	<u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u>
GPO #2 GPO #3 GPO #4 Add Log Commar You have Add Con	nd Controlled GPC not configured any nmand Controllec	Pin 20 FPWM4 GPI08 Pin 21 FPWM5 GPI09 Pin 22 FPWM6 GPI01	Active High Active High O Active Low Dutputs with Fixe Ds; click the Add lin	Actively Driven Actively Driven Open-Drain ed State	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	<u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u> <u>Delete</u> <u>Confiqure</u>
GPO #2 GPO #3 GPO #4 Add Log You have Add Con	nd Controlled GPC not configured any nmand Controllec General Purpose I	Pin 20 FPWM4 GPI08 Pin 21 FPWM5 GPI09 Pin 22 FPWM6 GPI01 ! is - General Purpose f command controlled GP0 <u>1 GP0</u>	Active High Active High O Active Low Dutputs with Fix Ds; click the Add lin	Actively Driven Actively Driven Open-Drain ed State	PIN31' * PIN32' * RAIL2 (PIN31' * PIN32' * RAIL2	* RAIL3 [POWER_GOOD]	Delete Configure Delete Configure Delete Configure 0 of 22 Assigned

Figure 6. Fusion GUI Pin-Assignment Tab

After the pins have been configured, other key monitoring and sequencing criteria are selected for each rail from the Vout Config tab (Figure 7):

- Nominal operating voltage (V_{OUT})
- Undervoltage (UV) and overvoltage (OV) warning and fault limits
- Margin-low and margin-high values
- Power-good on and power-good off limits
- PMBus or pin-based sequencing control (On/Off Config)
- Rails, GPOs and GPIs for Sequence On dependencies
- Rails, GPOs and GPIs for Sequence Off dependencies
- Turn-on and turn-off delay timing
- Maximum time allowed for a rail to reach POWER_GOOD_ON or POWER_GOOD_OFF after being enabled or disabled
- Other rails to turn off in case of a fault on a rail (fault-shutdown slaves)

INSTRUMENTS

Texas

Feature Description (continued)

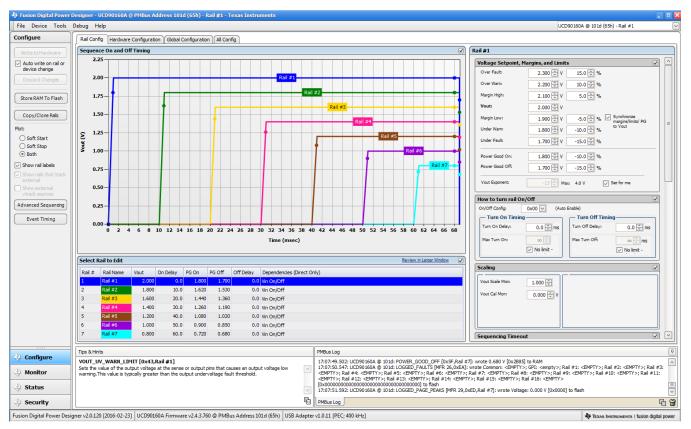


Figure 7. Fusion GUI V_{OUT}-Config Tab

The Synchronize margins/limits/PG to Vout checkbox is an easy way to change the nominal operating voltage of a rail and also update all of the other limits associated with that rail according to the percentages shown to the right of each entry.

The plot in the upper left section of Figure 7 shows a simulation of the overall sequence-on and sequence-off configuration, including the nominal voltage, the turnon and turnoff delay times, the power-good on and power-good off voltages and any timing dependencies between the rails.

After a rail voltage has reached its POWER_GOOD_ON voltage and is considered to be in regulation, it is compared against two UV and two OV thresholds in order to determine if a warning or fault limit has been exceeded. If a fault is detected, the UCD90160A responds based on a variety of flexible, user-configured options. Faults can cause rails to restart, shut down immediately, sequence off using turnoff delay times or shut down a group of rails and sequence them back on. Different types of faults can result in different responses.

Fault responses, along with a number of other parameters including user-specific manufacturing information and external scaling and offset values, are selected in the different tabs within the Configure function of the *Fusion GUI*. Once the configuration satisfies the user requirements, it can be written to device SRAM if *Fusion GUI* is connected to a UCD90160A using an $I^2C/PMBus$. SRAM contents can then be stored to data flash memory so that the configuration remains in the device after a reset or power cycle.

The *Fusion GUI* Monitor page has a number of options, including a device dashboard and a system dashboard, for viewing and controlling device and system status.



Feature Description (continued)

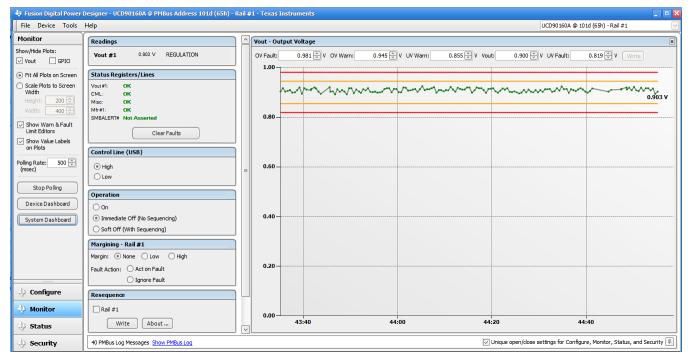


Figure 8. Fusion GUI Monitor Page

The UCD90160A also has rail state for each rail to debug the system.

RAIL STATE	VALUE	DESCRIPTION
IDLE	1	On condition is not met, or rail is shut down due to fault, or rail is waiting for the resequence
SEQ_ON	2	Wait the dependency to be met to assert ENABLE signal
START_DELAY	3	TON_DELAY to assert ENABLE signal
RAMP_UP	4	Enable is asserted and rail is on the way to reach power good threshold. If the power good threshold is set to 0 V, the rail stays at this state even if the monitored voltage is bigger than 0 V.
REGULATION	5	Once the monitoring voltage is over POWER_GOOD when enable signal is asserted, rails stay at this state even if the voltage is below POWER_GOOD late as long as there is no fault action taken.
SEQ_OFF	6	Wait the dependency to be met to de-assert ENABLE signal
STOP_DELAY	7	TOFF_DELAY to de-assert ENABLE signal
RAMP_DOWN	8	Enable signal is de-asserted and rail is ramping down. This state is only available if TOFF_MAX_WARN_LIMIT is not set to unlimited; or If the turn off is triggered by a fault action, rail must not be under fault retry to show RAMP DOWN state. Otherwise, IDLE state is present.

The UCD90160A also has status registers for each rail and the capability to log faults to flash memory for use in system troubleshooting. This is helpful in the event of a power supply or system failure. The status registers (Figure 9) and the fault log (Figure 10) are available in the *Fusion GUI*. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* (SLVU352) and the PMBus Specification for detailed descriptions of each status register and supported PMBus commands.

Copyright © 2016, Texas Instruments Incorporated

UCD90160A SLVSDD4-SEPTEMBER 2016



www.ti.com

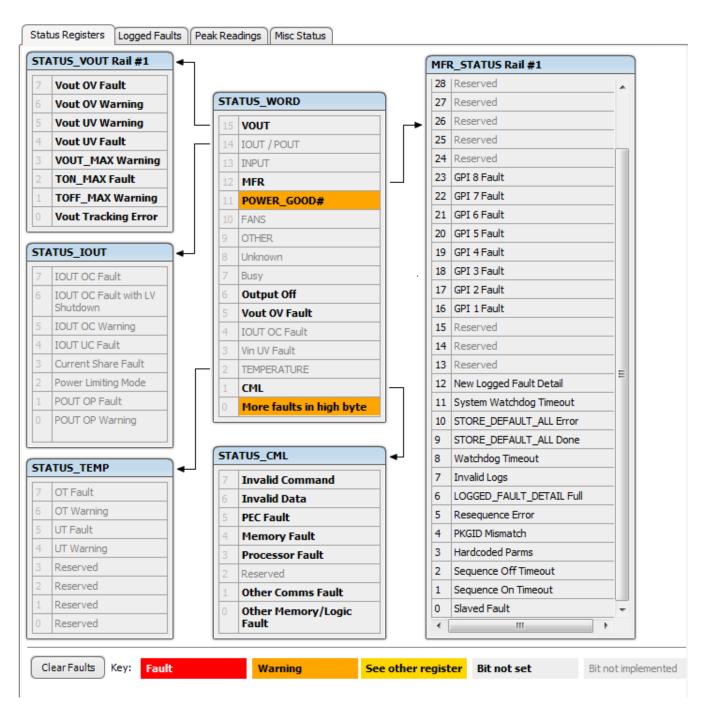


Figure 9. Fusion GUI Rail-Status Register



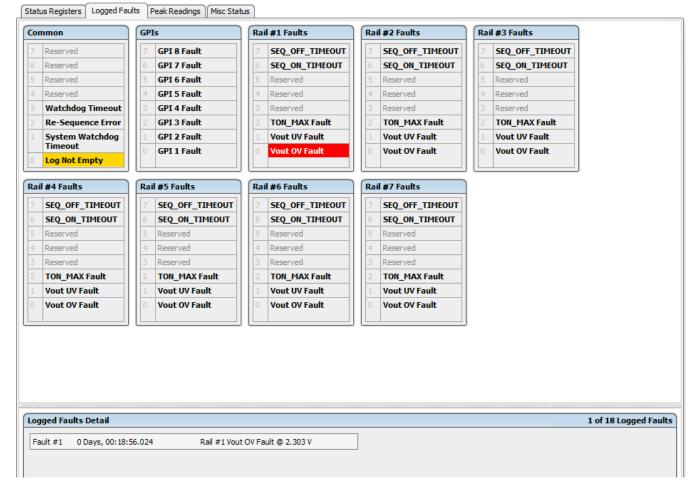


Figure 10. Fusion GUI Flash-Error Log (Logged Faults)

7.3.2 TI Fusion GUI

The Texas Instruments *Fusion Digital Power Designer* is provided for device configuration. This PC-based graphical user interface (GUI) offers an intuitive I²C/PMBus interface to the device. It allows the design engineer to configure the system operating parameters for the application without directly using PMBus commands, store the configuration to on-chip nonvolatile memory, and observe system status (voltage, etc). *Fusion Digital Power Designer* is referenced throughout the data sheet as *Fusion GUI* and many sections include screen shots. The *Fusion GUI* can be downloaded from www.ti.com.

7.3.3 PMBus Interface

The PMBus is a serial interface specifically designed to support power management. It is based on the SMBus interface that is built on the I²C physical specification. The UCD90160A supports revision 1.1 of the PMBus standard. Wherever possible, standard PMBus commands are used to support the function of the device. For unique features of the UCD90160A, MFR_SPECIFIC commands are defined to configure or activate those features. These commands are defined in the UCD90xxx Sequencer and System Health Controller PMBUS Command Reference (SLVU352). The most current UCD90xxx PMBus Command Reference can be found within the TI Fusion Digital Power Designer software via the Help Menu (Help, Documentation & Help Center, Sequencers tab, Documentation section).

This document makes frequent mention of the PMBus specification. Specifically, this document is *PMBus Power System Management Protocol Specification Part II – Command Language*, Revision 1.1, dated 5 February 2007. The specification is published by the Power Management Bus Implementers Forum and is available from www.pmbus.org.

Copyright © 2016, Texas Instruments Incorporated



The UCD90160A is PMBus compliant, in accordance with the *Compliance* section of the PMBus specification. The firmware is also compliant with the SMBus 1.1 specification, including support for the SMBus ALERT function. The hardware can support either 100-kHz or 400-kHz PMBus operation.

7.4 Device Functional Modes

7.4.1 Power Supply Sequencing

The UCD90160A can control the turn-on and turn-off sequencing of up to 16 voltage rails by using a GPIO to set a power supply enable pin high or low. In PMBus-based designs, the system PMBus master can initiate a sequence-on event by asserting the PMBUS_CNTRL pin or by sending the OPERATION command over the I²C serial bus. In pin-based designs, the PMBUS_CNTRL pin can also be used to sequence-on and sequence-off.

The auto-enable setting ignores the OPERATION command and the PMBUS_CNTRL pin. Sequence-on is started at power up after any dependencies and time delays are met for each rail. A rail is considered to be on or within regulation when the measured voltage for that rail crosses the power-good on (POWER_GOOD_ON ⁽¹⁾) limit. The rail is still in regulation until the voltage drops below power-good off (POWER_GOOD_OFF). In the case that there isn't voltage monitoring set for a given rail, that rail is considered ON if it is commanded on (either by OPERATION command, PMBUS CNTRL pin, or auto-enable) and (TON_DELAY + TON_MAX_FAULT_LIMIT) time passes. Also, a rail is considered OFF if that rail is commanded OFF and (TOFF_DELAY + TOFF_MAX_WARN_LIMIT) time passes

7.4.1.1 Turn-on Sequencing

The following sequence-on options are supported for each rail:

- Monitor only do not sequence-on
- Fixed delay time (TON_DELAY) after an OPERATION command to turn on
- Fixed delay time after assertion of the PMBUS_CNTRL pin
- Fixed time after one or a group of parent rails achieves regulation (POWER_GOOD_ON)
- Fixed time after a designated GPI has reached a user-specified state
- · Fixed time after a designated GPO has reached a user-specified state
- Any combination of the previous options

The maximum TON_DELAY time is 3276 ms.

7.4.1.2 Turn-off Sequencing

The following sequence-off options are supported for each rail:


- Monitor only do not sequence-off
- Fixed delay time (TOFF_DELAY) after an OPERATION command to turn off
- Fixed delay time after deassertion of the PMBUS_CNTRL pin
- Fixed time after one or a group of parent rails drop below regulation (POWER_GOOD_OFF)
- Fixed delay time in response to an undervoltage, overvoltage, or max turn-on fault on the rail
- Fixed delay time in response to a fault on a different rail when set as a fault shutdown slave to the faulted rail
- Fixed delay time in response to a GPI reaching a user-specified state
- Fixed time after a designated GPO has reached a user-specified state
- Any combination of the previous options

The maximum TOFF_DELAY time is 3276 ms.


⁽¹⁾ In this document, configuration parameters such as Power Good On are referred to using Fusion GUI names. *The UCD90xxx Sequencer and System Health Controller PMBus Command Reference* name is shown in parentheses (POWER_GOOD_ON) the first time the parameter appears.



Device Functional Modes (continued)

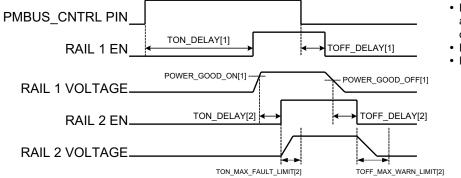

 - Rail 1 and Rail 2 are both sequenced "ON" and "OFF" by the PMBUS_CNTRL pin only
- Rail 2 has Rail 1 as an "ON" dependency
- Rail 1 has Rail 2 as an "OFF" dependency



7.4.1.3 Sequencing Configuration Options

In addition to the turn-on and turn-off sequencing options, the time between when a rail is enabled and when the monitored rail voltage must reach its power-good-on setting can be configured using max turn-on (TON_MAX_FAULT_LIMIT). Max turn-on can be set in 1-ms increments. A value of 0 ms means that there is no limit and the device can try to turn on the output voltage indefinitely.

Rails can be configured to turn off immediately or to sequence-off according to rail and GPI dependencies, and user-defined delay times. A sequenced shutdown is configured by selecting the appropriate rail and GPI dependencies, and turn-off delay (TOFF_DELAY) times for each rail. The turn-off delay times begin when the PMBUS_CNTRL pin is deasserted, when the PMBUS OPERATION command is used to give a soft-stop command, or when a fault occurs on a rail that has other rails set as fault-shutdown slaves.

Shutdowns on one rail can initiate shutdowns of other rails or controllers. In systems with multiple UCD90160As, it is possible for each controller to be both a master and a slave to another controller.

7.4.2 Pin-Selected Rail States

This feature allows with the use of up to 3 GPIs to enable and disable any rail. This is useful for implementing system low-power modes and the Advanced Configuration and Power Interface (ACPI) specification that is used for operating system directed power management in servers and PCs. In up to 8 system states, the power system designer can define which rails are on and which rails are off. If a new state is presented on the input pins, and a rail is required to change state, it does so with regard to its sequence-on or sequence-off dependencies.

The OPERATION command is modified when this function causes a rail to change its state. This means that the ON_OFF_CONFIG for a given rail must be set to use the OPERATION command for this function to have any effect on the rail state. The first three pins configured with the GPI_CONFIG command are used to select 1 of 8 system states. Whenever the device is reset, these pins are sampled and the system state, if enabled, are used to update each rail state. When selecting a new system state, changes to the status of the GPIs must not take longer than 1 microsecond. See the UCD90xxx Sequencer and System Health Controller PMBus Command Reference for complete configuration settings of PIN_SELECTED_RAIL_STATES.

GPI 2 State	GPI 1 State	GPI 0 State	System State				
NOT Asserted	Not Asserted	Not Asserted	0				
NOT Asserted	Not Asserted	Asserted	1				
NOT Asserted	Asserted	Not Asserted	2				
NOT Asserted	Asserted	Asserted	3				
Asserted	Not Asserted	Not Asserted	4				
Asserted	Not Asserted	Asserted	5				

Table 2. GPI Selection of System States

NSTRUMENTS

EXAS

GPI 2 State	GPI 1 State	GPI 0 State	System State
Asserted	Asserted	Not Asserted	6
Asserted	Asserted	Asserted	7


7.4.3 Voltage Monitoring

Up to 16 voltages can be monitored using the analog input pins. The input voltage range is 0 to 2.5 V for MON pins 1-6, 55-59, 62, and 63. Pins 50, 52, and 54 can measure down to 0.2 V.

The ADC operates continuously, requiring 3.89 μ s to convert a single analog input. Each rail is sampled by the sequencing and monitoring algorithm every 400 μ s. The maximum source impedance of any sampled voltage should be less than 4 k Ω . The source impedance limit is particularly important when a resistor-divider network is used to lower the voltage applied to the analog input pins.

MON1 - MON6 can be configured using digital hardware comparators, which can be used to achieve faster fault responses. Each hardware comparator has four thresholds (two UV (Fault and Warning) and two OV (Fault and Warning)). The hardware comparators respond to UV or OV conditions in about 80 μ s (faster than 400 μ s for the ADC inputs) and can be used to disable rails or assert GPOs. The only fault response available for the hardware comparators is to shut down immediately.

An internal 2.5-V reference is used by the ADC. The ADC reference has a tolerance of $\pm 0.5\%$ between 0°C and 125°C and a tolerance of $\pm 1\%$ between -40°C and 125°C. An external voltage divider is required for monitoring voltages higher than 2.5 V. The nominal rail voltage and the external scale factor can be entered into the *Fusion GUI* and are used to report the actual voltage being monitored instead of the ADC input voltage. The nominal voltage is used to set the range and precision of the reported voltage according to Table 3.

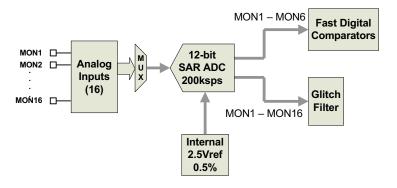

-	_
VOLTAGE RANGE (V)	RESOLUTION (mV)
0 to 127.99609	3.90625
0 to 63.99805	1.95313
0 to 31.99902	0.97656
0 to 15.99951	0.48824
0 to 7.99976	0.24414
0 to 3.99988	0.12207
0 to 1.99994	0.06104
0 to 0.99997	0.03052

Table 3. Voltage Range and Resolution




Although the monitor results can be reported with a resolution of about 15 μ V, the real conversion resolution of 610 μ V is fixed by the 2.5-V reference and the 12-bit ADC.

7.4.4 Fault Responses and Alert Processing

The UCD90160A monitors whether the rail stays within a window of normal operation. There are two programmable warning levels (under and over) and two programmable fault levels (under and over). When any monitored voltage goes outside of the warning or fault window, the PMBALERT# pin is asserted immediately, and the appropriate bits are set in the PMBus status registers (see Figure 9). Detailed descriptions of the status registers are provided in the UCD90xxx Sequencer and System Health Controller PMBus Command Reference and the PMBus Specification.

A programmable glitch filter can be enabled or disabled for each MON input. A glitch filter for an input defined as a voltage can be set between 0 and 102 ms with 400- μ s resolution. The glitch filter only applies to fault responses; a fault condition that is filtered by the glitch filter will still be recorded in the fault log.

Fault-response decisions are based on results from the 12-bit ADC. The device cycles through the ADC results and compares them against the programmed limits. The time to respond to an individual event is determined by when the event occurs within the ADC conversion cycle and the selected fault response.

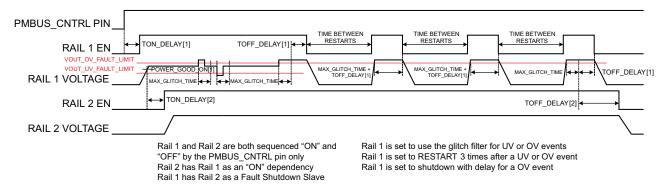

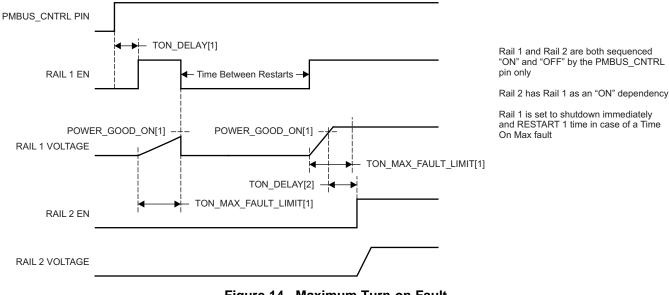


Figure 13. Sequencing and Fault-Response Timing

The configurable fault limits are:

- TON_MAX_FAULT Flagged if a rail that is enabled does not reach the POWER_GOOD_ON limit within the configured time
- VOUT_UV_WARN Flagged if a voltage rail drops below the specified UV warning limit after reaching the POWER_GOOD_ON setting
- **VOUT_UV_FAULT** Flagged if a rail drops below the specified UV fault limit after reaching the POWER_GOOD_ON setting
- VOUT_OV_WARN Flagged if a rail exceeds the specified OV warning limit at any time during startup or operation
- VOUT_OV_FAULT Flagged if a rail exceeds the specified OV fault limit at any time during startup or operation
- **TOFF_MAX_WARN** Flagged if a rail that is commanded to shut down does not reach 12.5% of the nominal rail voltage within the configured time

Faults are more serious than warnings. The PMBALERT# pin is always asserted immediately if a warning or fault occurs. If a warning occurs, the following takes place:

Warning Actions

- Immediately assert the PMBALERT# pin
- Status bit is flagged
- Assert a GPIO pin (optional)
- Warnings are not logged to flash

A number of fault response options can be chosen from:

Fault Responses

- Continue Without Interruption: Flag the fault and take no action
- Shut Down Immediately: Shut down the faulted rail immediately
- Shut Down using TOFF_DELAY: If a fault occurs on a rail, schedule the shutdown of this rail and all fault-shutdown slaves. All selected rails, including the faulty rail, are sequenced off according to their sequence-off dependencies and T_OFF_DELAY times.

Restart

- Do Not Restart: Do not attempt to restart a faulted rail after it has been shut down.
- Restart Up To N Times: Attempt to restart a faulted rail up to 14 times after it has been shut down. The time between restarts is measured between when the rail enable pin is deasserted (after any glitch filtering and turn-off delay times, if configured to observe them) and then reasserted. It can be set between 0 and 1275 ms in 5-ms increments. Under voltage faults only have a maximum of 1 restart as an option.
- Restart Continuously: Same as Restart Up To N Times except that the device continues to restart until the fault goes away, it is commanded off by the specified combination of PMBus OPERATION command and PMBUS_CNTRL pin status, the device is reset, or power is removed from the device. This option is not available for under voltage faults.
- Shut Down Rails and Sequence On (Re-sequence): Shut down selected rails immediately or after continue-operation time is reached and then sequence-on those rails using sequence-on dependencies and T_ON_DELAY times.

One GPI pin can also trigger faults if the GPI Fault Enable checkbox in Figure 19 is checked and proper responses are set in Figure 20. Refer to *GPI Special Functions* for more details.



7.4.5 Shut Down All Rails and Sequence On (Resequence)

In response to a fault, or a RESEQUENCE command, the UCD90160A can be configured to turn off a set of rails and then sequence them back on. To sequence all rails in the system, then all rails must be selected as faultshutdown slaves of the faulted rail. The rails designated as fault-shutdown slaves initiate soft shutdowns regardless of whether the faulted rail is set to stop immediately or stop with delay. Shut-down-all-rails and sequence-on are not performed until retries are exhausted for a given fault.

While waiting for the rails to turn off, an error is reported if any of the rails reaches its *TOFF_MAX_WARN_LIMIT*. There is a configurable option to continue with the resequencing operation if this occurs. After the faulted rail and fault-shutdown slaves sequence-off, the UCD90160A waits for a programmable delay time between 0 and 1275 ms in increments of 5 ms and then sequences-on the faulted rail and fault-shutdown slaves according to the start-up sequence configuration. This is repeated until the faulted rail and fault-shutdown slaves successfully achieve regulation or for a user-selected 1, 2, 3, or 4 times. If the resequence operation is successful, the resequence counter is reset if all of the rails that were resequenced maintain normal operation for one second.

Once shut-down-all-rails and sequence-on begin, any faults on the fault-shutdown slave rails are ignored. If there are two or more simultaneous faults with different fault-shutdown slaves, the more conservative action is taken. For example, if a set of rails is already on its second resequence and the device is configured to resequence three times, and another set of rails enters the resequence state, that second set of rails is only resequenced once. Another example – if one set of rails is waiting for all of its rails to shut down so that it can resequence, and another set of rails enters the resequence state, the device now waits for all rails from both sets to shut down before resequencing.

If any rails at resequence state are caused by a GPI fault response, the whole resequence is suspended until the GPI fault is clear.

7.4.6 GPIOs

The UCD90160A has 22 GPIO pins that can function as either inputs or outputs. Each GPIO has configurable output mode options including open-drain or push-pull outputs that can be actively driven to 3.3 V or ground. There are an additional four pins that can be used as either inputs or PWM outputs but not as GPOs. Table 4 lists possible uses for the GPIO pins and the maximum number of each type for each use. GPIO pins can be dependents in sequencing and alarm processing. They can also be used for system-level functions such as external interrupts, power-goods, resets, or for the cascading of multiple devices. GPOs can be sequenced up or down by configuring a rail without a MON pin but with a GPIO set as an enable.

PIN NAME	PIN	RAIL EN (16 MAX)	GPI (8 MAX)	GPO (16 MAX)	PWM OUT (12 MAX)	MARGIN PWM (10 MAX)
FPWM1/GPIO5	17	Х	Х	Х	Х	Х
FPWM2/GPIO6	18	Х	Х	Х	Х	Х
FPWM3/GPIO7	19	Х	Х	Х	Х	Х
FPWM4/GPIO8	20	Х	Х	Х	Х	Х
FPWM5/GPIO9	21	Х	Х	Х	Х	Х
FPWM6/GPIO10	22	Х	Х	Х	Х	Х
FPWM7/GPIO11	23	Х	Х	Х	Х	Х
FPWM8/GPIO12	24	Х	Х	Х	Х	Х
GPI1/PWM1	31		Х		Х	
GPI2/PWM2	32		Х		Х	
GPI3/PWM3	42		Х		Х	Х
GPI4/PWM4	41		Х		Х	Х
GPIO1	11	Х	Х	Х		
GPIO2	12	Х	Х	Х		
GPIO3	13	Х	Х	Х		
GPIO4	14	Х	Х	Х		
GPIO13	25	х	Х	Х		
GPIO14	29	х	Х	Х		
GPIO15	30	Х	Х	Х		

Table 4. GPIO Pin Configuration Options

Copyright © 2016, Texas Instruments Incorporated

TEXAS INSTRUMENTS

www.ti.com

PIN NAME	PIN	RAIL EN (16 MAX)	GPI (8 MAX)	GPO (16 MAX)	PWM OUT (12 MAX)	MARGIN PWM (10 MAX)
GPIO16	33	Х	Х	Х		
GPIO17	34	Х	Х	Х		
GPIO18	35	Х	Х	Х		
TCK/GPIO19	36	х	Х	Х		
TDO/GPIO20	37	Х	Х	Х		
TDI/GPIO21	38	Х	Х	Х		
TMS/GPIO22	39	Х	Х	Х		

Table 4. GPIO Pin Configuration Options (continued)

7.4.7 GPO Control

The GPIOs when configured as outputs can be controlled by PMBus commands or through logic defined in internal Boolean function blocks. Controlling GPOs by PMBus commands (GPIO_SELECT and GPIO_CONFIG) can be used to have control over LEDs, enable switches, etc. with the use of an I2C interface. See the UCD90xxx Sequencer and System Health Controller PMBus Command Reference for details on controlling a GPO using PMBus commands.

7.4.8 GPO Dependencies

GPIOs can be configured as outputs that are based on Boolean combinations of up to two ANDs, all ORed together (Figure 15). Inputs to the logic blocks can include the first 8 defined GPOs, GPIs and rail-status flags. One rail status type is selectable as an input for each AND gate in a Boolean block. For a selected rail status, the status flags of all active rails can be included as inputs to the AND gate. *_LATCH* rail-status types stay asserted until cleared by a MFR PMBus command or by a specially configured GPI pin. The different rail-status types are shown in Table 5. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* for complete definitions of rail-status types. The GPO response can be configured to have a delayed assertion or deassertion. The first 8 GPOs can be chosen as Rail Sequence on/off Dependency. The logic state of the GPO instead of actual pin output is used as dependency condition.

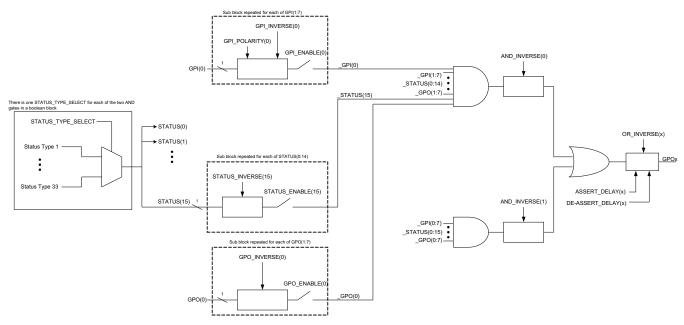


Figure 15. Boolean Logic Combinations



👆 GPO Config - UCD90160 @ Address 101		
AND Path #1 No GPIs, rails, or fans have been added to this AND path. Click the Configure link to edit.	<u>Configure</u>	Citek to change gate A+B
AND Path #2 No GPIs, rails, or fans have been added to this AND path. Click the	<u>Configure</u>	Logic GPO #1 (Pin 200)
Configure link to edit.		Enable State Machine Mode
		Delay Time: 0.0 ☆ msec Delay when Asserting
		Delay when De-asserting
		Polarity: Output Mode: Active Low Actively Driven
		Active High Open-Drain
		Note: FPWM pins are driven low out of device RESET. Please consider this when selecting the polarity of this FPWM pin as anything other than Active High.
	ОК)

Figure 16. Fusion Boolean Logic Builder

Rail-Status Types		
POWER_GOOD	TON_MAX_FAULT	VOUT_UV_WARN_LATCH
MARGIN_EN	TOFF_MAX_WARN	VOUT_UV_FAULT_LATCH
MRG_LOW_nHIGH	SEQ_ON_TIMEOUT	TON_MAX_FAULT_LATCH
VOUT_OV_FAULT	SEQ_OFF_TIMEOUT	TOFF_MAX_WARN_LATCH
VOUT_OV_WARN	SYSTEM_WATCHDOG_TIMEOUT	SEQ_ON_TIMEOUT_LATCH
VOUT_UV_WARN	VOUT_OV_FAULT_LATCH	SEQ_OFF_TIMEOUT_LATCH
VOUT_UV_FAULT	VOUT_OV_WARN_LATCH	SYSTEM_WATCHDOG_TIMEOUT_LATCH

When GPO is set to POWER_GOOD, this POWER_GOOD state is based on the actual voltage measurement on the monitor pins assigned to those rails. For a rail that does not have a monitor pin, or have a monitor pin but without voltage monitoring, its POWER_GOOD state is used by sequencing purpose only, and is not be used by the GPO logic evaluation.

7.4.8.1 GPO Delays

The GPOs can be configured so that they manifest a change in logic with a delay on assertion, deassertion, both or none. GPO behavior using delays have different effects depending if the logic change occurs at a faster rate than the delay. On a normal delay configuration, if the logic for a GPO changes to a state and reverts back to previous state within the time of a delay then the GPO does not manifest the change of state on the pin. In Figure 17 the GPO is set so that it follows the GPI with a 3-ms delay at assertion and also at de-assertion. When the GPI first changes to high logic state, the state is maintained for a time longer than the delay allowing the GPO to follow with appropriate logic state. The same goes for when the GPI returns to its previous low logic state. The second time that the GPI changes to a high logic state it returns to low logic state before the delay time expires. In this case the GPO does not change state. A delay configured in this manner serves as a glitch filter for the GPO.



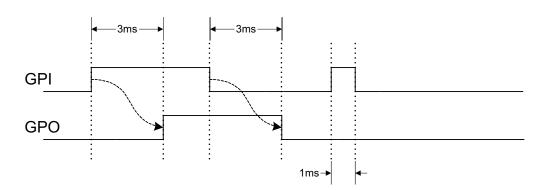


Figure 17. GPO Behavior When Not Ignoring Inputs During Delay

The *Ignore Input During Delay* bit allows to output a change in GPO even if it occurs for a time shorter than the delay. This configuration setting has the GPO ignore any activity from the triggering event until the delay expires. Figure 18 represents the two cases for when ignoring the inputs during a delay. In the case in which the logic changes occur with more time than the delay, the GPO signal looks the same as if the input was not ignored. Then on a GPI pulse shorter than the delay the GPO still changes state. Any pulse that occurs on the GPO when having the *Ignore Input During Delay* bit set has a width of at least the time delay.

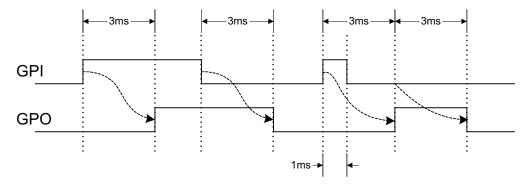


Figure 18. GPO Behavior When Ignoring Inputs During Delay

7.4.8.2 State Machine Mode Enable

When this bit within the GPO_CONFIG command is set, only one of the AND path will be used at a given time. When the GPO logic result is currently TRUE, AND path 0 will be used until the result becomes FALSE. When the GPO logic result is currently FALSE, AND path 1 will be used until the result becomes TRUE. This provides a very simple state machine and allows for more complex logical combinations.



7.4.9 GPI Special Functions

Special input functions for which GPIs can be used. There can be no more than one pin assigned to each of these functions.

- GPI Fault Enable When set, the de-assertion of the GPI is treated as a fault.
- Latched Statuses Clear Source When a GPO uses a latched status type (_LATCH), a correctly configured GPI clears the latched status.
- Input Source for Margin Enable When this pin is asserted, all rails with margining enabled will be put in a margined state (low or high).
- Input Source for Margin Low/Not-High When this pin is asserted all margined rails will be set to Margin Low as long as the Margin Enable is asserted. When this pin is de-asserted the rails will be set to Margin High.
- Fault Shutdown Rails See Fault Shutdown Rails.
- Configured as Sequencing Debug Pin See Configured as Sequencing Debug Pin.
- Configured as Fault Pin See Configured as Sequencing Debug Pin.
- Enable Cold Boot Mode See Cold Boot Mode Enable.

The polarity of GPI pins can be configured to be either Active Low or Active High. The first 3 GPIs that are defined regardless of their main purpose will be used for the PIN_SELECTED_RAIL_STATES command.

UCD90160A

SLVSDD4-SEPTEMBER 2016



×	
GPI Polarity: Note: Polari	ty defines output unlines lowed where the
Active Low logic e	ty defines output voltage level when the evaluation result is TRUE(active). In
- open-	drain mode, High-level output means utput pin is in Hi-Z state; a pull-up
	or is required to make the output level
GPI Fault Enable	
fault and can shutdown rai	e-assertion of the GPI is treated as ils if together either "Fault Shutdown
Rails" or "Fault Pin" bit is al	
 Latched Statuses Clear So When a GPO uses a latche 	urce d status type (_LATCH) , you can
configure a GPI that will de	ear the latched status.
Input Source for Margin En When the Margin Enable ni	able in is asserted, this pin determines if the
margined state is low or high	
Input Source for Margin Lo	
When this pin is asserted, put in a margined state (lo	all rails with margining enabled will be w or high).
Fault Shutdown rails	
	Fault Enable bit are set, the treated as fault and can be used to
	o the below Fault Responses setting
How device responses to GP	
Max glitch time:	0.0 👻 ms
Resequence: Disabled; Glitch Ignore; Restart: N/A	filter: Disabled; Response: <u>Edit</u>
When pin has fault, will shut	down these rails:
🗌 Rail 01 📃 Rail 02	🗌 Rail 03 📄 Rail 04
🗌 Rail 05 📃 Rail 06	🗌 Rail 07 📃 Rail 08
🗌 Rail 09 📃 Rail 10	Rail 11 Rail 12
🗌 Rail 13 📃 Rail 14	
Configured as Sequencing I Input pin can be used to pu	Debug Pin ut device in Debug Mode. If pin is
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invalid Command, PEC used for debugging purpos	Debug Pin
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, no any faults (excluding fault as Invalid Command, PEC F	Debug Pin ut device in Debug Mode. If pin is levice shall not assert PMBus Alert pin tresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin to response to any faults, and not log reported in STATUS_CML register such "ault, etc.). This function is mainly se only. It is not recommended in the
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as	Debug Pin ut device in Debug Mode. If pin is levice shall not assert PMBus Alert pin tresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as	Debug Pin ut device in Debug Mode. If pin is levice shall not assert PMBus Alert pin to response to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly se only. It is not recommended in the fault-influenced outputs. The state of
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin st response to any faults, and not log reported in STATUS_CML register such "ault, etc.). This function is mainly is only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invalid Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as the output is determined by	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin st response to any faults, and not log reported in STATUS_CML register such "ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails will output signal on pin:
Configured as Sequencing D Input pin can be used to pu selected and is asserted, d for any faults/warnings, ne any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rais have fault of	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin st response to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: Rail 03 Rail 04
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rais have fault v Rail 01 Rail 02 R	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin st response to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vill output signal on pin: Rail 03 Rail 04 Rail 07 Rail 08
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, y Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14	Debug Pin It device in Debug Mode. If pin is levice shall not assert PMBus Alert pin yt response to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: Rail 03 Rail 04 Rail 07 Rail 08 Rail 11 Rail 12 Rail 15 Rail 16
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rais have fault, v Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to In	Debug Pin It device in Debug Mode. If pin is levice shall not assert PMBus Alert pin yt response to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: Rail 03 Rail 04 Rail 07 Rail 08 Rail 11 Rail 12 Rail 15 Rail 16 put publick low:
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Inp Max glitch time:	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin:
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rais have fault, v Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to In	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin:
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault. v Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Inp Max glitch time: Resequence: Disabled; Gitch	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin:
Configured as Sequencing I Input pin can be used to pu selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Inp Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly are only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vialt, etc.). This function ensure i and the state of y any faults occured on selected rails vialt etc.). This function is mainly i and faults occured on selected rails vialt etc.). This function is mainly i and faults occured on selected rails vialt etc.). This fault is not recommended in the i and faults occured on selected rails vialt output signal on pin i and fault is and fa
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure this input pin as the output is determined b When these rais have fault. Y Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shudd	Debug Pin It device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly te only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails will output stand on pin:
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as the output is determined b When these rais have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 01 Rail 02 Rail 01 Rail 02 Rail 01 Rail 02 Rail 03 Rail 04 Rail 01 Rail 02 Rail 01 Rail 02 Rail 03 Rail 04 Comments Rail Rail 04 Comments Rail 04 Comments Rail 04 Comments Rail 04 Rail 01 Rail 04 Rail 01 Rail 04 Rail	Debug Pin It device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly the only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails will output stand on pin:
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configured as Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 03 Rail 04 Rail 01 Rail 02 Rail 04 Rail 04 Rail 01 Rail 02 Rail 05 Rail	Debug Pin It device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such ault, etc.). This function is mainly the only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails will output stand on pin:
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 02 Rail 05 Rail 09 Rail 10 Rail 00 Rail 10 Rail 09 Rail 10 Rail 00 Rail 10 Rail 00 Rail 10 Rail 00 Rail 10 Rail 00 Rail 10 Rail 10 Rail 10 Rail 10 Rail 10 Rail 00 Rail	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log preported in STATUS_CML register such ault, etc.). This function is mainly is only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: : Rail 03 : Rail 07 : Rail 12 : Rail 15 : Rail 16 : Rail 16 : Rail 16 : Rail 17 : Rail 18 : Rail 19 : Rail 10 : Rail 12 : Rail 03 : Rail 04 </td
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 03 Rail 04 Rail 01 Rail 02 Rail 04 Rail 04 Rail 01 Rail 02 Rail 05 Rail 04 Rail 05 Rail	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log preported in STATUS_CML register such ault, etc.). This function is mainly is only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: : Rail 03 : Rail 07 : Rail 12 : Rail 15 : Rail 16 : Rail 16 : Rail 16 : Rail 17 : Rail 18 : Rail 19 : Rail 10 : Rail 12 : Rail 03 : Rail 04 </td
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 02 Rail 05 Rail 09 Rail 10 Rail 00 Rail 10 Rail 09 Rail 10 Rail 09 Rail 10 Rail 00 Rail 10 Rail 00 Rail 10 Rail 00 Rail 10 Rail 10 Rail 10 Rail 10 Rail 10 Rail 00 Rail	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log preported in STATUS_CML register such ault, etc.). This function is mainly is only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: : Rail 03 : Rail 07 : Rail 12 : Rail 15 : Rail 16 : Rail 16 : Rail 16 : Rail 17 : Rail 18 : Rail 19 : Rail 10 : Rail 12 : Rail 03 : Rail 04 </td
Configured as Sequencing I Input pin can be used to p selected and is asserted, d for any faults/warnings, nc any faults (excluding fault as Invaild Command, PEC F used for debugging purpos final production Configure das Fault Pin Configure das Fault Pin Configure this input pin as the output is determined b When these rails have fault, y Rail 01 Rail 02 Rail 03 Rail 04 Rail 03 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore; Restart: N/A When pin has fault will shudd Rail 01 Rail 02 Rail 03 Rail 04 Rail 01 Rail 04 Rail 01 Rail 04 Rail 03 Rail 04 Rail 03 Rail 04 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 05 Rail 04 Rail 04 Rail 04 Rail 04 Rail 05 Rail	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log preported in STATUS_CML register such ault, etc.). This function is mainly is only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails vil output signal on pin: : Rail 03 : Rail 07 : Rail 12 : Rail 15 : Rail 16 : Rail 16 : Rail 16 : Rail 17 : Rail 18 : Rail 19 : Rail 10 : Rail 12 : Rail 03 : Rail 04 </td
Configured as Sequencing I Input pin can be used to pu- selected and is asserted, di- for any faults/warnings, nc any faults (excluding fault as Invaild Command, PECF used for debugging purpose final production Configured as Fault Pin Configure this input pin as the output is determined by When these rails have fault, w Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 13 Rail 14 How device responses to Im Max glitch time: Resequence: Disabled; Gitch Ignore: Restart: N/A When pin has fault will shutd Rail 01 Rail 02 Rail 05 Rail 06 Rail 09 Rail 10 Rail 07 Rail 02 Rail 08 Rail 08 Rail 09 Rail 10 Rail 09 Rail 10 Rail 13 Rail 14 When pin has fault will shutd Rail 09 Rail 10 Rail 13 Rail 14 Fable Cold Boot Mode	Debug Pin at device in Debug Mode. If pin is levice shall not assert PMBus Alert pin stresponse to any faults, and not log reported in STATUS_CML register such aut, etc.). This function is mainly are only. It is not recommended in the fault-influenced outputs. The state of y any faults occured on selected rails yany faults occured on selected rails vil output stone on selected rails vis output stone on selected rails output stone on selected rails vis output stone on selected rails e ari 11 ari 12 output stone on selected rails e ari 13 <

Figure 19. GPI Configurations



7.4.9.1 Fault Shutdown Rails

GPI Fault Enable must be set to enable this feature. When set, the de-assert of the assigned GPI trigger a number of fault response options (see Figure 20). Retry action is not supported.

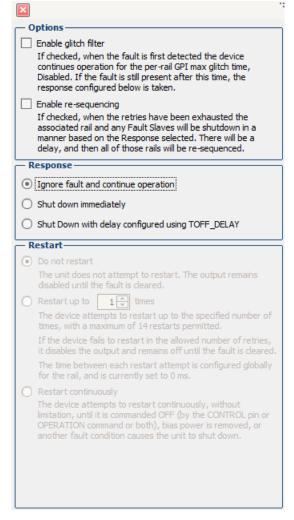


Figure 20. GPI Fault Response

UCD90160A

SLVSDD4-SEPTEMBER 2016

ÈXAS

NSTRUMENTS

7.4.9.2 Configured as Sequencing Debug Pin

When the pin is asserted, device does not alert PMBUS_Alert pin, not response for faults, log faults defined in the Table 6. The rail sequence on/off dependency conditions are ignored, as soon as the sequence on/off timeout is expired, the rails will be sequenced on or off accordingly regardless of the timeout action, if the sequence on/off timeout value is set to 0, the rails is sequenced on or off immediately. The fault pins do not pull the fault bus low. The LGPOs affected by these events should be back to it original states.

, , , , , , , , , , , , , , , , , , , ,		
EVENTS	DESCRIPTION	
VOUT_OV_FAULT	Voltage Rail is over OV fault threshold	
VOUT_OV_WARNING	Voltage Rail is over OV warning threshold	
VOUT_UV_FAULT	Voltage Rail is under UV fault threshold	
VOUT_UV_WARNING	Voltage Rail is under UV warning threshold	
TON_MAX	Voltage Rail fails to reach power good threshold in predefined period	
TOFF_MAX Warning	Voltage rail fails to reach power not good threshold in predefined period	
All GPI deasserted	No logging, no fault responses, but the function of the GPI is not ignored.	
SYSTEM_WATCHDOG_TIMEOUT	System watch timeout	
RESEQUENCE_ERROR	Rail fails to resequence	
SEQ_ON_TIMEOUT	Rail fails to meeting sequence on dependency in predefined period	
SEQ_OFF_TIMEOUT	Rail fails to meeting sequence on dependency in predefined period	
SLAVE_FAULT	Rail is shut down due to that its master has fault	

Table 6. List of Events Affected by Debug Mode

7.4.9.3 Configured as Fault Pin

GPI Fault Enable must be set to enable this feature. When set, if there is no fault on a Fault Bus, the Fault Pin is digital input pin and listen to the Fault Bus. When one or multiple UCD90160A devices detect a rail fault (see Table 7), the corresponding Fault Pin is turned into active driven low state, pulling down the Fault Bus and informing all other UCD90160A devices of the corresponding fault. This way, a coordinated action can be taken across multiple devices. After the fault is cleared, the state of the Fault Pin is turned back to an input pin.

Table 7. Events Affecting Fault Pin

EVENTS	DESCRIPTION
RESEQUENCE_ERROR	Rail fails to resequence
SEQ_ON_TIMEOUT	Rail fails to meeting sequence on dependency in predefined period
SEQ_OFF_TIMEOUT	Rail fails to meeting sequence on dependency in predefined period
VOUT_UV_FAULT	Voltage rail is under UV threshold
VOUT_OV_FAULT	Voltage rail is over OV threshold
TON_MAX_FAULT	Voltage rail fails to reach power good threshold in predefined period.



7.4.9.4 Cold Boot Mode Enable

Cold boot mode is used to heat-up a system by turning on cold boot rails for certain amounts of time when it is under an extreme code temperature. UCD device is communicated with the system via particular GPI (thermal state GPI) which is output from a thermal device. Cold boot mode is only entering once per UCD reset. There is no system watch dog Reset during the cold boot mode.

Device reads the thermal state GPI to determine whether it should start cold boot or not when it is out of reset. When the input of thermal state GPI is DE-ASSERTED, device enters cold boot mode and log the GPI fault if the GPI fault log enable bit is set, otherwise device enters normal mode. The following changes on the thermal state GPI do not introduce any logging. Only one GPI can be assigned for this function and one it is assigned, it cannot be used for any other GPI functions.

The rails used in the cold boot mode are configurable. For those rails with Sequence On Dependency on the thermal state GPI, they (non-cold boot rails) are not powered-up during the cold boot since the dependency is not met. But non-cold boot rails will be power-on under normal mode since thermal state GPI is treated as ASSERTED when cold boot mode is over. For those rails without sequence on dependency on the thermal state GPI, they (cold boot rails) are power-on under both cold boot and normal mode. It is application's responsibility to set the proper ON_OFF_CONFIG for those cold boot mode. Cold boot rails are not power-on if their ON_OFF_CONFIG settings are not met under cold boot mode. Cold boot mode timeout is used to tell how long the device shall stay at the cold boot before it stops monitoring the thermal state GPI and shutdown all cold boot rails with EN control. Normal Boot Start Delay is used to tell how long device should wait to ramp up the powers after all cold boot rails with EN are below POWER_GOOD_OFF.

If system temperature is < threshold degree C (Thermal State GPI)

Yes(DE_ASSERTED):
Log GPI fault
Start Cold Boot Timeout
No System Watchdog output
Ramp up the power supplies based on ON_OFF_CONFIG
Wait for thermal state GPI ASSERTED OR "Cold Boot Mode Timeout expired"
Disable the thermostat input listening mode
Force to shutdown down all cold boot rails with EN control immediately
Wait all cold boot rails with EN control below POWER_GOOD_OFF
Start and Wait "Normal boot Start Delay expired"

Disable the thermostat input listening mode
Treated Thermal State GPI as ASSERTED
Ramp up power supplies based on ON_OFF_CONFIG

7.4.10 Power Supply Enables

Each GPIO can be configured as a rail-enable pin with either active-low or active-high polarity. Output mode options include open-drain or push-pull outputs that can be actively driven to 3.3 V or ground. During reset, the GPIO pins are high-impedance except for FPWM/GPIO pins 17 to 24, which are driven low. External pulldown or pullup resistors can be tied to the enable pins to hold the power supplies off during reset. The UCD90160A can support a maximum of 16 enable pins.

NOTE

GPIO pins that have FPWM capability (pins 17 to 24) should only be used as power supply enable signals if the signal is active high.

7.4.11 Cascading Multiple Devices

A GPIO pin can be used to coordinate multiple controllers by using it as a power good-output from one device and connecting it to the PMBUS_CNTRL input pin of another. This imposes a master/slave relationship among multiple devices. During startup, the slave controllers initiate their start sequences after the master has completed its start sequence and all rails have reached regulation voltages. During shutdown, as soon as the master starts to sequence-off, it sends the shut-down signal to its slaves.

A shutdown on one or more of the master rails can initiate shutdowns of the slave devices. The master shutdowns can be initiated intentionally or by a fault condition. This method works to coordinate multiple controllers, but it does not enforce interdependency between rails within a single controller.

Another method to cascade multiple devices is to connect the power-good output of the first device to a MON pin of the second device; connect the power-good output of the second device to a MON pin of the third device, and so on. Optionally, connect the power-good output of the last device to a MON pin of the first device. The rails controlled by a device have dependency on the previous device's power-good output. This way, the rails controlled by multiple devices can be sequenced. Also, the de-assertion of a power-good output can trigger a UV fault of the next device. The UV fault response can be configured to shut down other rails controlled by the same device. This way, when one rail has fault shutdown, other rails controlled by other devices can be shut down accordingly.

The PMBus specification implies that the power-good signal is active when ALL the rails in a controller are regulating at their programmed voltage. The UCD90160A allows GPIOs to be configured to respond to a desired subset of power-good signals.

Multiple UCD90160A devices can also work together and coordinate when faults happen with fault pin connection. One GPI pins can be configured as Fault Pins. Fault Pin is connected to a Fault Bus. Each Fault Bus is pulled up to 3.3 V by a $10\text{-}k\Omega$ resistor. All the UCD90160A devices on the same Fault Bus are informed of the same fault condition. An example of Fault Pin connections is shown in Figure 21.

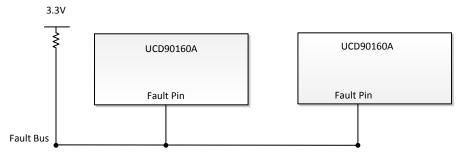


Figure 21. Fault Pin Connections



7.4.12 PWM Outputs

7.4.12.1 FPWM1-8

Pins 17–24 can be configured as fast pulse-width modulators (FPWMs). The frequency range is 15.260 kHz to 125 MHz. FPWMs can be configured as closed-loop margining outputs, fan controllers or general-purpose PWMs.

Any FPWM pin not used as a PWM output can be configured as a GPIO. One FPWM in a pair can be used as a PWM output and the other pin can be used as a GPO. The FPWM pins are actively driven low from reset when used as GPOs.

The frequency settings for the FPWMs apply to pairs of pins:

- FPWM1 and FPWM2 same frequency
- FPWM3 and FPWM4 same frequency
- FPWM5 and FPWM6 same frequency
- FPWM7 and FPWM8 same frequency

If an FPWM pin from a pair is not used while its companion is set up to function as a PWM, it is recommended to configure the unused FPWM pin as an active-low open-drain GPO so that it does not disturb the rest of the system. By setting an FPWM, it automatically enables the other FPWM within the pair if it was not configured for any other functionality.

The frequency for the FPWM is derived by dividing down a 250MHz clock. To determine the actual frequency to which an FPWM can be set, must divide 250MHz by any integer between 2 and (2¹⁴-1).

The FPWM duty cycle resolution is dependent on the frequency set for a given FPWM. Once the frequency is known the duty cycle resolution can be calculated as Equation 1.

Change per Step (%)_{FPWM} = frequency \div (250 × 10⁶ × 16)

(1)

Take for an example determining the actual frequency and the duty cycle resolution for a 75MHz target frequency.

- 1. Divide 250 MHz by 75 MHz to obtain 3.33.
- 2. Round off 3.33 to obtain an integer of 3.
- 3. Divide 250MHz by 3 to obtain actual closest frequency of 83.333MHz.
- 4. Use Equation 1 to determine duty cycle resolution to obtain 2.0833% duty cycle resolution.

7.4.12.2 PWM1-4

Pins 31, 32, 41, and 42 can be used as GPIs or PWM outputs.

If configured as PWM outputs, then limitations apply:

- PWM1 has a fixed frequency of 10 kHz
- PWM2 has a fixed frequency of 1 kHz
- PWM3 and PWM4 frequencies can be 0.93 Hz to 7.8125 MHz.

The frequency for PWM3 and PWM4 is derived by dividing down a 15.625-MHz clock. To determine the actual frequency to which these PWMs can be set, must divide 15.625 MHz by any integer between 2 and $(2^{24} - 1)$. The duty cycle resolution will be dependent on the set frequency for PWM3 and PWM4.

The PWM3 or PWM4 duty cycle resolution is dependent on the frequency set for the given PWM. Once the frequency is known the duty cycle resolution can be calculated as Equation 2.

Change per Step (%)_{PWM3/4} = frequency \div (15.625 × 10⁶) × 100

(2)

To determine the closest frequency to 1 MHz that PWM3 can be set to calculate as the following:

- 1. Divide 15.625 MHz by 1 MHz to obtain 15.625.
- 2. Round off 15.625 to obtain an integer of 16.
- 3. Divide 15.625 MHz by 16 to obtain actual closest frequency of 976.563 kHz.
- 4. Use Equation 2 to determine duty cycle resolution to obtain 6.25% duty cycle resolution.

All frequencies below 238 Hz will have a duty cycle resolution of 0.0015%.

UCD90160A SLVSDD4-SEPTEMBER 2016

7.4.13 Programmable Multiphase PWMs

The FPWMs can be aligned with reference to their phase. The phase for each FPWM is configurable from 0° to 360°. This provides flexibility in PWM-based applications such as power supply controller, digital clock generation, and others. See an example of four FPWMs programmed to have phases at 0°, 90°, 180°, and 270° (Figure 22).

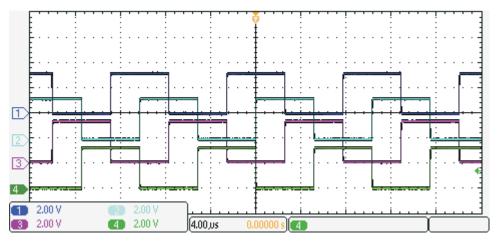


Figure 22. Multiphase PWMs


7.4.14 Margining

Margining is used in product validation testing to verify that the complete system works properly over all conditions, including minimum and maximum power supply voltages, load range, ambient temperature range, and other relevant parameter variations. Margining can be controlled over PMBus using the OPERATION command or by configuring two GPIO pins as margin-EN and margin-UP/DOWN inputs. The MARGIN_CONFIG command in the UCD90xxx Sequencer and System Health Controller PMBus Command Reference describes different available margining options, including ignoring faults while margining and using closed-loop margining to trim the power supply output voltage one time at power up.

7.4.14.1 Open-Loop Margining

Open-loop margining is done by connecting a power supply feedback node to ground through one resistor and to the margined power supply output (V_{OUT}) through another resistor. The power supply regulation loop responds to the change in feedback node voltage by increasing or decreasing the power supply output voltage to return the feedback voltage to the original value. The voltage change is determined by the fixed resistor values and the voltage at V_{OUT} and ground. Two GPIO pins must be configured as open-drain outputs for connecting resistors from the feedback node of each power supply to V_{OUT} or ground.



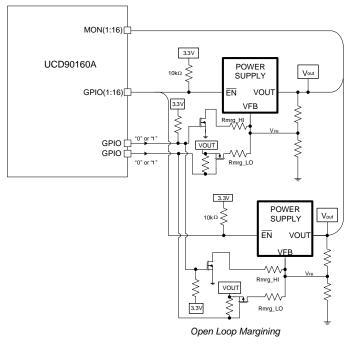

Copyright © 2016, Texas Instruments Incorporated


Figure 23. Open-Loop Margining

7.4.14.2 Closed-Loop Margining

Closed-loop margining uses a PWM or FPWM output for each power supply that is being margined. An external RC network converts the FPWM pulse train into a DC margining voltage. The margining voltage is connected to the appropriate power supply feedback node through a resistor. The power supply output voltage is monitored, and the margining voltage is controlled by adjusting the PWM duty cycle until the power supply output voltage reaches the margin-low and margin-high voltages set by the user. The voltage setting resolutions will be the same that applies to the voltage measurement resolution (Table 3). The closed loop margining can operate in several modes (Table 8). Given that this closed-loop system has feed back through the ADC, the closed-loop margining accuracy will be dominated by the ADC measurement. The relationship between duty cycle and margined voltage is configurable so that voltage increases when duty cycle increases or decreases. For more details on configuring the UCD90160A for margining, see the *Voltage Margining Using the UCD9012x* application note (SLVA375).

MODE	DESCRIPTION
DISABLE	Margining is disabled.
ENABLE_TRI_STATE	When not margining, the PWM pin is set to high impedance state.
ENABLE_ACTIVE_TRIM	When not margining, the PWM duty-cycle is continuously adjusted to keep the voltage at VOUT_COMMAND.
ENABLE_FIXED_DUTY_CYCLE	When not margining, the PWM duty-cycle is set to a fixed duty-cycle.

Table 8. Closed Loop Margining Modes

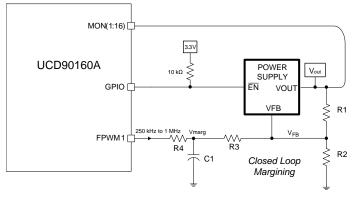

Copyright © 2016, Texas Instruments Incorporated

Figure 24. Closed-Loop Margining

7.4.15 System Reset Signal

The UCD90160A can generate a programmable system-reset pulse as part of sequence-on. The pulse is created by programming a GPIO to remain deasserted until the voltage of a particular rail or combination of rails reach their respective POWER_GOOD_ON levels plus a programmable delay time. The system-reset delay duration can be programmed as shown in Table 9. See an example of two SYSTEM RESET signals Figure 25. The first SYSTEM RESET signal is configured so that it de-asserts on Power Good On and it asserts on Power Good Off after a given common delay time. The second SYSTEM RESET signal is configured so that it sends a pulse after a delay time once Power Good On is achieved. The pulse width can be configured between 0.001s to 32.256s. See the UCD90xxx Sequencer and System Health Controller PMBus Command Reference for pulse width configuration details.

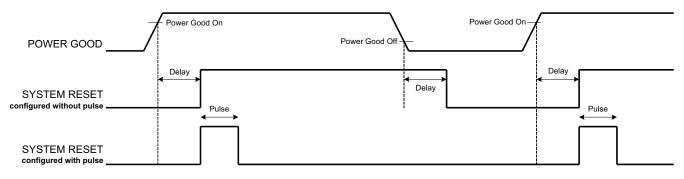


Figure 25. System Reset with and without Pulse Setting

The system reset can react to watchdog timing. In Figure 26 The first delay on SYSTEM RESET is for the initial reset release that would get a CPU running once all necessary voltage rails are in regulation. The watchdog is configured with a Start Time and a Reset Time. If these times expire without the WDI clearing them then it is expected that the CPU providing the watchdog signal is not operating. The SYSTEM RESET is toggled either using a Delay or GPI Tracking Release Delay to see if the CPU recovers.



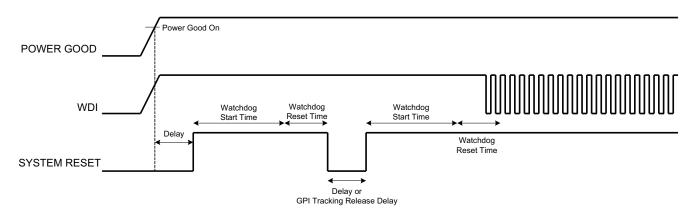


Figure 26. System Reset with Watchdog

0 ms 1 ms 2 ms 4 ms 8 ms 16 ms 32 ms 64 ms 128 ms 256 ms 512 ms 1.02 s
2 ms 4 ms 8 ms 16 ms 32 ms 64 ms 128 ms 256 ms 512 ms
4 ms 8 ms 16 ms 32 ms 64 ms 128 ms 256 ms 512 ms
8 ms 16 ms 32 ms 64 ms 128 ms 256 ms 512 ms
16 ms 32 ms 64 ms 128 ms 256 ms 512 ms
32 ms 64 ms 128 ms 256 ms 512 ms
64 ms 128 ms 256 ms 512 ms
128 ms 256 ms 512 ms
256 ms 512 ms
512 ms
1.02 s
2.05 s
4.10 s
8.19 s
16.38 s
32.8 s

Table 9. System-Reset Delay

7.4.16 Watch Dog Timer

A GPI and GPO can be configured as a watchdog timer (WDT). The WDT can be independent of power supply sequencing or tied to a GPIO functioning as a watchdog output (WDO) that is configured to provide a system-reset signal. The WDT can be reset by toggling a watchdog input (WDI) pin or by writing to SYSTEM_WATCHDOG_RESET over I²C. The WDI and WDO pins are optional when using the watchdog timer. The WDI can be replaced by SYSTEM_WATCHDOG_RESET command and the WDO can be manifested through the Boolean Logic defined GPOs or through the System Reset function.

The WDT can be active immediately at power up or set to wait while the system initializes. Table 10 lists the programmable wait times before the initial timeout sequence begins.


TEXAS INSTRUMENTS

www.ti.com

Table 10. WDT Initial Wait Time

lime
WDT INITIAL WAIT TIME
0 ms
100 ms
200 ms
400 ms
800 ms
1.6 s
3.2 s
6.4 s
12.8 s
25.6 s
51.2 s
102 s
205 s
410 s
819 s
1638 s

 The watchdog timeout is programmable from 0.001s to 32.256s. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* for details on configuring the watchdog timeout. If the WDT times out, the UCD90160A can assert a GPIO pin configured as WDO that is separate from a GPIO defined as system-reset pin, or it can generate a system-reset pulse. After a timeout, the WDT is restarted by toggling the WDI pin or by writing to SYSTEM_WATCHDOG_RESET over I²C.





7.4.17 Run Time Clock

The Run-Time clock output reports in milliseconds and days. Both values are 32-bit numbers. The value is saved in nonvolatile memory whenever a STORE_DEFAULT_ALL command is issued. It can also be saved when a power-down condition is detected (See *Brownout Function*).

The Run-Time clock may also be written. This allows the clock to be periodically corrected by the host. It also allows the clock to be initialized to the actual, absolute time in years (e.g., March 23, 2010). The user must translate the absolute time to days and milliseconds.

The three usage scenarios for the Run-Time Clock are:

- Time from restart (reset or power-on). Run-Time Clock starts from 0 each time a restart occurs
- Absolute run-time, or operating time. Run-Time Clock is preserved across restarts, recording the total time that the device has been in operation (Note: "Boot time" is not part of this period. Only normal operation time is captured here.)
- Local time. An external processor sets the Run-Time Clock to real-world time each time the device is restarted.

The Run-Time clock value is used to timestamp any faults that are logged.



7.4.18 Data and Error Logging to Flash Memory

The UCD90160A can log up to 18 faults and the number of device resets to flash memory. Peak voltage measurements are also stored for each rail. To reduce stress on the flash memory, a 30-second timer is started if a measured value exceeds the previously logged value. Only the highest value from the 30-second interval is written from RAM to flash. Data and Error logging to flash memory can be disabled by user so that the data and error are only stored in the SRAM.

Multiple faults can be stored in flash memory and can be accessed over PMBus to help debug power supply bugs or failures. Each logged fault includes:

- Rail number
- Fault type
- Fault time since previous device reset
- Last measured rail voltage

The total number of device resets is also stored to flash memory. The value can be reset using PMBus.

There are three settings for handling the fault log once it reaches its maximum capacity. These settings allow to keep the latest faults by using a First In, First Out (FIFO) mode.

- FIFO log disabled The first 18 faults will be logged. No additional faults will be logged until the fault log is cleared.
- FIFO log for all faults The most recent 18 faults will be logged. Once 18 faults are logged, any additional faults will cause the oldest fault log entry to be lost.
- FIFO log for last half of faults The first 9 faults will be logged. The most recent 9 faults will also be logged. In the FIFO portion of the log, once 9 faults are logged, any additional faults will cause the oldest fault entry to be lost.

With the brownout function enabled, the run-time clock value, peak monitor values, and faults are only logged to flash when a power-down is detected. The device run-time clock value is stored across resets or power cycles unless the brownout function is disabled, in which case the run-time clock is returned to zero after each reset.

It is also possible to update and calibrate the UCD90160A internal run-time clock via a PMBus host. For example, a host processor with a real-time clock could periodically update the UCD90160A run-time clock to a value that corresponds to the actual date and time. The host must translate the UCD90160A timer value back into the appropriate units, based on the usage scenario chosen. See the REAL_TIME_CLOCK command in the UCD90xxx Sequencer and System Health Controller PMBus Command Reference for more details.


7.4.19 Brownout Function

The UCD90160A can be enabled to turn off all nonvolatile logging until a brownout event is detected. A brownout event occurs if V_{CC} drops below 2.9 V. In order to enable this feature, the user must provide enough local capacitance to deliver up to 80 mA (consider additional load based on GPOs sourcing external circuits such as LEDs) on for 5 ms while maintaining a minimum of 2.6 V at the device. If using the brownout circuit (Figure 28), then a schottky diode should be placed so that it blocks the other circuits that are also powered from the 3.3-V supply.

With this feature enabled, the UCD90160A saves faults, peaks, and other log data to SRAM during normal operation of the device. Once a brownout event is detected, all data is copied from SRAM to Flash if the log is not disabled. Use of this feature allows the UCD90160A to keep track of a single run-time clock that spans device resets or system power down (rather than resetting the run time clock after device reset). It can also improve the UCD90160A internal response time to events, because Flash writes are disabled during normal system operation. This is an optional feature and can be enabled using the MISC_CONFIG command. For more details, see the UCD90xxx Sequencer and System Health Controller PMBus Command Reference.

Texas Instruments

www.ti.com

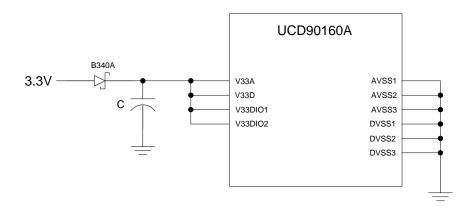

Copyright © 2016, Texas Instruments Incorporated

Figure 28. Brownout Circuit

7.4.20 PMBus Address Selection

Two pins are allocated to decode the PMBus address. At power up, the device applies a bias current to each address-detect pin, and the voltage on that pin is captured by the internal 12-bit ADC. The PMBus address is calculated as follows.

PMBus Address = $12 \times bin(V_{AD01}) + bin(V_{AD00})$

Where $bin(V_{AD0x})$ is the address bin for one of eight addresses as shown in Table 11. The address bins are defined by the MIN and MAX VOLTAGE RANGE (V). Each bin is a constant ratio of 1.25 from the previous bin. This method maintains the width of each bin relative to the tolerance of standard 1% resistors.

ADDRESS BIN	RPMBus PMBus RESISTANCE (kΩ)						
open	_						
11	200						
10	154						
9	118						
8	90.9						
7	69.8						
6	53.6						
5	41.2						
4	31.6						
short	—						


Table 11. PMBus Address Bins

A low impedance (short) on either address pin that produces a voltage below the minimum voltage causes the PMBus address to default to address 126 (0x7E). A high impedance (open) on either address pin that produces a voltage above the maximum voltage also causes the PMBus address to default to address 126 (0x7E).

Address 0 is not used because it is the PMBus general-call address. Addresses 11 and 127 can not be used by this device or any other device that shares the PMBus with it, because those are reserved for manufacturing programming and test. It is recommended that address 126 not be used for any devices on the PMBus, because this is the address that the UCD90160A defaults to if the address lines are shorted to ground or left open. Table 12 summarizes which PMBus addresses can be used. Other SMBus/PMBus addresses have been assigned for specific devices. For a system with other types of devices connected to the same PMBus, see the SMBus device address assignments table in Appendix C of the latest version of the System Management Bus (SMBus) specification. The SMBus specification can be downloaded at http://smbus.org/specs/smbus20.pdf.

Table 12.	PMBus	Address	Assignment Rules
-----------	--------------	---------	------------------

ADDRESS	STATUS	REASON
0	Prohibited	SMBus general address call
1-10	Available	
11	Avoid	Causes conflicts with other devices during program flash updates.
12	Prohibited	PMBus alert response protocol
13-125	Available	
126	For JTAG Use	Default value; may cause conflicts with other devices.
127	Prohibited	Used by TI manufacturing for device tests.

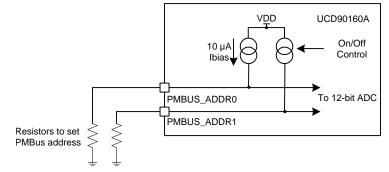

Copyright © 2016, Texas Instruments Incorporated

Figure 29. PMBus Address-Detection Method

CAUTION

Address 126 (0x7E) is not recommended to be selected as a permanent PMBus address for any given application design.

Leaving the address in default state as 126 (0x7E) will enable the JTAG and not allow using the JTAG compatible pins (36-39) as GPIOs.

7.4.21 Device Reset

The UCD90160A has an integrated power-on reset (POR) circuit which monitors the supply voltage. At power up, the POR detects the V_{33D} rise. When V_{33D} is less than V_{RESET} , the device comes out of reset.

The device can be forced into the reset state by an external circuit connected to the $\overrightarrow{\text{RESET}}$ pin. A logic low voltage on this pin for longer than t_{RESET} holds the device in reset. it comes out of reset within 1 ms after $\overrightarrow{\text{RESET}}$ is released, and can return to a logic-high level. To avoid an erroneous trigger caused by noise, connect $\overrightarrow{\text{RESET}}$ to a 10-k Ω pullup resistor (from $\overrightarrow{\text{RESET}}$ to 3.3 V) and 1000-pF capacitor (from $\overrightarrow{\text{RESET}}$ to $\overrightarrow{\text{AVSS}}$).

Any time the device comes out of reset, it begins an initialization routine that lasts about 20 ms. During the Initialization routine, the FPWM pins are held low. and all other GPIO and GPI pins are open-circuit. At the end of initialization, the device begins normal operation as defined by the device configuration.



7.5 Programming

7.5.1 Device Configuration and Programming

From the factory, the device contains the sequencing and monitoring firmware. It is also configured so that all GPOs are high-impedance (except for FPWM/GPIO pins 17 to 24, which are driven low), with no sequencing or fault-response operation. See *Configuration Programming of UCD Devices*, available from the *Documentation & Help Center* that can be selected from the *Fusion GUI* Help menu, for full UCD90160A configuration details.

After the user has designed a configuration file using *Fusion GUI*, there are three general device-configuration programming options:

- Devices can be programmed in-circuit by a host microcontroller using PMBus commands over I²C (see the UCD90xxx Sequencer and System Health Controller PMBus Command Reference). Each parameter write replaces the data in the associated memory (RAM) location. After all the required configuration data has been sent to the device, it is transferred to the associated nonvolatile memory (data flash) by issuing a special command, STORE_DEFAULT_ALL. This method is how the Fusion GUI normally reads and writes a device configuration.
- 2. The *Fusion GUI* (Figure 30) can create a PMBus or I²C command script file that can be used by the I²C master to configure the device.



Programming (continued)

🜵 Device Expo	rt - UCD90:	160A @ PMBus /	Address 101d	1			_ 🗆 🔀			
Export Multiple	Formats	Global Op	otions	Device Report	Text File	Project File	Data Flash File			
Program + Data	a Flash File	Data Flash SVF	JTAG Progr	am + Data Flash SVF/JTAG	PMBus Write Script	Data Flash Script	Firmware Upgrade Script			
	a script deta /riteByte, Wr			your current configuration WriteBlock. This can be easil			dard SMBus			
SMBus (M W	 SMBus (Write the device configuration in terms of Write Byte, Write Word, and Write Block) I2C (Write the device configuration in terms of I2C Write Block) D I2C (Write Block) D I									
Add PEC b	oyte 🧿	F ile Format) CSV) Tab Separated	Hex Forma OxAABB AABB AA-BB	• Comment Style • "Comment" toker • Proceed with // • Proceed with #	n (C++ style)	How to Handle Multi Compact together int The data payload for such as a block, will b field using 0xAABB, A style. Bytes are order	o one field a write command, e occupy a single ABB, or AA-BB or			
- Security-				Embedded Devi						
The SECURITY box will set a s	 Enable configuration security <u>Set Password</u> Interstein the security password before saving the configuration to data flash. Interstein the security password before saving the configuration to data flash. Interstein the security password before saving the configuration to data flash. 									
Earlier ver	rsions of the		lock length to b	mands in SMBus mode lock reads/writes, and your j	parser would have to	compute them. If you w	want to continue			
- Output Dest	ination									
Output Folder:		eskton					Select Browse			
Filename:			1 JEVT1							
Preview:		Address {DA} {EF}		MBus Config Script 1.csv		Reset to Def	ault Filename Token Help			
	00030100A	2.4.5.700 Addres	53 101 SHIDUS PI	hous coming script 1765V						
Log 17:26:44.996:	Stopped bac	kground polling					^ ~			
Copy Log	Clear Log		Preview PMB	us Config Script Ex	port PMBus Config Sc	ript	Close			

Figure 30. Fusion GUI PMBus Configuration Script Export Tool

3. Another in-circuit programming option is for the *Fusion GUI* to create a data flash image from the configuration file (Figure 31). The configuration files can be exported in Intel Hex, Serial Vector Format (SVF) and S-record. The image file can be downloaded into the device using I²C or JTAG. The *Fusion GUI* tools can be used on-board if the *Fusion GUI* can gain ownership of the target board I²C bus.

Copyright © 2016, Texas Instruments Incorporated

👆 Device Expo	rt - UCD90160A @	PMBus Address 101d					_ • ×
Program + Data	a Flash File Data	Flash SVF/JTAG Program	n + Data Flash SV	F/JTAG	PMBus Write Script	Data Flash Script	Firmware Upgrade Script
Export Multiple		Global Options	Device Report	.,		Project File	Data Flash File
Export Multiple Use this tab to e Formats" button Device Rep An Excel or supported t Text File Tab or com readings. Project File XML file des Project." Data Flash Hex file use	Formats export multiple forma n. Click the links belo <u>cort</u> r HTML report on bas for UCD92xx and UC ma separated list of scribing configuration <u>Hex File</u>	Global Options ats with a single click. All for w or tabs above to review sic device configuration. On CD90xxx device families. PMBus parameter settings n. Generally equivalent to "	Device Report mats you check b options for each e ly and/or Save as	elow will b xport form <u>PMBus (</u> Defines configur host mice <u>Data Fla</u> Defines current dones t <u>Program</u> Hex file and som <u>Program</u> Serial Ve	Text File	Project File Project File click the "Export All Cl agle format. ipt erformed to write the of command-by-comman s who want to develop erformed to download flash. Similar to the Pl completely. flash and data flash to programmers. <u>AG File</u> used to write program	Data Flash File hecked device d). Useful for p a full or partial this device's MBus script, but via Fusion tools
Serial Vecto	<u>SVF / JTAG File</u> or Format (SVF) file (on (data flash) via J	used to program a device's TAG.		Defines	e Upgrade Script writes that must be pe ng firmware on the dev		ntroller when
– Output Desti	ination						
· ·	C:\Users\Desktop						Select Browse
Filename:	{PN} {DV} Address		un Canfa Cariata			Reset to Def	ault Filename Token Help
Preview:	UCD90160A 2.4.3.7	760 Address 101 SMBus PMB	ous coning script 1	LICSV			
Log 17:26:44.996: 1	Stopped background	d polling					^
Copy Log	ClearLog		Export All Ch	ecked Fo	rmats		Close

Figure 31. Fusion GUI Device Configuration Export Tool



Programming (continued)

UCD90160A

Devices can be programmed off-board using the *Fusion GUI* tools or a dedicated device programmer. For small runs, a ZIF socketed board with an I2C header can be used with the standard Fusion GUI or manufacturing GUI. The TI Evaluation Module for UCD90xxx 64-pin Sequencer and System Health Monitor (UCD90SEQEVM64-650) can be used for this purpose. The TI Evaluation Module for UCD90xxx 64-pin Sequencer and System Health Monitor (UCD90SEQEVM64-650) can be used for this purpose. The TI Evaluation Module for UCD90xxx 64-pin Sequencer and System Health Monitor (UCD90SEQEVM64-650) can be used for this purpose. The *Fusion GUI* can also create a data flash file that can then be loaded into the UCD90160A using a dedicated device programmer.

To configure the device over I²C or PMBus, the UCD90160A must be powered. The PMBus clock and data pins must be accessible and must be pulled high to the same V_{DD} supply that powers the device, with pullup resistors between 1 k Ω and 2 k Ω . Care should be taken to not introduce additional bus capacitance (<100 pF). The user configuration can be written to data flash using a gang programmer via JTAG or I²C before the device is installed in circuit. To use I²C, the clock and data lines must be multiplexed or the device addresses must be assigned by socket. The *Fusion GUI* tools can be used for socket addressing. Pre-programming can also be done using a single device test fixture.

Table 13	6. Configuration	Options
----------	------------------	---------

	DATA FLASH VIA JTAG	DATA FLASH VIA I ² C	PMBus COMMANDS VIA I ² C		
Off-Board Configuration	Data Flash Export (.svf type file)	Data Flash Export (.srec or hex type file)	Project file I ² C/PMBus script		
	Dedicated programmer	Fusion tools (with exclusive bus access via USB to I ² C adapter)	Fusion tools (with exclusive bus access via USB to I ² C adapter)		
On Roard Configuration	Data flash export	Fusion tools (with exclusive bus access	Fusion tools (with exclusive bus		
On-Board Configuration	IC	via USB to I ² C adapter)	access via USB to I ² C adapter)		

The advantages of off-board configuration include:

- Does not require access to device I²C bus on board.
- Once soldered on board, full board power is available without further configuration.
- Can be partially reconfigured once the device is mounted.

7.5.1.1 Full Configuration Update While in Normal Mode

Although performing a full configuration of the UCD90160A in a controlled test setup is recommended, there may be times in which it is required to update the configuration while the device is in an operating system. Updating the full configuration based on methods listed in DEVICE CONFIGURATION AND PROGRAMMING section while the device is in an operating system can be challenging because these methods do not permit the UCD90160A to operate as required by application during the programming. During described methods the GPIOs may not be in the desired states which can disable rails that provide power to the UCD90160A. To overcome this, the UCD90160A has the capability to allow full configuration update while still operating in normal mode.

Updating the full configuration while in normal mode will consist of disabling data flash write protection, erasing the data flash, writing the data flash image and reset the device. It is not required to reset the device immediately but make note that the UCD90160A will continue to operate based on previous configuration with fault logging disabled until reset. See *Configuration Programming of UCD Devices*, available from the *Documentation & Help Center* that can be selected from the *Fusion GUI* Help menu, for details.



7.5.2 JTAG Interface

The JTAG port can be used for production programming. Four of the six JTAG pins can also be used as GPIOs during normal operation. See the *Pin Functions* table at the beginning of the document and Table 4 for a list of the JTAG signals and which can be used as GPIOs. The JTAG port is compatible with the IEEE Standard 1149.1-1990, IEEE Standard Test-Access Port and Boundary Scan Architecture specification. Boundary scan is not supported on this device.

The JTAG interface can provide an alternate interface for programming the device. It is disabled by default in order to enable the GPIO pins with which it is multiplexed. There are two conditions under which the JTAG interface is enabled:

- On power-up if the data flash is blank, allowing JTAG to be used for writing the configuration parameters to a programmed device with no PMBus interaction
- When address 126 (0x7E) is detected at power up. A short to ground or an open condition on either address pin will cause an address 126 (0x7E) to be generated which enables JTAG mode.

The Fusion GUI can create SVF files (See *Device Configuration and Programming* section) based on a given data flash configuration which can be used to program the desired configuration by JTAG. For Boundary Scan Description Language (BSDL) file that supports the UCD90160A, see the product folder in www.ti.com.

There are many JTAG programmers in the market and they all do not function the same. When using JTAG to configure the device, confirm that the availability of JTAG tools before committing to a programming solution.

7.5.3 Internal Fault Management and Memory Error Correction (ECC)

The UCD90160A verifies the firmware checksum at each power up. If it does not match, then the device waits for I²C commands but does not execute the firmware. A device configuration checksum verification is also performed at power up. If it does not match, the factory default configuration is loaded. The PMBALERT# pin is asserted and a flag is set in the status register. The error-log checksum validates the contents of the error log to make sure that section of flash is not corrupted.

There is an internal firmware watchdog timer. If it times out, the device resets so that if the firmware program is corrupted, the device goes back to a known state. This is a normal device reset, so all of the GPIO pins are open-drain and the FPWM pins are driven low while the device is in reset. Checks are also done on each parameter that is passed, to make sure it falls within the acceptable range.

Error-correcting code (ECC) is used to improve data integrity and provide high-reliability storage of Data Flash contents. ECC uses dedicated hardware to generate extra check bits for the user data as it is written into the Flash memory. This adds an additional six bits to each 32-bit memory word stored into the Flash array. These extra check bits, along with the hardware ECC algorithm, allow for any single-bit error to be detected and corrected when the Data Flash is read.



8 Application and Implementation

NOTE

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.

8.1 Application Information

UCD90160A can be used to sequence, monitor and margin up to 10 voltage rails. Typical applications include automatic test equipment, telecommunication and networking equipment, servers and storage systems, and so forth. Device configuration can be performed in Fusion GUI without coding effort.

8.2 Typical Application

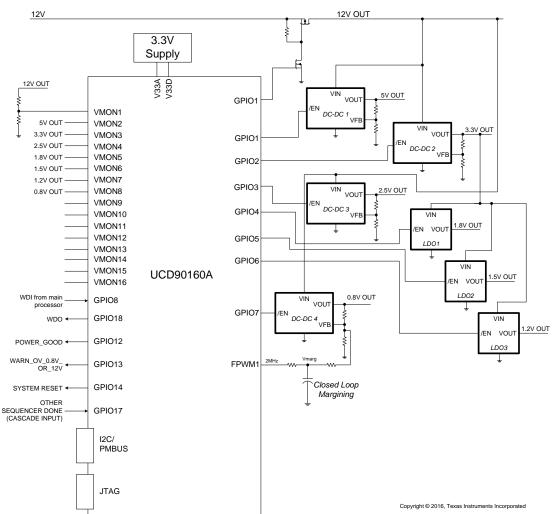


Figure 32. Typical Application Schematic



Typical Application (continued)

NOTE

Figure 32 is a simplified application schematic. Voltage dividers such as the ones placed on VMON1 input have been omitted for simplifying the schematic. All VMONx pins which are configured to measure a voltage that exceeds the 2.5V ADC reference are required to have a voltage divider.

8.2.1 Design Requirements

The TRST pin must have a 10-k Ω pulldown resistor to ground and the RESET pin must have a 10-k Ω pullup resistor to V_{33D} and a 1-nF decoupling capacitor to ground. The components must be placed as close to the RESET pin as possible.

Depending on application environment, the PMBus signal integrity may be compromised at times. This causes the UCD90160A to receive incorrect PMBus commands. In a particular case, if (D9h) ROM_MODE command is erroneously received by a UCD90160A device, it causes the device to enter ROM mode, in this mode the device does not function unless Fusion GUI is connected to the device. To avoid such occurrences in a running system, it is suggested to enable Packet Error Checking (PEC) in the PMBus host. The UCD90160A automatically detects and works with PMBus hosts, both with and without PEC enabled.

The fault log in UCD90160A is checksum protected. After new log entries are written into the fault log, the checksum is updated accordingly. After each device reset, UCD90160A re-calculates the fault log checksum and compares it with the existing checksum. If the two checksums are not the same, the device determines the fault log as corrupted and erases the fault log as a result.

In the event that the V_{33D} power is dropped before the device finishes writing the fault log, the checksum is not updated correctly, thus the fault log is erased at the next power-up. The result is that no new faults are logged.

Such an event usually happens when the main power of the board drops and no standby power can stay alive for V_{33D} . If such a scenario can be anticipated in an application, it is strongly suggested to use the brown-out function and circuit as described in the *Brownout Function* section.

WARNING

Do not use the **RESET** pin to power cycle the rails. Instead, use the PMBus_CNTRL pin as described in the *Power Supply Sequencing* section; or, use the Pin-Selected Rail States function described in the *Pin-Selected Rail States* section.

8.2.2 Detailed Design Procedure

Fusion GUI can be used to design the device configuration online or offline (with or without a UCD90160A device connected to the computer). In offline mode, Fusion GUI will prompt user to create or open a project file (.xml) at launch. In online mode, Fusion GUI automatically detects the device on PMBus and read the configuration data from the device. An USB-to-GPIO Adapter EVM (HPA172) from Texas Instruments is required to connect Fusion GUI to PMBus.

The general design steps include:


- 1. Rail setup
- 2. Rail monitoring configuration
- 3. GPI configuration
- 4. Rail sequence configuration
- 5. Fault response configuration
- 6. GPO configuration
- 7. Margining configuration
- 8. Other configurations such as Pin Selected Rail States, Watchdog Timer, and System Reset. Details of the steps are self-explanatory in Fusion GUI.



Typical Application (continued)

After configuration changes, click the **Write to Hardware** button to apply the changes. In online mode, then click the **Store RAM to Flash** button to permanently store the new configuration into the device data flash.

8.2.3 Application Curves

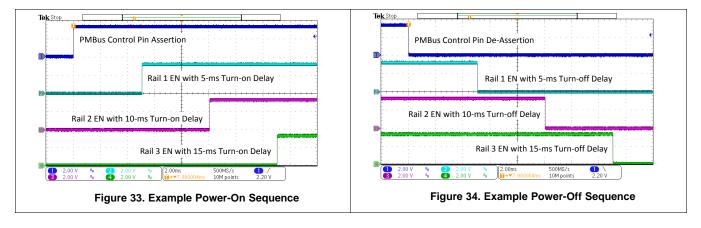

8.2.4 Estimating ADC Reporting Accuracy

The UCD90160A uses a 12-bit ADC and an internal 2.5-V reference (V_{REF}) to convert MON pin inputs into digitally reported voltages. The least significant bit (LSB) value is $V_{LSB} = V_{REF} / 2^N$ where N = 12, resulting in a VLSB = 610 μ V. The error in the reported voltage is a function of the ADC linearity errors and any variations in VREF. The total unadjusted error (E_{TUE}) for the UCD90160A ADC is ±5 LSB, and the variation of VREF is ±0.5% between 0°C and 125°C and ±1% between -40°C and 125°C. V_{TUE} is calculated as V_{LSB} × E_{TUE}. The total reported voltage error is the sum of the reference-voltage error and V_{TUE}. At lower monitored voltages, V_{TUE} dominates reported error, whereas at higher monitored voltages, the tolerance of V_{REF} dominates the reported error. Reported error can be calculated using Equation 3, where REFTOL is the tolerance of V_{REF}, V_{ACT} is the actual voltage being monitored at the MON pin, and V_{REF} is the nominal voltage of the ADC reference.

$$RPT_{ERR} = \left(\frac{1 + REFTOL}{V_{ACT}}\right) \times \left(\frac{V_{REF} \times E_{TUE}}{4096} + V_{ACT}\right) - 1$$
(3)

From Equation 3, for temperatures between 0°C and 125°C, if $V_{ACT} = 0.5$ V, then RPT_{ERR} = 1.11%. If $V_{ACT} = 2.2$ V, then RPT_{ERR} = 0.64%. For the full operating temperature range of -40°C to 125°C, if VACT = 0.5V, then RPT_{ERR} = 1.62%. If $V_{ACT} = 2.2$ V, then RPT_{ERR} = 1.14%.



9 Power Supply Recommendations

Use a 3.3-V power supply with the UCD90160A. At power-up, V33D must ascend from 2.3 V to 2.9 V monotonically with a minimum slew rate of 0.25 V/ms.

10 Layout

10.1 Layout Guidelines

The thermal pad provides a thermal and mechanical interface between the device and the printed circuit board (PCB). Connect the exposed thermal pad of the PCB to the device V_{SS} pins and provide at least a 4 × 4 pattern of PCB vias to connect the thermal pad and V_{SS} pins to the circuit ground on other PCB layers.

For supply-voltage decoupling, provide power supply pin bypass to the device as follows:

- 0.1-μF, X7R ceramic in parallel with 0.01-μF, X7R ceramic at pin 47 (BPCAP)
- 0.1-μF, X7R ceramic in parallel with 4.7-μF, X5R ceramic at pins 44 (V_{33DIO2}) and 45 (V_{33D})
- 0.1-μF, X7R ceramic at pin 7 (V_{33DIO1})
- 0.1- μ F, X7R ceramic in parallel with 4.7- μ F, X5R ceramic at pin 46 (V_{33A})
- Connect V33D (pin 45), V33DIO1 (pin 7) and V33DIO2 (pin 44) to 3.3-V supply directly. Connect V33A (pin 46) to V33D through a 4.99-Ω resistor. This resistor and V33A decoupling capacitors form a low-pass filter to reduce noise on V33A.

Depending on use and application of the various GPIO signals used as digital outputs, some impedance control may be desired to quiet fast signal edges. For example, when using the FPWM pins for fan control or voltage margining, the pin is configured as a digital *clock* signal. Route these signals away from sensitive analog signals. It is also good design practice to provide a series impedance of 20 Ω to 33 Ω at the signal source to slow fast digital edges.



10.2 Layout Example

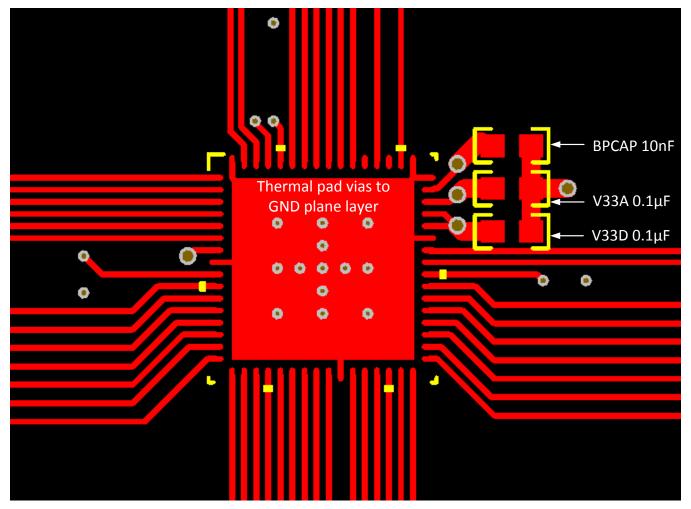


Figure 35. Top Layer

TEXAS INSTRUMENTS

www.ti.com

Layout Example (continued)

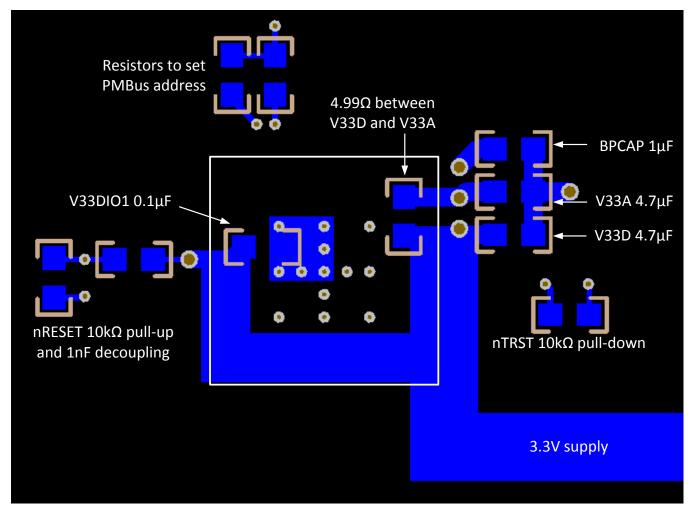


Figure 36. Bottom Layer



11 Device and Documentation Support

11.1 Device Support

11.1.1 Third-Party Products Disclaimer

TI'S PUBLICATION OF INFORMATION REGARDING THIRD-PARTY PRODUCTS OR SERVICES DOES NOT CONSTITUTE AN ENDORSEMENT REGARDING THE SUITABILITY OF SUCH PRODUCTS OR SERVICES OR A WARRANTY, REPRESENTATION OR ENDORSEMENT OF SUCH PRODUCTS OR SERVICES, EITHER ALONE OR IN COMBINATION WITH ANY TI PRODUCT OR SERVICE.

11.2 Documentation Support

11.2.1 Related Documentation

For related documentation, see the following:

UCD90xxx Sequencer and System Health Controller PMBus™ Command Reference, SLVU352

11.3 Receiving Notification of Documentation Updates

To receive notification of documentation updates, navigate to the device product folder on ti.com. In the upper right corner, click on *Alert me* to register and receive a weekly digest of any product information that has changed. For change details, review the revision history included in any revised document

11.4 Community Resources

The following links connect to TI community resources. Linked contents are provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

TI E2E[™] Online Community *TI's Engineer-to-Engineer (E2E) Community.* Created to foster collaboration among engineers. At e2e.ti.com, you can ask questions, share knowledge, explore ideas and help solve problems with fellow engineers.

Design Support TI's Design Support Quickly find helpful E2E forums along with design support tools and contact information for technical support.

11.5 Trademarks

PMBus, Fusion Digital Power, E2E are trademarks of Texas Instruments. All other trademarks are the property of their respective owners.

11.6 Electrostatic Discharge Caution



These devices have limited built-in ESD protection. The leads should be shorted together or the device placed in conductive foam during storage or handling to prevent electrostatic damage to the MOS gates.

11.7 Glossary

SLYZ022 — TI Glossary.

This glossary lists and explains terms, acronyms, and definitions.

12 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.



1-Aug-2017

PACKAGING INFORMATION

Orderable Device	Status	Package Type		Pins	-	Eco Plan	Lead/Ball Finish	MSL Peak Temp	Op Temp (°C)	Device Marking	Samples
	(1)		Drawing		Qty	(2)	(6)	(3)		(4/5)	
UCD90160ARGCR	ACTIVE	VQFN	RGC	64	2000	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	-40 to 125	UCD90160A	Samples
UCD90160ARGCT	ACTIVE	VQFN	RGC	64	250	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	-40 to 125	UCD90160A	Samples
UCD9090ARGZR	ACTIVE	VQFN	RGZ	48	2500	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	-40 to 125	UCD9090A	Samples
UCD9090ARGZT	ACTIVE	VQFN	RGZ	48	250	Green (RoHS & no Sb/Br)	CU NIPDAU	Level-3-260C-168 HR	-40 to 125	UCD9090A	Samples

⁽¹⁾ The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

⁽²⁾ RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

RoHS Exempt: TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

⁽³⁾ MSL, Peak Temp. - The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

⁽⁴⁾ There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.

⁽⁵⁾ Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.

⁽⁶⁾ Lead/Ball Finish - Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead/Ball Finish values may wrap to two lines if the finish value exceeds the maximum column width.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and



1-Aug-2017

continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

PACKAGE MATERIALS INFORMATION

www.ti.com

Texas Instruments

TAPE AND REEL INFORMATION





QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
UCD90160ARGCR	VQFN	RGC	64	2000	330.0	16.4	9.3	9.3	1.1	12.0	16.0	Q2
UCD90160ARGCT	VQFN	RGC	64	250	180.0	16.4	9.3	9.3	1.1	12.0	16.0	Q2
UCD9090ARGZR	VQFN	RGZ	48	2500	330.0	16.4	7.3	7.3	1.1	12.0	16.0	Q2
UCD9090ARGZT	VQFN	RGZ	48	250	180.0	16.4	7.3	7.3	1.1	12.0	16.0	Q2

TEXAS INSTRUMENTS

www.ti.com

PACKAGE MATERIALS INFORMATION

3-Aug-2017



*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
UCD90160ARGCR	VQFN	RGC	64	2000	367.0	367.0	38.0
UCD90160ARGCT	VQFN	RGC	64	250	210.0	185.0	35.0
UCD9090ARGZR	VQFN	RGZ	48	2500	367.0	367.0	38.0
UCD9090ARGZT	VQFN	RGZ	48	250	210.0	185.0	35.0

MECHANICAL DATA



NOTES: A. All linear dimensions are in millimeters. Dimensioning and tolerancing per ASME Y14.5M-1994.

- B. This drawing is subject to change without notice.
- C. Quad Flatpack, No-leads (QFN) package configuration.

D. The package thermal pad must be soldered to the board for thermal and mechanical performance.

E. See the additional figure in the Product Data Sheet for details regarding the exposed thermal pad features and dimensions.

F. Falls within JEDEC MO-220.






THERMAL INFORMATION

This package incorporates an exposed thermal pad that is designed to be attached directly to an external heatsink. The thermal pad must be soldered directly to the printed circuit board (PCB). After soldering, the PCB can be used as a heatsink. In addition, through the use of thermal vias, the thermal pad can be attached directly to the appropriate copper plane shown in the electrical schematic for the device, or alternatively, can be attached to a special heatsink structure designed into the PCB. This design optimizes the heat transfer from the integrated circuit (IC).

For information on the Quad Flatpack No-Lead (QFN) package and its advantages, refer to Application Report, QFN/SON PCB Attachment, Texas Instruments Literature No. SLUA271. This document is available at www.ti.com.

The exposed thermal pad dimensions for this package are shown in the following illustration.

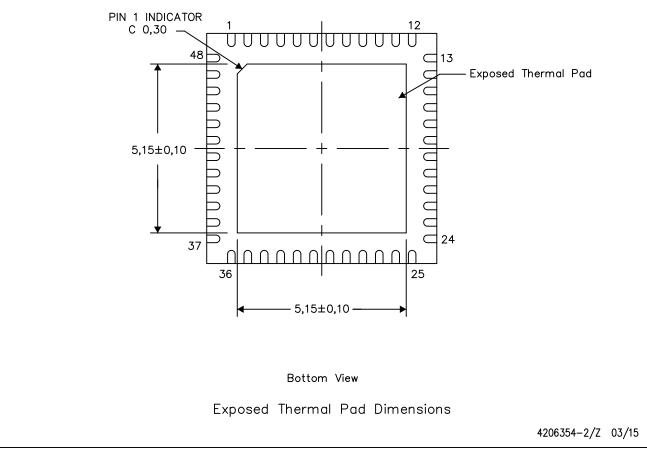


NOTE: All linear dimensions are in millimeters



RGZ (S-PVQFN-N48)

PLASTIC QUAD FLATPACK NO-LEAD

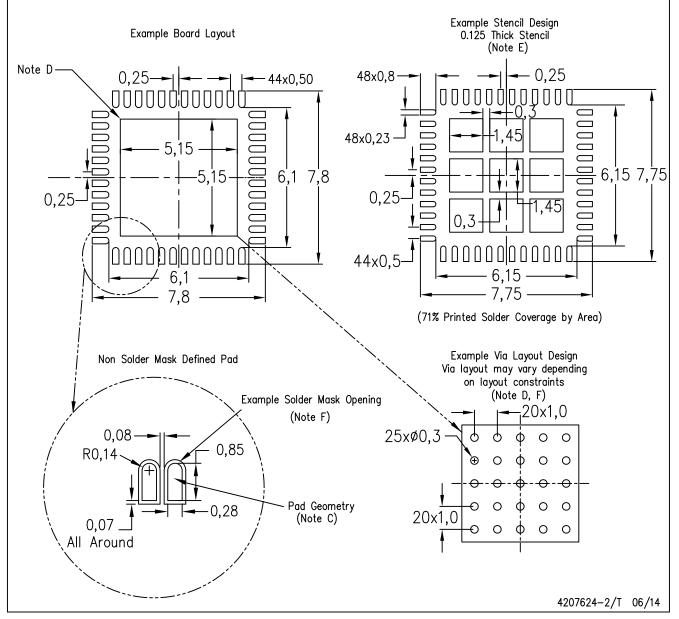


NOTES: A. All linear dimensions are in millimeters.

- B. This drawing is subject to change without notice.
- C. Publication IPC-7351 is recommended for alternate designs.
- D. This package is designed to be soldered to a thermal pad on the board. Refer to Application Note, Quad Flat-Pack Packages, Texas Instruments Literature No. SLUA271, and also the Product Data Sheets for specific thermal information, via requirements, and recommended board layout. These documents are available at www.ti.com http://www.ti.com.
- E. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Refer to IPC 7525 for stencil design considerations.
- F. Customers should contact their board fabrication site for recommended solder mask tolerances and via tenting recommendations for vias placed in the thermal pad.



MECHANICAL DATA

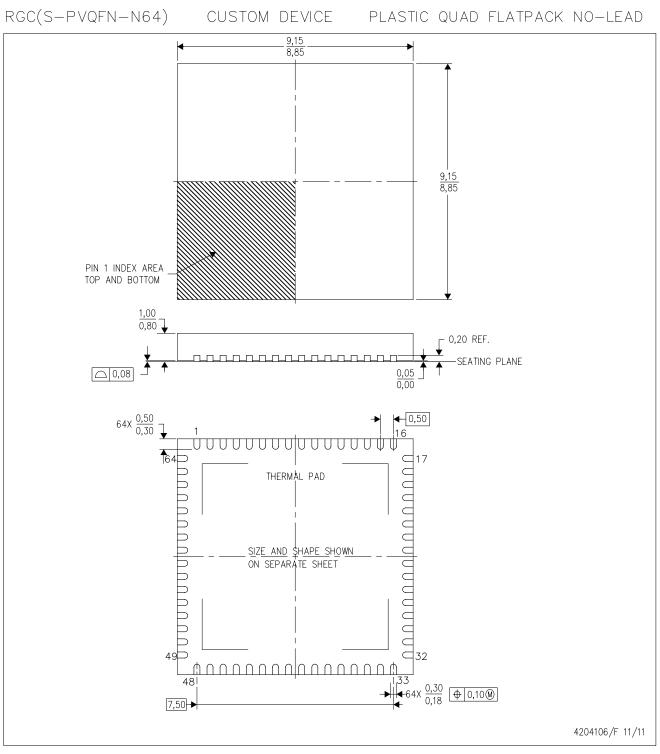

NOTES: A. All linear dimensions are in millimeters. Dimensioning and tolerancing per ASME Y14.5-1994.

- B. This drawing is subject to change without notice.
- C. Quad Flatpack, No-leads (QFN) package configuration.
- D. The package thermal pad must be soldered to the board for thermal and mechanical performance.
- E. See the additional figure in the Product Data Sheet for details regarding the exposed thermal pad features and dimensions.






THERMAL INFORMATION

This package incorporates an exposed thermal pad that is designed to be attached directly to an external heatsink. The thermal pad must be soldered directly to the printed circuit board (PCB). After soldering, the PCB can be used as a heatsink. In addition, through the use of thermal vias, the thermal pad can be attached directly to the appropriate copper plane shown in the electrical schematic for the device, or alternatively, can be attached to a special heatsink structure designed into the PCB. This design optimizes the heat transfer from the integrated circuit (IC).

For information on the Quad Flatpack No-Lead (QFN) package and its advantages, refer to Application Report, QFN/SON PCB Attachment, Texas Instruments Literature No. SLUA271. This document is available at www.ti.com.

The exposed thermal pad dimensions for this package are shown in the following illustration.

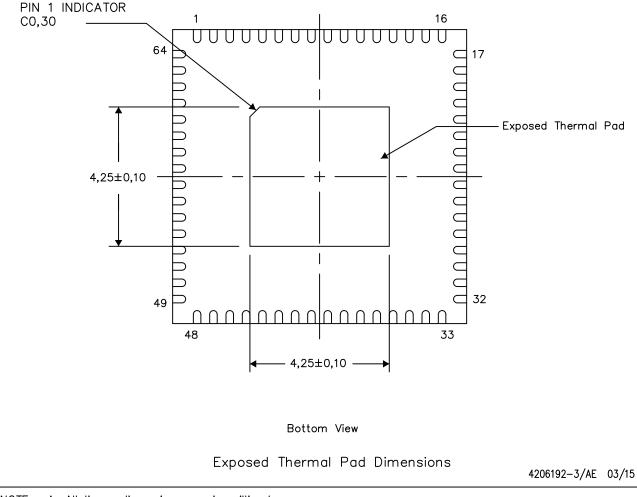


NOTE: A. All linear dimensions are in millimeters



RGC (S-PVQFN-N64)

PLASTIC QUAD FLATPACK NO-LEAD

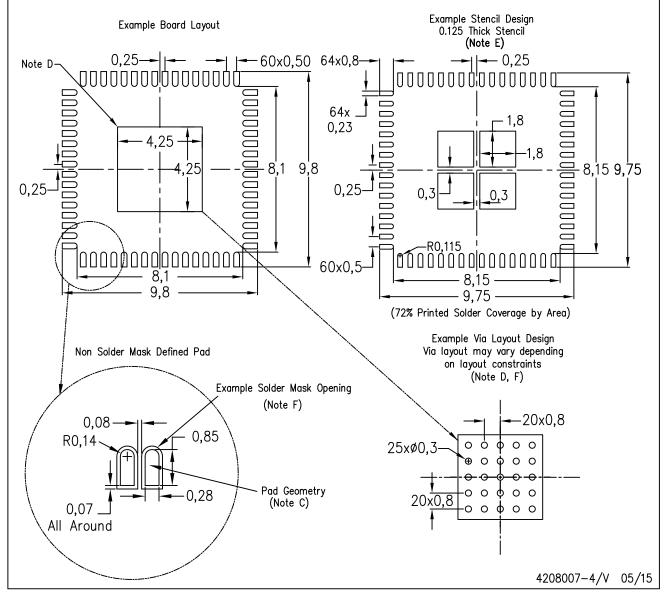

NOTES:

A. All linear dimensions are in millimeters.

- B. This drawing is subject to change without notice.
- C. Publication IPC-7351 is recommended for alternate designs.

D. This package is designed to be soldered to a thermal pad on the board. Refer to Application Note, Quad Flat-Pack Packages, Texas Instruments Literature No. SLUA271, and also the Product Data Sheets for specific thermal information, via requirements, and recommended board layout. These documents are available at www.ti.com <http://www.ti.com>.

- E. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Refer to IPC 7525 for stencil design considerations.
- F. Customers should contact their board fabrication site for recommended solder mask tolerances and via tenting recommendations for vias placed in thermal pad.



IMPORTANT NOTICE

Texas Instruments Incorporated (TI) reserves the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

TI's published terms of sale for semiconductor products (http://www.ti.com/sc/docs/stdterms.htm) apply to the sale of packaged integrated circuit products that TI has qualified and released to market. Additional terms may apply to the use or sale of other types of TI products and services.

Reproduction of significant portions of TI information in TI data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such reproduced documentation. Information of third parties may be subject to additional restrictions. Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyers and others who are developing systems that incorporate TI products (collectively, "Designers") understand and agree that Designers remain responsible for using their independent analysis, evaluation and judgment in designing their applications and that Designers have full and exclusive responsibility to assure the safety of Designers' applications and compliance of their applications (and of all TI products used in or for Designers' applications) with all applicable regulations, laws and other applicable requirements. Designer represents that, with respect to their applications, Designer has all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. Designer agrees that prior to using or distributing any applications that include TI products, Designer will thoroughly test such applications and the functionality of such TI products as used in such applications.

TI's provision of technical, application or other design advice, quality characterization, reliability data or other services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using TI Resources in any way, Designer (individually or, if Designer is acting on behalf of a company, Designer's company) agrees to use any particular TI Resource solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

Designer is authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS. TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY DESIGNER AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Unless TI has explicitly designated an individual product as meeting the requirements of a particular industry standard (e.g., ISO/TS 16949 and ISO 26262), TI is not responsible for any failure to meet such industry standard requirements.

Where TI specifically promotes products as facilitating functional safety or as compliant with industry functional safety standards, such products are intended to help enable customers to design and create their own applications that meet applicable functional safety standards and requirements. Using products in an application does not by itself establish any safety features in the application. Designers must ensure compliance with safety-related requirements and standards applicable to their applications. Designer may not use any TI products in life-critical medical equipment unless authorized officers of the parties have executed a special contract specifically governing such use. Life-critical medical equipment is medical equipment where failure of such equipment would cause serious bodily injury or death (e.g., life support, pacemakers, defibrillators, heart pumps, neurostimulators, and implantables). Such equipment includes, without limitation, all medical devices identified by the U.S. Food and Drug Administration as Class III devices and equivalent classifications outside the U.S.

TI may expressly designate certain products as completing a particular qualification (e.g., Q100, Military Grade, or Enhanced Product). Designers agree that it has the necessary expertise to select the product with the appropriate qualification designation for their applications and that proper product selection is at Designers' own risk. Designers are solely responsible for compliance with all legal and regulatory requirements in connection with such selection.

Designer will fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of Designer's noncompliance with the terms and provisions of this Notice.

> Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2017, Texas Instruments Incorporated