



Notes:
 1. A shaft seal is shipped with motor , but not installed.
 2. A key is shipped with motor.

