

DESCRIPTION: **BACKSHELL ASSEMBLY INSTRUCTIONS - PLASTIC JACKSCREWS STRAIN RELIEF RECESS**



- 1. PREPARE CABLE AS REQUIRED TO ASSEMBLE TO THE CONNECTOR
- CHOOSE THE STRAIN RELIEF HALVES THAT MOST CLOSELY MATCH THE CABLE O/D AND PLACE ONE INTO EACH RECESS. THEY DO NOT NEED TO BE MATCHING HALVES
- 3. PLACE THE CABLE INTO THE STRAIN RELIEF IN ONE HALF OF THE PLASTIC HOOD. ENSURE THE CABLE IS PRESSED INTO THE STRAIN RELIEF PIECE
- 4. SNAP THE JACKSCREWS INTO POSITION
- 5. PLACE THE OTHER HALF OF THE PLASTIC HOOD INTO PLACE AND TIGHTEN TOGETHER WITH THE ASSEMBLY SCREWS AND NUTS

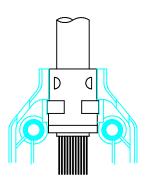



CABLE WITHOUT SHIELD OR GROUND

ROHS COMPLIANT

PLASTIC



THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NOrComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.

NorComp

DRAWN: C. SMITH		DATE:	03-20-06	
CHECKED: X		DATE:	Х	
SCALE:	SHEET	OF		REV

DWG NO.

N.T.S.

BACKSHELL - 970 SERIES

