AN005: IC Package / PCB Footprint Guidelines - eTQFP48

Document Revision V1.00 • 2017-June-13

This application note is meant to be a practical guideline for a specific TRINAMIC IC package and its PCB footprint. The document covers package dimensions, example footprint and general information on PCB footprints.

Contents

1	Figures index				1
2	Tables Index				1
3	Overview				2
4	eTQFP48Package Details 4.1 eTQFP48 4.2 Dimensions 4.3 Land Pattern				3
5		 Calcula	 ator To	ool	5 6 6
6	Revision History				7
1	Figures Index				
	 eQFP48 example	2 3 4 5	5	Board Layout of Soldered Pad for QFN Devices according to Intersil TB389 . EIA Standard Board Layout of Soldered Pad for FBGA Devices (unit: mm)	6
2	Tables Index				
	 eTQFP48 dimensions (unit: mm) EIA Standard Board Layout of Soldered Pad for QFP Devices (unit: mm) 	4 5	3	Document Revision	7





3 Overview

This application note is meant to be a practical guideline for a specific TRINAMIC IC package and its PCB footprint. The document covers package dimensions, example footprint and general information on PCB footprints.

An overview of all available combinations of TRINAMIC IC products and package options is given in application note "AN048: Overview of TRINAMIC ICs, Available Packages, and Order Code".

4 eTQFP48Package Details


4.1 eTQFP48



Figure 1: eQFP48 example



4.2 Dimensions

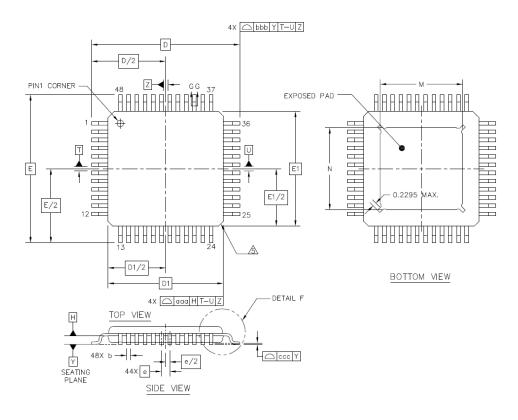

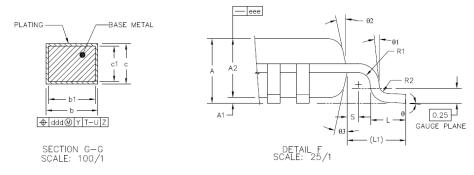


Figure 2: eTQFP48 package outline drawings



Parameter	Ref	Nom	Max
total thickness	Α	-	1.2
stand off	A1	_	0.15
mold thickness	A2	1	1.05
lead width (plating)	b	0.22	0.27
lead width	b1	0.2	0.23
lead frame thickness (plating)	С	-	0.2
lead frame thickness	c1	-	0.16
body size X (over pins)	D	9.0	-
body size Y (over pins)	Е	9.0	_
body size X	D1	7.0	_
body size Y	E1	7.0	_
lead pitch	е	0.5	_
lead	L	0.6	0.75
footprint	L1	1 REF	-
	Θ	3.5°	7°
	Θ1	_	_
	Θ2	12°	13°
	Θ3	12°	13°
	R1	-	-
	R2	_	0.2
	S	-	-
exposed die pad size X	М	5	5.1
exposed die pad size Y	N	5	5.1
package edge tolerance	aaa	_	0.2
lead edge tolerance	bbb	_	0.2
coplanarity	ссс	_	0.08
lead offset	ddd	-	0.08
mold flatness	eee	_	0.05

Table 1: eTQFP48 dimensions (unit: mm)

4.3 Land Pattern

Figure 3: eTQFP48 example land patterns (unit: mm)



5 General PCB Footprint Information Resources

These guidelines and information are proposals and suggestions as they are proven and work well with TRINAMIC modules.

5.1 QFP Packages

These guidelines are for Quad Flat Packages in general (PQFP, LQFP, TQFP) and are derived from the EIA/JEDEC standard.

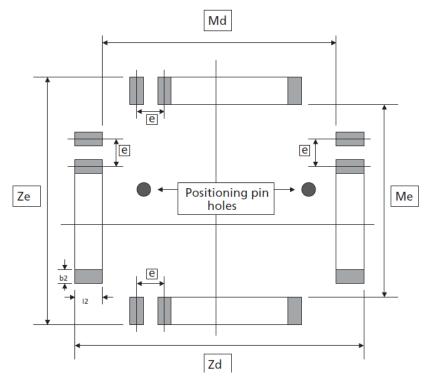


Figure 4: EIA Standard Board Layout of Soldered Pad for QFP Devices (unit: mm)

Dim.	. PQ100	PQ144	PQ160	PQ160	PQ/	PQ/	VQ80	VQ/	VQ128	VQ176	TQ64	TQ144	TQ176
Diiii.			3.2mm	3.9mm	RQ208	RQ240		TQ100					
Md	20.4	28.4	28.4	29.2	28.2	32.2	13.8	13.8	13.8	19.8	10.1	19.8	23.8
Me	14.4	28.4	28.4	29.2	28.2	32.2	13.8	13.8	13.8	19.8	10.1	19.8	23.8
е	0.65	0.65	0.65	0.65	0.5	0.5	0.65	0.5	0.4	0.4	0.5	0.5	0.5
b2	0.3-0.5	0.3-0.5	0.3-0.5	0.3-0.5	0.3-0.4	0.3-0.4	0.3-0.5	0.3-0.4	0.25-	0.25-	0.3-0.4	0.3-0.4	0.3-0.4
DZ									0.30	0.30	0.5-0.4	0.5-0.4	0.5-0.4
12	1.8	1.8	1.8	1.8	1.6	1.6	1.8	1.6	1.6	1.6	1.6	1.6	1.6

Table 2: EIA Standard Board Layout of Soldered Pad for QFP Devices (unit: mm)

5.2 QFN Packages

These are basic guidelines for Quad Flat No Leads Packages (QFNs). They are derived from the Technical Brief TB389 from Intersil (http://www.intersil.com/data/tb/TB389.pdf).



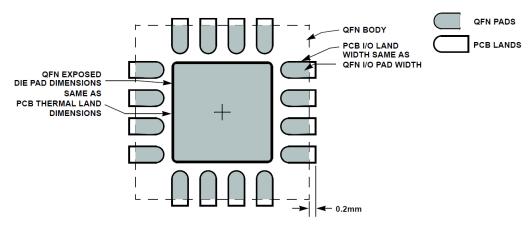


Figure 5: Board Layout of Soldered Pad for QFN Devices according to Intersil TB389

5.3 FBGA Packages

These guidelines are for Fine Line Ball Grid Arrays (FBGAs) with 1mm ball pitch and are derived from the EIA/JEDEC standard.

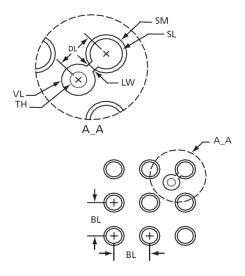


Figure 6: EIA Standard Board Layout of Soldered Pad for FBGA Devices (unit: mm)

5.4 IPC-7351B Standard and Land Pattern Calculator Tool

The IPC-7351B Land Pattern Calculator is based upon algorithms and engineering goals established in the IPC-7351B standard. Mentor Graphics provides a similar free tool. The IPC-7351B standard as well as the Calculator Tool are available online:

http://www.ipc.org/ContentPage.aspx?pageid=Land-Pattern-Calculator http://www.mentor.com/products/pcb-system-design/library-tools/lp-wizard/lp-viewer-download



IPC-7351B Description (Source: IPC Online Store, https://portal.ipc.org/Association/Index.htm):

"IPC-7351B includes both the standard and an IPC-7351B land pattern calculator for accessing component and land pattern dimensional data. The calculator includes the document's mathematical algorithms so users can build a land pattern for a corresponding surface mount part quickly and accurately. The tool also allows for modification of dimensional attributes of IPC approved land patterns.

This popular document covers land pattern design for all types of passive and active components, including resistors, capacitors, MELFs, SOPs, QFPs, BGAs, QFNs and SONs. The standard provides printed board designers with an intelligent land pattern naming convention, zero component rotations for CAD systems and three separate land pattern geometries for each component that allow the user to select a land pattern based on desired component density.

Revision B now includes land pattern design guidance and rules for component families such as resistor array packages, aluminum electrolytic capacitors, column and land grid arrays, flat lead devices (SODFL and SOTFL) and dual flat no-lead (DFN) devices. The revision also discusses the usage of thermal tabs and provides a new padstack naming convention that addresses the shape and dimensions of lands on different layers of printed boards.

Purchasers also receive a 30-day trial of the IPC-7351 Land Pattern Wizard developed by Mentor Graphics, which is an advanced version of the IPC-7351B Land Pattern Calculator. The IPC-7351B Land Pattern Wizard tool enables users to not only save their land patterns within new land pattern library files, but also to instantly export land patterns to their preferred CAD format, such as Allegro, Board Station, Expedition, PADS, CADSTAR, OrCAD, Pantheon and P-CAD. 102 pages. Released June 2010."

5.5 Disclaimer

TRINAMIC Motion Control GmbH & Co. KG does not authorize or warrant any of its products for use in life support systems, without the specific written consent of TRINAMIC Motion Control GmbH & Co. KG. Life support systems are equipment intended to support or sustain life, and whose failure to perform, when properly used in accordance with instructions provided, can be reasonably expected to result in personal injury or death.

Information given in this application note is believed to be accurate and reliable. However, no responsibility is assumed for the consequences of its use nor for any infringement of patents or other rights of third parties that may result from its use.

Specifications are subject to change without notice.

All trademarks used are property of their respective owners.

6 Revision History

Version	Date	Author	Description
V1.00	20.05.2017	SK	V1.00 release version

Table 3: Document Revision

