
TMC2160 DATASHEET

Universal high voltage driver for two-phase bipolar stepper motor. stealthChop™ for quiet movement. External MOSFETs for up to 20A motor current per coil. With Step/Dir Interface and SPI.

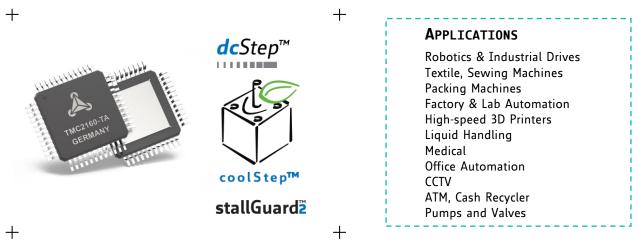


FEATURES AND BENEFITS

2-phase stepper motors up to 20A coil current (external MOSFETs) Step/Dir Interface with microstep interpolation microPlyer™ Voltage Range 8 ... 60V DC SPI Interface Highest Resolution 256 microsteps per full step stealthChop2™ for quiet operation and smooth motion Resonance Dampening for mid-range resonances spreadCycle™ highly dynamic motor control chopper dcStep™ load dependent speed control stallGuard2™ high precision sensorless motor load detection coolStep™ current control for energy savings up to 75% Passive Braking and freewheeling mode Full Protection & Diagnostics Compact Size 9x9mm² TQFP48 package

DESCRIPTION

The TMC2160 is a high-power stepper motor driver IC with SPI interface. It features industries' most advanced stepper motor driver with simple Step / Direction interface. Using external transistors, highly dynamic, high torque drives can be realized. Based on TRINAMICs sophisticated spreadCycle and stealthChop choppers, the driver ensures absolutely noiseless operation combined with maximum efficiency and best motor torque. High integration, high energy efficiency and a small form factor enable miniaturized and scalable systems for cost effective solutions. The fully compatible TMC5160 offers an additional motion controller to make stepper motor control even easier.

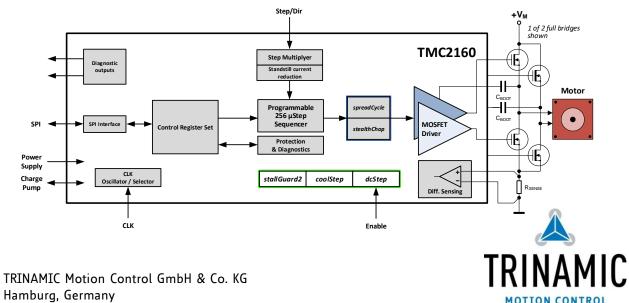


BLOCK DIAGRAM


APPLICATION EXAMPLES: HIGH VOLTAGE – MULTIPURPOSE USE

The TMC2160 scores with advanced motor commutation algorithms, combined with powerful external MOSFET driver stages, and high-quality current regulation. It offers a versatility that covers a wide spectrum of applications from battery powered, high efficiency systems up to embedded applications with 20A motor current per coil. Based on TRINAMICs unique features stallGuard2, coolStep, dcStep, spreadCycle, and stealthChop, the TMC2160 optimizes drive performance. It trades off velocity vs. motor torque, optimizes energy efficiency, smoothness of the drive, and noiselessness. The small form factor of the TMC2160 keeps costs down and allows for miniaturized layouts. Extensive support at the chip, board, and software levels enables rapid design cycles and fast time-to-market with competitive products. High energy efficiency and reliability deliver cost savings in related systems such as power supplies and cooling. For smaller designs, the compatible, integrated TMC2130 driver provides 1.4A of motor current.

MINIATURIZED DESIGN FOR ONE STEPPER MOTOR



DESIGN FOR DEMANDING APPLICATIONS WITH S-SHAPED RAMP PROFILES

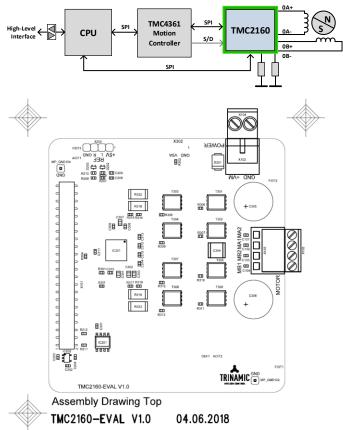

In this application, the CPU initializes the TMC2160 motor driver via SPI interface and controls motor movement by sending step and direction signals. A real time software realizes motion control.

The CPU initializes the TMC4361 motion controller and the TMC2160. Thereafter, it sends target positions to the TMC4361. Now, the TMC4361 takes control over the TMC2160. Combining the TMC4361 and the TMC2160 offers diverse possibilities for demanding applications including servo drive features.

The TMC2160-EVAL is part of TRINAMICs universal evaluation board system which provides a convenient handling of the hardware as well as a user-friendly software tool for evaluation. The TMC2160 evaluation board system consists of three parts: LANDUNGSBRÜCKE (base board), ESELSBRÜCKE (connector board including several test points), and TMC2160-EVAL.

ORDER CODES

Order code	Description	Size [mm ²]
TMC2160-TA	stepper controller/driver for external MOSFETs; TQFP48	9 x 9
TMC2160-TA-T	-T denotes tape on reel packing	
TMC2160-EVAL	Evaluation board for TMC2160 two phase stepper motor controller/driver	85 x 55
LANDUNGSBRÜCKE	Baseboard for TMC2160-EVAL and further evaluation boards.	85 x 55
ESELSBRÜCKE	Connector board for plug-in evaluation board system.	61 x 38

Table of Contents

1	PRI	NCIPLES OF OPERATION5
	1.1	Key Concepts6
	1.2	CONTROL INTERFACES
	1.3	SOFTWARE7
	1.4	MOVING THE MOTOR8
	1.5	AUTOMATIC STANDSTILL POWER DOWN8
	1.6	STEALTHCHOP2 & SPREADCYCLE DRIVER8
	1.7	STALLGUARD2 – MECHANICAL LOAD SENSING9
	1.8	COOLSTEP – LOAD ADAPTIVE CURRENT
	1.9	dcStep – Load Dependent Speed Control 9
2	PIN	ASSIGNMENTS11
	2.1	PACKAGE OUTLINE11
	2.2	SIGNAL DESCRIPTIONS11
3	SAM	IPLE CIRCUITS14
	3.1	STANDARD APPLICATION CIRCUIT14
	3.2	EXTERNAL GATE VOLTAGE REGULATOR15
	3.3	CHOOSING MOSFETS AND SLOPE16
	3.4	TUNING THE MOSFET BRIDGE18
4	SPI	INTERFACE
	4.1	SPI DATAGRAM STRUCTURE21
	4.2	SPI SIGNALS22
	4.3	TIMING23
5	REG	ISTER MAPPING24
	5.1	GENERAL CONFIGURATION REGISTERS25
	5.2	VELOCITY DEPENDENT DRIVER FEATURE
		DL REGISTER SET
	5.3	MOTOR DRIVER REGISTERS
6	STE	ALTHCHOP™44
	6.1	AUTOMATIC TUNING44
	6.2	STEALTHCHOP OPTIONS47
	6.3	STEALTHCHOP CURRENT REGULATOR
	6.4	VELOCITY BASED SCALING
	6.5	COMBINING STEALTHCHOP AND SPREADCYCLE
	6.6	FLAGS IN STEALTHCHOP51
	6.7	FREEWHEELING AND PASSIVE BRAKING53
7		EADCYCLE AND CLASSIC CHOPPER 55
-		
	7.1 7.2	SPREADCYCLE CHOPPER56 CLASSIC CONSTANT OFF TIME CHOPPER59
8	•	ECTING SENSE RESISTORS
9		OCITY BASED MODE CONTROL63
-		
1(ע נ	IAGNOSTICS AND PROTECTION65
	10.1	TEMPERATURE SENSORS65
		CUOPE DESERVICE (F
	10.2 10.3	SHORT PROTECTION

11.1 11.2 11.3 11.4 11.5	STALLGUARD2 UPDATE RATE AND FILTER71 DETECTING A MOTOR STALL
12	COOLSTEP OPERATION
12.1 12.2 12.3 13	USER BENEFITS72 SETTING UP FOR COOLSTEP72
13.2 13.3	
14	DIAG OUTPUTS78
15	DCSTEP79
15.1 15.2 15.3 15.4	DESIGNING-IN DCSTEP79 STALL DETECTION IN DCSTEP MODE80
16	SINE-WAVE LOOK-UP TABLE84
16.1 16.2	MICROSTEP TABLE
17	EMERGENCY STOP85
18	QUICK CONFIGURATION GUIDE
19	GETTING STARTED90
19.1	INITIALIZATION EXAMPLES90
20	STANDALONE OPERATION91
21	EXTERNAL RESET93
22	CLOCK OSCILLATOR AND INPUT93
22.1 22.2	
23	ABSOLUTE MAXIMUM RATINGS
24	ELECTRICAL CHARACTERISTICS
24.1 24.2 24.3	DC AND TIMING CHARACTERISTICS
25	LAYOUT CONSIDERATIONS99
25.1 25.2 25.3 25.4	WIRING GND99

STALLGUARD2 LOAD MEASUREMENT...68

26 PACKAGE MECHANICAL DATA......102

28	ESD SENSITIVE DEVICE	105
27	DISCLAIMER	105
26.2	PACKAGE CODES	104
26.1	DIMENSIONAL DRAWINGS TQFP48-EP	102

29	TABLE OF FIGURES	106
30	REVISION HISTORY	107
31	REFERENCES	107

1 Principles of Operation

The TMC2160 driver chip is an intelligent power component interfacing between a motion controller and a high-power stepper motor. It uses stealthChop, dcStep, coolStep, and stallGuard2 automatically to optimize every motor movement. The TMC2160 ideally extends the TMC2100 and TMC2130 family to higher voltages and higher motor currents.

THE TMC2160 OFFERS TWO BASIC MODES OF OPERATION:

MODE 1: Step & Direction Driver

An external high-performance S-ramp motion controller like the TMC4361 or a central CPU generates step & direction signals synchronized to other components like additional motors within the system. The TMC2160 takes care of intelligent current and mode control and delivers feedback on the state of the motor. The microPlyer automatically smoothens motion.

MODE 2: Simple Step & Direction Driver

The TMC2160 positions the motor based on step & direction signals. The microPlyer automatically smoothens motion. No CPU interaction is required; configuration is done by hardware pins. Basic standby current control can be done by the TMC2160. Optional feedback signals allow error detection and synchronization. Enable this mode by tying pin SPI_MODE low.

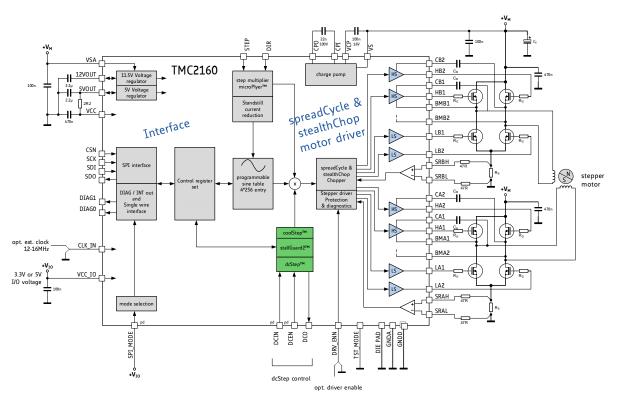


Figure 1.1 TMC2160 STEP/DIR application diagram

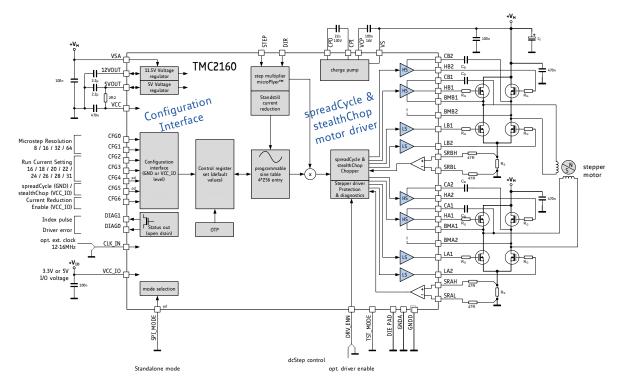


Figure 1.2 TMC2160 standalone driver application diagram

1.1 Key Concepts

The TMC2160 implements advanced features which are exclusive to TRINAMIC products. These features contribute toward greater precision, greater energy efficiency, higher reliability, smoother motion, and cooler operation in many stepper motor applications.

- **stealthChop2™** No-noise, high-precision chopper algorithm for inaudible motion and inaudible standstill of the motor. Allows faster motor acceleration and deceleration than stealthChop[™] and extends stealthChop to low stand still motor currents.
- *spreadCycle*[™] High-precision chopper algorithm for highly dynamic motion and absolutely clean current wave. Low noise, low resonance and low vibration chopper.
- *dcStep*[™] Load dependent speed control. The motor moves as fast as possible and never loses a step.
- stallGuard2[™] Sensorless stall detection and mechanical load measurement.
- *coolStep*[™] Load-adaptive current control reducing energy consumption by as much as 75%.
- *microPlyer*[™] Microstep interpolator for obtaining full 256 microstep smoothness with lower resolution step inputs starting from fullstep

In addition to these performance enhancements, TRINAMIC motor drivers offer safeguards to detect and protect against shorted outputs, output open-circuit, overtemperature, and undervoltage conditions for enhancing safety and recovery from equipment malfunctions.

1.2 Control Interfaces

The TMC2160 supports an SPI interface for parameter setting and diagnostics. Additionally, a standalone mode is provided for pure STEP/DIR operation without use of the serial interface. Selection of the actual interface is done via the configuration pin SPI_MODE, which can be hardwired to GND or VCC_IO depending on the desired interface.

1.2.1 SPI Interface

The SPI interface is a bit-serial interface synchronous to a bus clock. For every bit sent from the bus master to the bus slave another bit is sent simultaneously from the slave to the master. Communication between an SPI master and the TMC2160 slave always consists of sending one 40-bit command word and receiving one 40-bit status word.

The SPI command rate typically is a few commands per complete motor motion.

1.3 Software

From a software point of view the TMC2160 is a peripheral with a number of control and status registers. Most of them can either be written only or read only. Some of the registers allow both read and write access. In case read-modify-write access is desired for a write only register, a shadow register can be realized in master software.

1.4 Moving the Motor

1.4.1 STEP/DIR Interface


The motor is controlled by a step and direction input. Active edges on the STEP input can be rising edges or both rising and falling edges as controlled by another mode bit (*dedge*). Using both edges cuts the toggle rate of the STEP signal in half, which is useful for communication over slow interfaces such as optically isolated interfaces. On each active edge, the state sampled from the DIR input determines whether to step forward or back. Each step can be a fullstep or a microstep, in which there are 2, 4, 8, 16, 32, 64, 128, or 256 microsteps per fullstep. A step impulse with a low state on DIR increases the microstep counter and a high state decreases the counter by an amount controlled by the microstep resolution. An internal table translates the counter value into the sine and cosine values which control the motor current for microstepping.

1.4.2 SPI direct mode

The direct mode allows control of both motor coil currents and polarity via SPI. It mainly is intended for use with a dedicated external motion controller IC with integrated sequencer. The sequencer applies sine and cosine waves to the motor coils. This mode is specially designed for combination with the TMC4361 motion controller.

1.5 Automatic Standstill Power Down

An automatic current reduction drastically reduces application power dissipation and cooling requirements. Modify stand still current, delay time and decay via register settings. Automatic freewheeling and passive motor braking are provided as an option for stand still. Passive braking reduces motor standstill power consumption to zero, while still providing effective dampening and braking! An option for faster detection of standstill is provided for use with highly frequent motion commands.

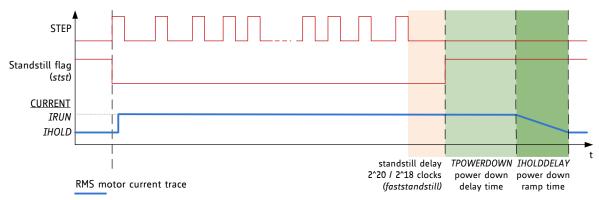



1.6 stealthChop2 & spreadCycle Driver

stealthChop is a voltage chopper based principle. It especially guarantees that the motor is absolutely quiet in standstill and in slow motion, except for noise generated by ball bearings. Unlike other voltage mode choppers, stealthChop2 does not require any configuration. It automatically learns the best settings during the first motion after power up and further optimizes the settings in subsequent motions. An initial homing sequence is sufficient for learning. Optionally, initial learning parameters can be pre-configured via the interface. stealthChop2 allows high motor dynamics, by reacting at once to a change of motor velocity.

For highest dynamic applications, spreadCycle is an option to stealthChop2. It can be enabled via input pin (standalone mode) or via SPI interface. stealthChop2 and spreadCycle may even be used in a combined configuration for the best of both worlds: stealthChop2 for no-noise stand still, silent and smooth performance, spreadCycle at higher velocity for high dynamics and highest peak velocity at low vibration.

spreadCycle is an advanced cycle-by-cycle chopper mode. It offers smooth operation and good resonance dampening over a wide range of speed and load. The spreadCycle chopper scheme automatically integrates and tunes fast decay cycles to guarantee smooth zero crossing performance.

Benefits of using stealthChop2:

- Significantly improved microstepping with low cost motors
- Motor runs smooth and quiet
- Absolutely no standby noise
- Reduced mechanical resonance yields improved torque

1.7 stallGuard2 – Mechanical Load Sensing

stallGuard2 provides an accurate measurement of the load on the motor. It can be used for stall detection as well as other uses at loads below those which stall the motor, such as coolStep load-adaptive current reduction. This gives more information on the drive allowing functions like sensorless homing and diagnostics of the drive mechanics.


1.8 coolStep – Load Adaptive Current Control

coolStep drives the motor at the optimum current. It uses the stallGuard2 load measurement information to adjust the motor current to the minimum amount required in the actual load situation. This saves energy and keeps the components cool.

Benefits are:

- Energy efficiency power consumption decreased up to 75%
 - Motor generates less heat improved mechanical precision
- Less or no cooling improved reliability
- Use of smaller motor less torque reserve required \rightarrow cheaper motor does the job

Figure 1.4 shows the efficiency gain of a 42mm stepper motor when using coolStep compared to standard operation with 50% of torque reserve. coolStep is enabled above 60RPM in the example.

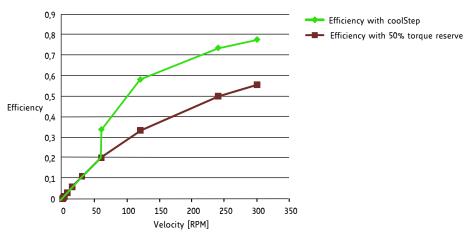



1.9 dcStep – Load Dependent Speed Control

dcStep allows the motor to run near its load limit and at its velocity limit without losing a step. If the mechanical load on the motor increases to the stalling load, the motor automatically decreases velocity so that it can still drive the load. With this feature, the motor will never stall. In addition to the increased torque at a lower velocity, dynamic inertia will allow the motor to overcome mechanical overloads by decelerating. dcStep directly integrates with the ramp generator, so that the target position will be reached, even if the motor velocity needs to be decreased due to increased mechanical load. A dynamic range of up to factor 10 or more can be covered by dcStep without any

step loss. By optimizing the motion velocity in high load situations, this feature further enhances overall system efficiency.

Benefits are:

- Motor does not loose steps in overload conditions
- Application works as fast as possible
- Highest possible acceleration automatically
- Highest energy efficiency at speed limit
- Highest possible motor torque using fullstep drive
- Cheaper motor does the job

2 Pin Assignments

2.1 Package Outline

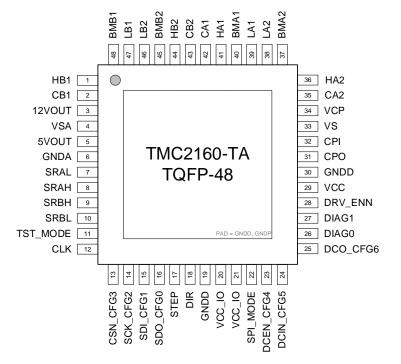


Figure 2.1 TMC2160-TA package and pinning TQFP-EP 48 (7x7mm² body, 9x9mm² with leads)

2.2 Signal Descriptions

Pin	TQFP	Туре	Function
HB1	1		High side gate driver output.
CB1	2		Bootstrap capacitor positive connection.
12VOUT	3		Output of internal 11.5V gate voltage regulator and supply pin of low side gate drivers. Attach 2.2μ F to 10μ F ceramic capacitor to GND plane near to pin for best performance. Use at least 10 times more capacity than for bootstrap capacitors. In case an external gate voltage supply is available, tie VSA and 12VOUT to the external supply.
VSA	4		Analog supply voltage for 11.5V and 5V regulator. Normally tied to VS. Provide a 100nF filtering capacitor.
5VOUT	5		Output of internal 5V regulator. Attach 2.2μ F to 10μ F ceramic capacitor to GNDA near to pin for best performance. Output for VCC supply of the chip.
GNDA	6		Analog GND. Connect to GND plane near pin.
SRAL	7	AI	Sense resistor GND connection for phase A. Connect to the GND side of the sense resistor in order to compensate for voltage drop on the GND interconnection.


Pin	TQFP	Туре	Function
SRAH	8	AI	Sense resistor for phase A. Connect to the upper side of the sense resistor. A Kelvin connection is preferred with high motor currents. Symmetrical RC-Filtering may be added for SRAL and SRAH to eliminate high frequency switching spikes from other drives or switching of coil B.
SRBH	9	AI	Sense resistor for phase B. Connect to the upper side of the sense resistor. A Kelvin connection is preferred with high motor currents. Symmetrical RC-Filtering may be added for SRBL and SRBH to eliminate high frequency switching spikes from other drives or switching of coil A.
SRBL	10	AI	Sense resistor GND connection for phase B. Connect to the GND side of the sense resistor in order to compensate for voltage drop on the GND interconnection.
TST_MODE	11	DI	Test mode input. Tie to GND using short wire.
CLK	12	DI	CLK input. Tie to GND using short wire for internal clock or supply external clock. Internal clock-fail over circuit protects against loss of external clock signal.
CSN_CFG3	13	DI	SPI chip select input (negative active) (SPI_MODE=1) or Configuration input (SPI_MODE=0)
SCK_CFG2	14	DI	SPI serial clock input (SPI_MODE=1) or Configuration input (SPI_MODE=0)
SDI_CFG1	15	DI	SPI data input (SPI_MODE=1) or Configuration input (SPI_MODE=0) or Next address input (NAI) for single wire interface.
SDO_CFG0	16	DIO	SPI data output (tristate) (SPI_MODE=1) or Configuration input (SPI_MODE=0) or Next address output (NAO) for single wire interface.
STEP	17	DI	STEP input
DIR	18	DI	DIR input
GNDD	19, 30		Digital GND. Connect to GND plane near pin.
VCC_IO	20, 21		3.3V to 5V IO supply voltage for all digital pins.
SPI_MODE	22	DI (pd)	Mode selection input. When tied low with SD_MODE=1, the chip is in standalone mode and pins have their CFG functions. When tied high, the SPI interface is enabled. Integrated pull down resistor.
DCEN_ CFG4	23	DI (pd)	dcStep enable input (SD_MODE=1, SPI_MODE=1) – leave open or tie to GND for normal operation in this mode (no dcStep). Configuration input (SPI_MODE=0)
DCIN_ CFG5	24	DI (pd)	dcStep gating input for axis synchronization (SD_MODE=1, SPI_MODE=1) or Configuration input (SPI_MODE=0)
DCO_ CFG6	25	DIO	dcStep ready output (SD_MODE=1). With SD_MODE=0, pull to GND or VCC_IO
DIAGO	26	DO (pu+ pd)	Diagnostics output DIAG0. Interrupt output Use external pullup resistor with 47k or less in open drain mode.
DIAG1	27	DO (pd)	Diagnostics output DIAG1. Use external pullup resistor with 47k or less in open drain mode.
DRV_ENN	28	DI	Enable input. The power stage becomes switched off (all motor outputs floating) when this pin becomes driven to a high level.

Pin	TQFP	Туре	Function
vcc	29		5V supply input for digital circuitry within chip. Provide 100nF or bigger capacitor to GND (GND plane) near pin. Shall be supplied by 5VOUT. A 2.2 or 3.3 Ohm resistor is recommended for decoupling noise from 5VOUT. When using an external supply, make sure, that VCC comes up before or in parallel to 5VOUT or VCC_IO, whichever comes up later!
CPO	31		Charge pump capacitor output.
СРІ	32		Charge pump capacitor input. Tie to CPO using 22nF, 100V capacitor.
VS	33		Motor supply voltage. Provide filtering capacity near pin with short loop to GND plane. Must be tied to the positive bridge supply voltage.
VCP	34		Charge pump voltage. Tie to VS using 100nF capacitor.
CA2	35		Bootstrap capacitor positive connection.
HA2	36		High side gate driver output.
BMA2	37		Bridge Center and bootstrap capacitor negative connection.
LA2	38		Low side gate driver output.
LA1	39		Low side gate driver output.
BMA1	40		Bridge Center and bootstrap capacitor negative connection.
HA1	41		High side gate driver output.
CA1	42		Bootstrap capacitor positive connection.
CB2	43		Bootstrap capacitor positive connection.
HB2	44		High side gate driver output.
BMB2	45		Bridge Center and bootstrap capacitor negative connection.
LB2	46		Low side gate driver output.
LB1	47		Low side gate driver output.
BMB1	48		Bridge Center and bootstrap capacitor negative connection.
Exposed die pad	-		Connect the exposed die pad to a GND plane. Provide as many as possible vias for heat transfer to GND plane. Serves as GND pin for the low side gate drivers. Ensure low loop inductivity to sense resistor GND.

*(pd) denominates a pin with pulldown resistor * All digital pins DI, DIO and DO use VCC_IO level and contain protection diodes to GND and VCC_IO * All digital inputs DI and DIO have internal Schmitt-Triggers

3 Sample Circuits

The following sample circuits show the required external components in different operation and supply modes. The connection of the bus interface and further digital signals are left out for clarity.

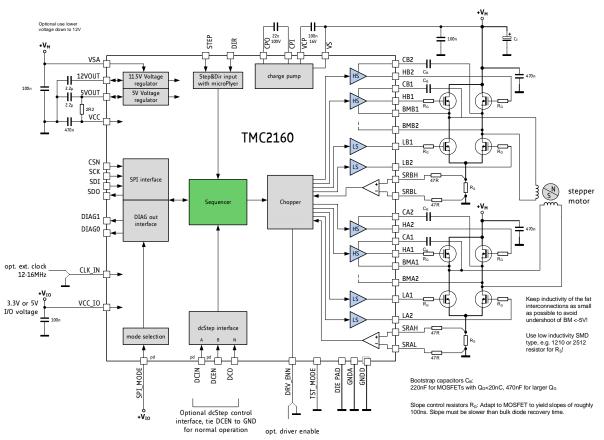

3.1 Standard Application Circuit



The standard application circuit uses a minimum set of additional components. Eight MOSFETs are selected for the desired current, voltage and package type. Two sense resistors set the motor coil current. See chapter 8 to choose the right value for sense resistors. Use low ESR capacitors for filtering the power supply. A minimum capacity of 100µF per ampere of coil current near to the power bridge is recommended for best performance. The capacitors need to cope with the current ripple caused by chopper operation. Current ripple in the supply capacitors also depends on the power supply internal resistance and cable length. VCC_IO can be supplied from 5VOUT, or from an external source, e.g. a 3.3V regulator. In order to minimize linear voltage regulator power dissipation of the internal 5V and 11.5V voltage regulators in applications where VM is high, a different (lower) supply voltage should be used for VSA (see chapter 3.2).

Basic layout hints

Place sense resistors and all filter capacitors as close as possible to the power MOSFETs. Place the TMC2160 near to the MOSFETs and use short interconnection lines in order to minimize parasitic trace inductance. Use a solid common GND for all GND, GNDA and GNDD connections, also for sense resistor GND. Connect 5VOUT filtering capacitor directly to 5VOUT and GNDA pin. See layout hints for more details. Low ESR electrolytic capacitors are recommended for VS filtering.

Attention

In case VSA is supplied by a different voltage source, make sure that VSA does not drop out during motor operation. Stop and disable the motor before VSA power down. This is not necessary, when VSA voltage is derived from VS supply, as both supplies go down in parallel in this case.

3.2 External Gate Voltage Regulator

At high supply voltages like 48V, the internal gate voltage regulator and the internal 5V regulator have considerable power dissipation, especially with high MOSFET gate charges, high chopper frequency or high system clock frequency >12MHz. A good thermal coupling of the heat slug to the system PCB GND plane is required to dissipate heat. Still, the thermal thresholds will be lowered significantly by self-heating. To reduce power dissipation, supply an external gate driver voltage to the TMC2160. Figure 3.2 shows the required connection. The internal gate voltage regulator becomes disabled in this constellation. 12V +/-1V are recommended for best results.

12V Gate Voltage

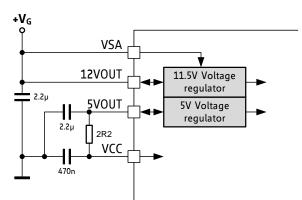


Figure 3.2 External gate voltage supply

Hint

With MOSFETs above 50nC of total gate charge, chopper frequency >40kHz, or at clock frequency >12MHz, it is recommended to use a VSA supply not higher than 40V.

3.3 Choosing MOSFETs and Slope

The selection of power MOSFETs depends on a number of factors, like package size, on-resistance, voltage rating and supplier. It is not true, that larger, lower RDSon MOSFETs will always be better, as a larger device also has higher capacitances and may add more ringing in trace inductance and power dissipation in the gate drive circuitry. Adapt the MOSFETs to the required motor voltage (adding 5-10V of reserve to the peak supply voltage) and to the desired maximum current, in a way that resistive power dissipation still is low for the thermal capabilities of the chosen MOSFET package. The TMC2160 drives the MOSFET gates with roughly 10V, so normal, 10V specified types are sufficient. Logic level FETs (4.5V specified RDSon) will also work, but may be more critical with regard to bridge cross-conduction due to lower $V_{GS(th)}$.

The gate drive current and MOSFET gate resistors R_G (optional) determine switching behavior and should basically be adapted to the MOSFET gate-drain charge (Miller charge). Figure 3.3 shows the influence of the Miller charge on the switching event. Figure 3.4 additionally shows the switching events in different load situations (load pulling the output up or down), and the required bridge brake-before-make time.

The following table shall serve as a thumb rule for programming the MOSFET driver current (*DRVSTRENGTH* setting) and the selection of gate resistors:

MOSFET MILLER CHARGE VS. DRVSTRENGTH AND R _G				
Miller Charge $DRVSTRENGTH$ Value of $R_{G}[\Omega]$				
[nC] (typ.)	setting			
<10	0	≤ 15		
1020	0 or 1	≤ 10		
2040	1 or 2	≤ 7.5		
4060	2 or 3	≤ 5		
>60	3	≤ 2.7		

The TMC2160 provides increased gate-off drive current to avoid bridge cross-conduction induced by high dV/dt. This protection will be less efficient with gate resistors exceeding the values given in the table. Therefore, for larger values of R_{G} , a parallel diode may be required to ensure keeping the MOSFET safely off during switching events.

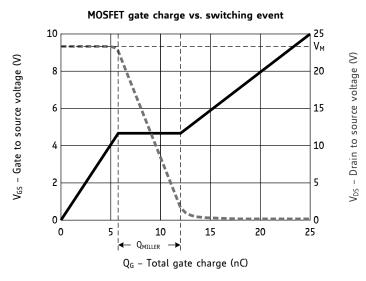


Figure 3.3 Miller charge determines switching slope

Hints

- Choose modern MOSFETs with fast and soft recovery bulk diode and low reverse recovery charge.

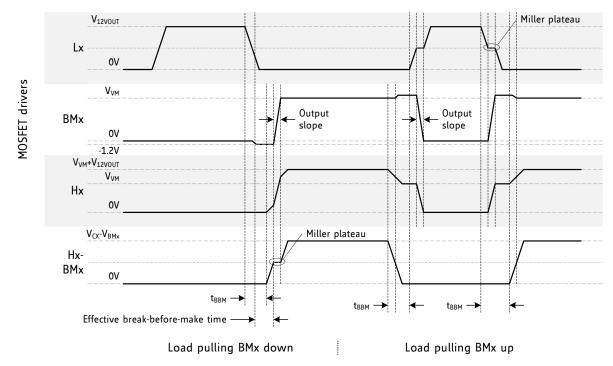


Figure 3.4 Slopes, Miller plateau and blank time

The following <i>DRV_CONF</i> parameters allow adapting the driver to the MOSFET bridge:					
Parameter	Description	Setting	Comment		
BBMTIME	Break-before-make time setting to ensure non- overlapping switching of high-side and low-side MOSFETs. <i>BBMTIME</i> allows fine tuning of times in increments shorter than a clock period.	024	time[ns]≈ 100ns*32/(32-BBMTIME)		
	For higher times, use BBMCLKS.		Ensure -30% headroom Reset Default: 0		
BBMCLKS	Like BBMTIME, but in multiple of a clock cycle. The longer setting rules (BBMTIME vs. BBMCLKS).	015	0: off Reset Default: OTP 4 or 2		
DRV_ STRENGTH	Selection of gate driver current. Adapts the gate driver current to the gate charge of the external MOSFETs.	03	Reset Default = 2		
FILT_ISENSE	Filter time constant of sense amplifier to suppress ringing and coupling from second coil operation <i>Hint:</i> Increase setting if motor chopper noise occurs due to cross-coupling of both coils. (<i>Reset Default = %00</i>)	03	00: -100ns (reset default) 01: -200ns 10: -300ns 11: -400ns		

DRV_CONF Parameters

Use the lowest gate driver strength setting *DRVSTRENGTH* giving favorable switching slopes, before increasing the value of the gate series resistors. A slope time of nominal 40ns to 80ns is absolutely sufficient and will normally be covered by the shortest possible Break-Before-Make time setting (*BBMTIME*=0, *BBMCLKS*=0).

In case slower slopes have to be used, e.g. with large MOSFETs, ensure that the break-before-make time (*BBMTIME*, optionally use *BBMCLKS* for times >200ns) sufficiently covers the switching event, in order to avoid bridge cross conduction. The shortest break-before-make time, safely covering the switching event, gives best results. Add roughly 30% of reserve, to cover production stray of MOSFETs and driver.

3.4 Tuning the MOSFET Bridge


A clean switching event is favorable to ensure low power dissipation and good EMC behavior. Unsuitable layout or components endanger stable operation of the circuit. Therefore, it is important to understand the effect of parasitic trace inductivity and MOSFET reverse recovery.

Stray inductance in power routing will cause ringing whenever the opposite MOSFET is in diode conduction prior to switching on a low-side MOSFET or high-side MOSFET. Diode conduction occurs during break-before make time when the load current is inverse to the prior bridge polarity, i.e. following a fast decay cycle. The MOSFET bulk diode has a certain, type specific reverse recovery time and charge. This time typically is in the range of a few 10ns. During reverse recovery time, the bulk diode will cause high current flow across the bridge. This current is taken from the power supply filter capacitors (see thick lines Figure 3.5). Once the diode opens parasitic inductance tries to keep the current flowing. A high, fast slope results and leads to ringing in all parasitic inductivities (see Figure 3.6). This may lead to bridge voltage undershooting the GND level. It must be ensured, that the driver IC does not see spikes on its BM pins to GND going below -5V. Measure the voltage directly at the driver pins to driver GND. The amount of undershooting depends on energy stored in parasitic inductivities from low side drain to low side source and via the sense resistor RS to GND.

To improve behavior


- Tune MOSFET switching slopes (measure without inductive load) to be slower than the MOSFET bulk diode reverse recovery time. This will reduce cross conduction.
- Add optional resistors and capacitors to ensure clean switching by minimizing ringing and reliable operation. Figure 3.5 shows different options.
- Some MOSFETs eliminate this problem by integrating a Schottky diode from source to drain.

Figure 3.7 shows performance of the basic circuit after adapting switching slope and adding 1nF bridge output capacitors.

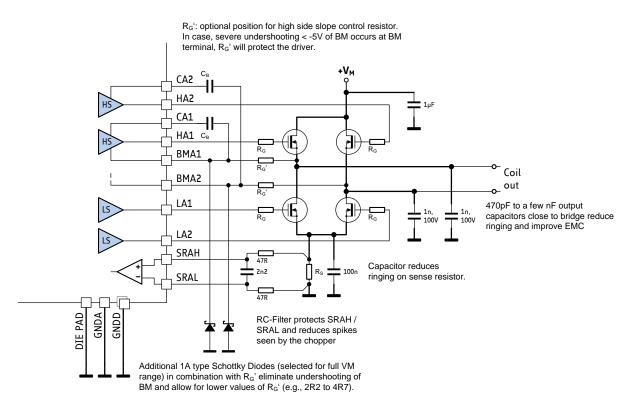

Decide use and value of the additional components based on measurements of the actual circuit using the final layout!

Figure 3.5 Bridge protection options for power routing inductivity

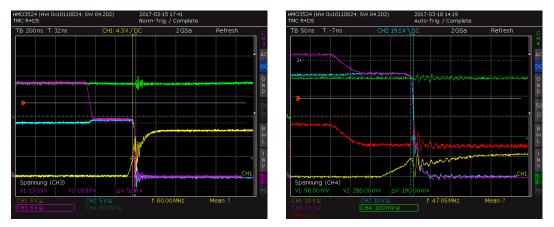



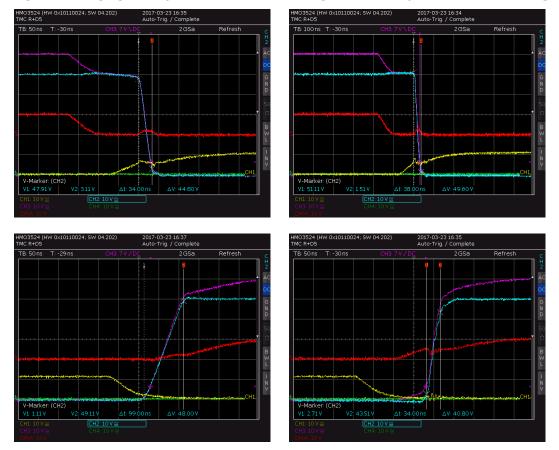


Figure 3.7 Switching event with optimized components (without / after bulk diode conduction)

BRIDGE OPTIMIZATION EXAMPLE

A stepper driver for 6A of motor current has been designed using the MOSFET AOD4126 in the standard schematic.

The MOSFETs have a low gate capacitance and offer roughly 50ns slope time at the lowest driver strength setting. At lowest driver strength setting, switching quality is best (Figure 3.6), but still shows a lot of ringing. Low side gate resistors have been added to slightly increase switching slope time following high-side bulk diode conduction by increasing the effect of Gate-Drain (Miller) charge. High side gate resistors have been added for symmetry. Tests showed, that 1nF output capacitors dramatically reduce ringing of the power bridge following bulk diode conduction (Figure 3.7). Figure 3.8 shows the actual components and values after optimization.

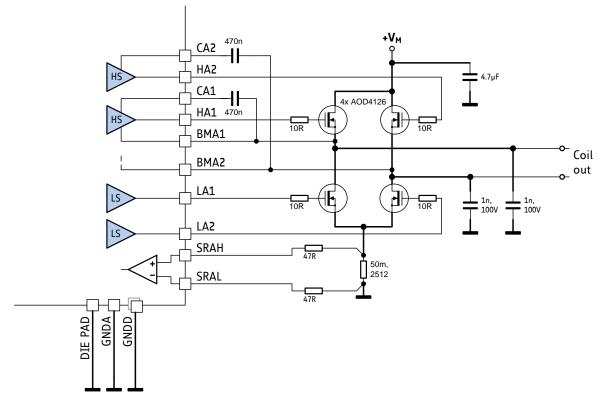


Figure 3.8 Example for bridge with tuned components (see scope shots)

Hints

- Tune the bridge layout for minimum loop inductivity. A compact layout is best.
- Keep MOSFET gate connections short and straight and avoid loop inductivity between BM and corresponding HS driver pin. Loop inductance is minimized with parallel traces, or adjacent traces on adjacent layers. A wider trace reduces inductivity (don't use minimum trace width).
- Minimize the length of the sense resistor to low side MOSFET source, and place the TMC2160 near the sense resistor's GND connection, with its GND connections directly connected to the same GND plane.
- Optimize switching behavior by tuning gate current setting and gate resistors. Add MOSFET bridge output capacitors (470pF to a few nF) to reduce ringing.
- Measure the performance of the bridge by probing BM pins directly at the bridge or at the TMC2160 using a short GND tip on the scope probe rather than a GND cable, if available.

4 SPI Interface

4.1 SPI Datagram Structure

The TMC2160 uses 40 bit SPITM (Serial Peripheral Interface, SPI is Trademark of Motorola) datagrams for communication with a microcontroller. Microcontrollers which are equipped with hardware SPI are typically able to communicate using integer multiples of 8 bit. The NCS line of the device must be handled in a way, that it stays active (low) for the complete duration of the datagram transmission.

Each datagram sent to the device is composed of an address byte followed by four data bytes. This allows direct 32 bit data word communication with the register set. Each register is accessed via 32 data bits even if it uses less than 32 data bits.

For simplification, each register is specified by a one-byte address:

- For a read access the most significant bit of the address byte is 0.
- For a write access the most significant bit of the address byte is 1.

Most registers are write only registers, some can be read additionally, and there are also some read only registers.

SPI DATAGRAM STRUCTURE					
MSB (transmitted first)		40 bit		LSB (transmitted last)	
39				0	
→ 8 bit address ← 8 bit SPI status	$\leftrightarrow \rightarrow$ 32 bit data				
39 32		31	0		
 → to TMC2160 RW + 7 bit address ← from TMC2160 8 bit SPI status 	8 bit data	8 bit data	8 bit data	8 bit data	
39 / 38 32	31 24	23 16	15 8	7 0	
w 3832	3128 2724	2320 1916	1512 118	74 30	
3 3 3 3 3 3 3 9 8 7 6 5 4 3 2			1 1 1 1 1 1 1 5 5 4 3 2 1 0 9 8	7 6 5 4 3 2 1 0	

4.1.1 Selection of Write / Read (WRITE_notREAD)

The read and write selection is controlled by the MSB of the address byte (bit 39 of the SPI datagram). This bit is 0 for read access and 1 for write access. So, the bit named W is a WRITE_notREAD control bit. The active high write bit is the MSB of the address byte. So, 0x80 has to be added to the address for a write access. The SPI interface always delivers data back to the master, independent of the W bit. The data transferred back is the data read from the address which was transmitted with the *previous* datagram, if the previous access was a read access. If the previous access was a write access, then the data read back mirrors the previously received write data. So, the difference between a read and a write access is that the read access does not transfer data to the addressed register but it transfers the address only and its 32 data bits are dummies, and, further the following read or write access delivers back the data read from the address transmitted in the preceding read cycle.

A read access request datagram uses dummy write data. Read data is transferred back to the master with the subsequent read or write access. Hence, reading multiple registers can be done in a pipelined fashion.

Whenever data is read from or written to the TMC2160, the MSBs delivered back contain the SPI status, *SPI_STATUS*, a number of eight selected status bits.

Example:

For a read access to the register (*XACTUAL*) with the address 0x21, the address byte has to be set to 0x21 in the access preceding the read access. For a write access to the register (*IHOLD_IRUN*), the address byte has to be set to 0x80 + 0x10 = 0x90. For read access, the data bit might have any value (-). So, one can set them to 0.

action	data sent to TMC2160	data received from TMC2160
read TSTEP	→ 0x120000000	\leftarrow 0xSS & unused data
read TSTEP	→ 0x120000000	← OxSS & TSTEP
write IHOLD_IRUN:= 0x00011F10	\rightarrow 0xA700ABCDEF	← OxSS & TSTEP
write IHOLD_IRUN:= 0x00021807	→ 0xA700123456	← 0xSS00011F10

*) S: is a placeholder for the status bits SPI_STATUS

4.1.2 SPI Status Bits Transferred with Each Datagram Read Back

New status information becomes latched at the end of each access and is available with the next SPI transfer.

SPI_	SPI_STATUS - status flags transmitted with each SPI access in bits 39 to 32					
Bit	Name	Comment				
7	Unused	Ignore this bit				
6	Unused	Ignore this bit				
5	Unused	Ignore this bit				
4	Unused	Ignore this bit				
3	standstill	DRV_STATUS[31] – 1: Signals motor stand still				
2	sg2	DRV_STATUS[24] – 1: Signals stallGuard flag active				
1	driver_error	GSTAT[1] – 1: Signals driver 1 driver error (clear by reading GSTAT)				
0	reset_flag	GSTAT[0] – 1: Signals, that a reset has occurred (clear by reading GSTAT)				

4.1.3 Data Alignment

All data are right aligned. Some registers represent unsigned (positive) values, some represent integer values (signed) as two's complement numbers, single bits or groups of bits are represented as single bits respectively as integer groups.

4.2 SPI Signals

The SPI bus on the TMC2160 has four signals:

- SCK bus clock input
- SDI serial data input
- SDO serial data output
- CSN chip select input (active low)

The slave is enabled for an SPI transaction by a low on the chip select input CSN. Bit transfer is synchronous to the bus clock SCK, with the slave latching the data from SDI on the rising edge of SCK and driving data to SDO following the falling edge. The most significant bit is sent first. A minimum of 40 SCK clock cycles is required for a bus transaction with the TMC2160.

If more than 40 clocks are driven, the additional bits shifted into SDI are shifted out on SDO after a 40-clock delay through an internal shift register. This can be used for daisy chaining multiple chips.

CSN must be low during the whole bus transaction. When CSN goes high, the contents of the internal shift register are latched into the internal control register and recognized as a command from the master to the slave. If more than 40 bits are sent, only the last 40 bits received before the rising edge of CSN are recognized as the command.

4.3 Timing

The SPI interface is synchronized to the internal system clock, which limits the SPI bus clock SCK to half of the system clock frequency. If the system clock is based on the on-chip oscillator, an additional 10% safety margin must be used to ensure reliable data transmission. All SPI inputs as well as the ENN input are internally filtered to avoid triggering on pulses shorter than 20ns. Figure 4.1 shows the timing parameters of an SPI bus transaction, and the table below specifies their values.

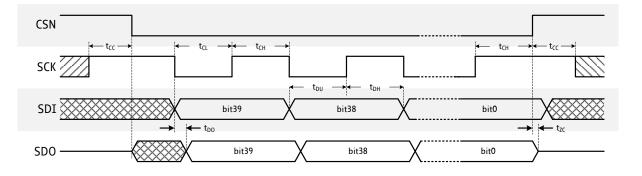


Figure 4.1 SPI timing

Hint Usually this SPI timing is referred to as SPI MODE 3

SPI interface timing	AC-Characteristics clock period: t _{CLK}							
Parameter	Symbol	Conditions	Min	Тур	Max	Unit		
SCK valid before or after change of CSN	t _{cc}		10			ns		
CSN high time	t _{сsн}	*) Min time is for synchronous CLK with SCK high one t _{CH} before CSN high only	t _{clk} *)	>2t _{CLK} +10		ns		
SCK low time	t _{CL}	*) Min time is for synchronous CLK only	t _{CLK} *)	>t _{CLK} +10		ns		
SCK high time	t _{сн}	*) Min time is for synchronous CLK only	t _{CLK} *)	>t _{CLK} +10		ns		
SCK frequency using internal clock	f _{scк}	assumes minimum OSC frequency			4	MHz		
SCK frequency using external 16MHz clock	f _{scк}	assumes synchronous CLK			8	MHz		
SDI setup time before rising edge of SCK	t _{DU}		10			ns		
SDI hold time after rising edge of SCK	t _{DH}		10			ns		
Data out valid time after falling SCK clock edge	t _{DO}	no capacitive load on SDO			t _{FILT} +5	ns		
SDI, SCK and CSN filter delay time	t _{FILT}	rising and falling edge	12	20	30	ns		

5 Register Mapping

This chapter gives an overview of the complete register set. Some of the registers bundling a number of single bits are detailed in extra tables. The functional practical application of the settings is detailed in dedicated chapters.

Note

- All registers become reset to 0 upon power up, unless otherwise noted. - Add 0x80 to the address **Addr** for write accesses!

NOTATION OF HEXADECIMAL AND BINARY NUMBERS			
0x	precedes a hexadecimal number, e.g. 0x04		
%	precedes a multi-bit binary number, e.g. %100		

NOTATION OF R/W FIELD	
R	Read only
W	Write only
R/W	Read- and writable register
R+C	Clear upon read

OVERVIEW REGISTER MAPPING

REGISTER	DESCRIPTION
General Configuration Registers	These registers contain global configuration global status flags interface configuration and I/O signal configuration
Velocity Dependent Driver Feature Control Register Set	This register set offers registers for - driver current control - setting thresholds for coolStep operation - setting thresholds for different chopper modes - setting thresholds for dcStep operation
Motor Driver Register Set	 This register set offers registers for setting / reading out microstep table and counter chopper and driver configuration coolStep and stallGuard2 configuration dcStep configuration reading out stallGuard2 values and driver error flags

5.1 General Configuration Registers

	1	1		(0x000x0F)
R/W	Addr	n	Register	Description / bit names
				Bit GCONF – Global configuration flags 0 recalibrate 1: Zero crossing recalibration during driver disable (via ENN or via TOFF setting) 1 faststandstill
				Timeout for step execution until standstill detection: 1: Short time: 2^18 clocks 0: Normal time: 2^20 clocks
				2 en_pwm_mode 1: stealthChop voltage PWM mode enabled (depending on velocity thresholds). Switch from off to on state while in stand-still and at IHOLD= nominal IRUN current, only.
				3 <i>multistep_filt</i> 1: Enable step input filtering for stealthChop optimization with external step source (default=1)
				4 shaft 1: Inverse motor direction
				 5 diag0_error 1: Enable DIAG0 active on driver errors: Over temperature (ot), short to GND (s2g), undervoltage chargepump (uv_cp) DIAG0 always shows the reset-status, i.e. is active low
RW	0x00	17	GCONF	during reset condition. 6 diag0_otpw 1: Enable DIAG0 active on driver over temperature prewarning (otpw)
				7 diag0_stall 1: Enable DIAG0 active on motor stall (set TCOOLTHRS before using this feature)
				8 <i>diag1_stall</i> 1: Enable DIAG1 active on motor stall (set <i>TCOOLTHRS</i> before using this feature)
				 9 diag1_index 1: Enable DIAG1 active on index position (microstep look up table position 0)
				10 diag1_onstate 1: Enable DIAG1 active when chopper is on (for the coil which is in the second half of the fullstep)
				11 diag1_steps_skipped 1: Enable output toggle when steps are skipped in dcStep mode (increment of LOST_STEPS). Do not enable in conjunction with other DIAG1 options.
				12diag0_int_pushpull0:DIAG0 is open collector output (active low)1:Enable DIAG0 push pull output (active high)
				 13 diag1_pushpull 0: DIAG1 is open collector output (active low) 1: Enable DIAG1 push pull output (active high)

GENER	AL CONFIG	GURAT	ION REGISTERS	(0x000)	x0F)
R/W	Addr	n	Register	Descri	ption I bit names
				14	 small_hysteresis 0: Hysteresis for step frequency comparison is 1/16 1: Hysteresis for step frequency comparison is 1/32 stop_enable
				15	 0: Normal operation 1: Emergency stop: ENCA_DCIN stops the sequencer when tied high (no steps become executed by the sequencer, motor goes to standstill state).
				16	 direct_mode 0: Normal operation 1: Motor coil currents and polarity directly programmed via serial interface: Register XDIRECT (0x2D) specifies signed coil A current (bits 80) and coil B current (bits 2416). In this mode, the current is scaled by IHOLD setting. Velocity based current regulation of stealthChop is not available in this mode. The automatic stealthChop current regulation will work only for low stepper motor
				17	velocities. test_mode 0: Normal operation 1: Enable analog test output on pin DCO. IHOLD[10] selects the function of DCO: 02: T120, DAC, VDDH
				Bit	Hint: Not for user, set to 0 for normal operation! GSTAT – Global status flags
				0	 (Re-Write with '1' bit to clear respective flags) reset 1: Indicates that the IC has been reset. All registers have been cleared to reset values.
R+ WC	0x01	3	GSTAT	1	 drv_err 1: Indicates, that the driver has been shut down due to overtemperature or short circuit detection. Read DRV_STATUS for details. The flag can only be cleared when the temperature is below the limit again.
				2	 uv_cp 1: Indicates an undervoltage on the charge pump. The driver is disabled during undervoltage. This flag is latched for information.
				Bit	INPUT
					Reads the state of all input pins available
				0	STEP DIR
		0		2	DCEN_CFG4
R	0x04	8 +	IOIN	3	DCIN_CFG5
IX.	0.04	8	10114	4	DRV_ENN
				5	DCO_CFG6
				6	1 unused
				31	VERSION: 0x30=first version of the IC
				24	Identical numbers mean full digital compatibility.
W	0x06		OTP_PROG	Bit	OTP_PROGRAM – OTP programming

R/W	Addr	n	Register	Descrip	otion / bit names
					Write access programs OTP memory (one bit at a time), Read access refreshes read data from OTP after a write
				20	OTPBIT Selection of OTP bit to be programmed to the selected byte location (n=07: programs bit n to a logic 1)
				54	OTPBYTE Set to 00
				158	OTPMAGIC
					Set to 0xbd to enable programming. A programming time of minimum 10ms per bit is recommended (check by reading OTP_READ).
R	0x07		OTP_READ	Bit	OTP_READ (Access to OTP memory result and update) See separate table!
				70	OTPO byte 0 read data
			FACTORY	40	FCLKTRIM (Reset default: OTP) 031: Lowest to highest clock frequency. Check a charge pump output. The frequency span is not
RW	0x08	5	CONF		guaranteed, but it is tested, that tuning to 12MH: internal clock is possible. The devices come preset to 12MHz clock frequency by OTP programming. (Reset Default: OTP)
				Bit	SHORT_CONF
				30	 S2VS_LEVEL: Short to VS detector level for lowside FETs. Checks fo voltage drop in LS MOSFET and sense resistor. 4 (highest sensitivity) 15 (lowest sensitivity) <i>Hint:</i> Settings from 1 to 3 will trigger during norma operation due to voltage drop on sense resistor. (<i>Reset Default: OTP 6 or 12</i>) S2G_LEVEL:
W	0x09	19	SHORT_ CONF	1716	Short to GND detector level for highside FETs. Checks for voltage drop on high side MOSFET 2 (highest sensitivity) 15 (lowest sensitivity) Attention: Settings below 6 not recommended at >521 operation – false detection might result (Reset Default: OTP 6 or 12) SHORTFILTER:
					Spike filtering bandwidth for short detection 0 (lowest, 100ns), 1 (1µs), 2 (2µs) 3 (3µs) <i>Hint:</i> A good PCB layout will allow using setting 0 Increase value, if erroneous short detection occurs. (<i>Reset Default = %</i> 01)
				18	shortdelay: Short detection delay 0=750ns: normal, 1=1500ns: high The short detection delay shall cover the bridge switching time 0 will work for most applications
					switching time. 0 will work for most applications. (Reset Default = 0)
W	0x0A	22	DRV_CONF	Bit	DRV_CONF

GENER	AL CONFIG	GURATI	ON REGISTERS (0x000	x0F)
R/W	Addr	n	Register	Descri	ption / bit names
				40	BBMTIME: Break-Before make delay 0=shortest (100ns) 16 (200ns) 24=longest (375ns) >24 not recommended, use BBMCLKS instead
					Hint: Choose the lowest setting safely covering the switching event in order to avoid bridge cross-conduction. Add roughly 30% of reserve. (Reset Default = 0)
				118	BBMCLKS: 015: Digital BBM time in clock cycles (typ. 83ns). The longer setting rules (BBMTIME vs. BBMCLKS). (Reset Default: OTP 4 or 2)
				1716	OTSELECT: Selection of over temperature level for bridge disable, switch on after cool down to 120°C / OTPW level. 00: 150°C 01: 143°C 10: 136°C (not recommended when VSA > 24V)
					11: 120°C (not recommended, no hysteresis) <i>Hint:</i> Adapt overtemperature threshold as required to protect the MOSFETs or other components on the PCB. (<i>Reset Default = %00</i>)
				1918	DRVSTRENGTH: Selection of gate driver current. Adapts the gate driver current to the gate charge of the external MOSFETs. 00: weak 01: weak+TC (medium above OTPW level) 10: medium 11: strong
					<i>Hint:</i> Choose the lowest setting giving slopes <100ns. (<i>Reset Default = %</i> 10)
				2120	 FILT_ISENSE: Filter time constant of sense amplifier to suppress ringing and coupling from second coil operation 00: low - 100ns 01: - 200ns 10: - 300ns 11: high- 400ns
					Hint: Increase setting if motor chopper noise occurs due to cross-coupling of both coils. (Reset Default = %00)

GENER	ENERAL CONFIGURATION REGISTERS (0x000x0F)					
R/W	Addr	n	Register	Descrip	otion I bit names	
w	0x0B	8	GLOBAL SCALER	70	Global scaling of Motor current. This value is multiplied to the current scaling in order to adapt a drive to a certain motor type. This value should be chosen before tuning other settings, because it also influences chopper hysteresis. 0: Full Scale (or write 256) 1 31: Not allowed for operation 32 255: 32/256 255/256 of maximum current. <i>Hint:</i> Values >128 recommended for best results (<i>Reset Default = 0</i>)	
R	0x0C	16	OFFSET_	158	Offset calibration result phase A (signed)	
IX IX	UNUC	10	READ	70	Offset calibration result phase B (signed)	

5.1.1 OTP_READ – OTP configuration memory

The OTP memory holds power up defaults for certain registers. All OTP memory bits are cleared to 0 by default. Programming only can set bits, clearing bits is not possible. Factory tuning of the clock frequency affects *otp*0.0 to *otp*0.4. The state of these bits therefore may differ between individual ICs.

0x07	0x07: OTP_READ - OTP MEMORY MAP					
Bit	Name	Function	Comment			
7	otp0.7	otp_TBL	Reset default for TBL:			
			0: <i>TBL</i> =%10 (~3µs)			
			1: TBL=%01 (-2µs)			
6	otp0.6	otp_BBM	Reset default for DRVCONF.BBMCLKS			
			0: BBMCLKS=4			
			1: BBMCLKS=2			
5	otp0.5	otp_S2_LEVEL	Reset default for Short detection Levels:			
			0: $S2G_LEVEL = S2VS_LEVEL = 6$			
			1: S2G_LEVEL = S2VS_LEVEL = 12			
4	otp0.4	OTP_FCLKTRIM	Reset default for FCLKTRIM			
3	otp0.3		0: lowest frequency setting			
2	otp0.2		31: highest frequency setting			
1	otp0.1		Attention: This value is pre-programmed by factory clock			
0	otp0.0		trimming to the default clock frequency of 12MHz and			
			differs between individual ICs! It should not be altered.			

5.2 Velocity Dependent Driver Feature Control Register Set

R/W	Addr	n	Register	Description	n I bit names
					IHOLD_IRUN - Driver current control
				40	IHOLD Standstill current (0=1/3231=32/32) In combination with stealthChop mode, setting IHOLD=0 allows to choose freewheeling or coi short circuit for motor stand still.
W	0x10	5 + 5	IHOLD_IRUN		IRUN Motor run current (0=1/3231=32/32) Hint: Choose sense resistors in a way, that norma IRUN is 16 to 31 for best microstep performance.
		+ 4		1916	IHOLDDELAY Controls the number of clock cycles for moto power down after a motion as soon as standstill is detected (<i>stst</i> =1) and <i>TPOWERDOWN</i> has expired The smooth transition avoids a motor jerk upor power down.
W	0x11	8	TPOWER DOWN	motor to n 4 seconds. Attention: automatic Reset Defa 0((2^8)-1) Actual mea	A minimum setting of 2 is required to allow tuning of stealthChop PWM_OFFS_AUTO. ult = 10
R	0x12	20	TSTEP	value is (2' All TSTEP compare va frequency. a smaller v (<i>Txxx</i> *15/16 (<i>Txxx</i> *31/32 comparison This mean calculated	20)-1 in case of overflow or stand still. related thresholds use a hysteresis of 1/16 of the alue to compensate for jitter in the clock or the step The flag <i>small_hysteresis</i> modifies the hysteresis to value of 1/32.)-1 or)-1 is used as a second compare value for each
	0x13	20	TPWMTHRS	motor, but stable and case it runs	mode <i>TSTEP</i> will not show the mean velocity of the the velocities for each microstep, which may not be thus does not represent the real motor velocity in s slower than the target velocity. upper velocity for stealthChop voltage PWM mode. <i>WMTHRS</i>

VELOCI	VELOCITY DEPENDENT DRIVER FEATURE CONTROL REGISTER SET (0x100x1F)					
R/W	Addr	n	Register	Description I bit names		
W	0x14	20	TCOOLTHRS	This is the lower threshold velocity for switching on smart energy coolStep and stallGuard feature. (unsigned) Set this parameter to disable coolStep at low speeds, where it cannot work reliably. The stop on stall function (enable with <i>sg_stop</i> when using internal motion controller) and the stall output signal become enabled when exceeding this velocity. In non-dcStep mode, it becomes disabled again once the velocity falls below this threshold.		
				 TCOOLTHRS ≥ TSTEP ≥ THIGH: coolStep is enabled, if configured stealthChop voltage PWM mode is disabled TCOOLTHRS ≥ TSTEP Stop on stall is enabled, if configured Stall output signal (DIAG0/1) is enabled, if configured 		
W	0x15	20	THIGH	 This velocity setting allows velocity dependent switching into a different chopper mode and fullstepping to maximize torque. (unsigned) The stall detection feature becomes switched off for 2-3 electrical periods whenever passing <i>THIGH</i> threshold to compensate for the effect of switching modes. <i>TSTEP</i> ≤ <i>THIGH</i>: coolStep is disabled (motor runs with normal current scale) stealthChop voltage PWM mode is disabled If <i>vhighchm</i> is set, the chopper switches to <i>chm</i>=1 with <i>TFD</i>=0 (constant off time with slow decay, only). If <i>vhighfs</i> is set, the motor operates in fullstep mode and the stall detection becomes switched over to 		
RW	0x2D	9+9	XDIRECT	dcStep stall detection.This register is used in direct coil current2xmode, only (direct_mode = 1). It bypasses the internal sequencer. Specifies signed coil A current (bits 80) and coil B current (bits 2416). In this mode, the current is scaled by IHOLD setting. Velocity based current regulation of stealthChop is not available in this mode. The automatic stealthChop current regulation will work only for low stepper motor velocities.2x		

Microstep velocity time reference t for velocities: TSTEP = f_{CLK} / f_{STEP}

5.2.1 dcStep Miniumum Velocity Register

DCSTEP MINIMUM VELOCITY REGISTER (0x33)						
R/W	Addr	n	Register	Description I bit names		
W	0x33	23	VDCMIN	 Automatic commutation dcStep minimum velocity. Enable dcStep by DCEN pin. In this mode, the actual position is determined by the sensorless motor commutation and becomes fed back to the external motion controller. In case the motor becomes heavily loaded, <i>VDCMIN</i> is used as the minimum step velocity. <i>Hint:</i> Also set <i>DCCTRL</i> parameters in order to operate dcStep. (Only bits 22 8 are used for value and for comparison) 		

Time reference t for VDCMIN: t = $2^24 I f_{CLK}$

5.3 Motor Driver Registers

MICRO	MICROSTEPPING CONTROL REGISTER SET (0x600x6B)					
R/W	Addr	n	Register	Description <i>I bit names</i>	Range [Unit]	
W	0x60	32	MSLUT[0] microstep table entries 031	Each bit gives the difference between entry x and entry x+1 when combined with the cor- responding <i>MSLUTSEL W</i> bits: 0: W= %00: -1 %01: +0	32x 0 or 1 reset default= sine wave table	
W	0x61 0x67	7 x 32	MSLUT[17] microstep table entries 32255	<pre>%10: +1 %11: +2 1: W= %00: +0 %01: +1 %10: +2 %11: +3 This is the differential coding for the first quarter of a wave. Start values for CUR_A and CUR_B are stored for MSCNT position 0 in START_SIN and START_SIN90. ofs31, ofs30,, ofs01, ofs00 ofs255, ofs254,, ofs225, ofs224</pre>	7x 32x 0 or 1 reset default= sine wave table	
W	0x68	32	MSLUTSEL	This register defines four segments within each quarter <i>MSLUT</i> wave. Four 2 bit entries determine the meaning of a 0 and a 1 bit in the corresponding segment of <i>MSLUT</i> . <i>See separate table!</i>	0 <x1<x2<x3 reset default= sine wave table</x1<x2<x3 	
W	0x69	8 + 8	MSLUTSTART	bit 7 0: START_SIN bit 23 16: START_SIN90 START_SIN gives the absolute current at microstep table entry 0. START_SIN90 gives the absolute current for microstep table entry at positions 256. Start values are transferred to the microstep registers CUR_A and CUR_B, whenever the reference position MSCNT=0 is passed.	START_SIN reset default =0 START_SIN90 reset default =247	
R	0x6A	10	MSCNT	Microstep counter. Indicates actual position in the microstep table for CUR_A. CUR_B uses an offset of 256 (2 phase motor). Hint: Move to a position where MSCNT is zero before re-initializing MSLUTSTART or MSLUT and MSLUTSEL.	01023	
R	0x6B	9 + 9	MSCURACT	bit 8 0: CUR_A (signed): Actual microstep current for motor phase A as read from MSLUT (not scaled by current) bit 24 16: CUR_B (signed): Actual microstep current for motor phase B as read from MSLUT (not scaled by current)	+/-0255	

DRIVER REGISTER SET (0x6C0x7F)					
R/W	Addr	n	Register	Description <i>I bit names</i>	Range [Unit]
RW	0x6C	32	CHOPCONF	chopper and driver configuration See separate table!	reset default= 0x10410150
W	0x6D	25	COOLCONF	coolStep smart current control register and stallGuard2 configuration See separate table!	
W	0x6E	24	DCCTRL	 dcStep (DC) automatic commutation configuration register (enable via pin DCEN or via VDCMIN): bit 9 0: DC_TIME: Upper PWM on time limit for commutation (DC_TIME * 1/f_{CLK}). Set slightly above effective blank time TBL. bit 23 16: DC_SG: Max. PWM on time for step loss detection using dcStep stallGuard2 in dcStep mode. (DC_SG * 16/f_{CLK}) Set slightly higher than DC_TIME/16 0=disable Hint: Using a higher microstep resolution or interpolated operation, dcStep delivers a better stallGuard signal. DC_SG is also available above VHIGH if vhighfs is activated. For best result also set vhighchm. 	
R	0x6F	32	DRV_ STATUS	stallGuard2 value and driver error flags <i>See separate table!</i>	
W	0x70	22	PWMCONF	Voltage PWM mode chopper configuration See separate table!	reset default= 0xC40C001E
R	0x71	9+8	PWM_SCALE	Results of stealthChop amplitude regulator.These values can be used to monitorautomatic PWM amplitude scaling (255=max.voltage).bit 7 0PWM_SCALE_SUM: Actual PWM duty cycle. This value is used for scaling the values CUR_A and CUR_B read from the sine wave table.bit 24 16PWM_SCALE_AUTO:	0255
				bit 24 16 PWM_SCALE_AUTO: 9 Bit signed offset added to the calculated PWM duty cycle. This is the result of the automatic amplitude regulation based on current measurement. These automatically generated values can be	signed -255+255
R	0x72	8+8	PWM_AUTO	read out in order to determine a default / power up setting for PWM_GRAD and PWM_OFS. bit 7 0 PWM_OFS_AUTO: Automatically determined offset value	0255

DRIVER REGISTER SET (0x6C0x7F)					
R/W	Addr	n	Register	Description I bit names	Range [Unit]
				bit 23 16 PWM_GRAD_AUTO: Automatically determine gradient value	0255 d
R	0x73	20	LOST_STEPS	Number of input steps skipped due to highe load in dcStep operation, if step input doe not stop when DC_OUT is low. This counte wraps around after 2^20 steps. Counts up o down depending on direction. Only wit SDMODE=1.	s r r

MICROSTEP TABLE CALCULATION FOR A SINE WAVE EQUIVALENT TO THE POWER ON DEFAULT

$$cound\left(248 * sin\left(2 * PI * \frac{i}{1024} + \frac{PI}{1024}\right)\right) - 1$$

- *i*:[0... 255] is the table index
- The amplitude of the wave is 248. The resulting maximum positive value is 247 and the maximum negative value is -248.
- The round function rounds values from 0.5 to 1.4999 to 1

0x68	0 x68: MSLUTSEL – LOOK UP TABLE SEGMENTATION DEFINITION				
Bit	Name	Function	Comment		
31 30 29	ХЗ	LUT segment 3 start	The sine wave look up table can be divided into up to four segments using an individual step width control entry <i>Wx</i> . The segment borders are selected by <i>X</i> 1, <i>X</i> 2		
28 27			and X3.		
26 25			Segment 0 goes from 0 to X1-1. Segment 1 goes from X1 to X2-1.		
24			Segment 2 goes from X2 to X3-1.		
23	Х2	LUT segment 2 start	Segment 3 goes from X3 to 255.		
22 21			For defined response the values shall satisfy:		
20			0 <x1<x2<x3< td=""></x1<x2<x3<>		
19					
18					
17					
16					
15	X1	LUT segment 1 start			
14					
13					
12 11					
10					
9					
8					
7	W3	LUT width select from	Width control bit coding W0W3:		
6		ofs(X3) to ofs255	%00: MSLUT entry 0, 1 select: -1, +0		
5	W2	LUT width select from	%01: MSLUT entry 0, 1 select: +0, +1		
4		ofs(X2) to ofs(X3-1)	%10: MSLUT entry 0, 1 select: +1, +2		
3	W1	LUT width select from	%11: MSLUT entry 0, 1 select: +2, +3		
2		ofs(X1) to ofs(X2-1)			
1	WO	LUT width select from			
0		ofs00 to ofs(X1-1)			

5.3.1 MSLUTSEL - Look up Table Segmentation Definition

5.3.2 CHOPCONF – Chopper Configuration

0x60	0x6C: CHOPCONF – CHOPPER CONFIGURATION					
Bit	Bit Name Function Comment					
31	diss2vs	short to supply	0: Short to VS protection is on			
		protection disable	1: Short to VS protection is disabled			
30	diss2g	short to GND	0: Short to GND protection is on			
		protection disable	1: Short to GND protection is disabled			
29	dedge	enable double edge	1: Enable step impulse at each step edge to reduce step			
		step pulses	frequency requirement.			
28	intpol	interpolation to 256	1: The actual microstep resolution (MRES) becomes			
		microsteps	extrapolated to 256 microsteps for smoothest motor			
			operation (useful for STEP/DIR operation, only)			
27	mres3	MRES	%0000:			
26	mres2	micro step resolution	Native 256 microstep setting. Normally use this setting			
25	mres1	-	with the internal motion controller.			
24	mres0		%0001 %1000:			
			128, 64, 32, 16, 8, 4, 2, FULLSTEP			
			Reduced microstep resolution esp. for STEP/DIR operation. The resolution gives the number of microstep entries per			
			sine quarter wave.			
			The driver automatically uses microstep positions which			
			result in a symmetrical wave, when choosing a lower			
			microstep resolution.			
			step width=2 [^] MRES [microsteps]			
23	tpfd3	TPFD	TPFD allows dampening of motor mid-range resonances.			
22	tpfd2	passive fast decay time	Passive fast decay time setting controls duration of the			
21	tpdf1		fast decay phase inserted after bridge polarity change			
20	tpfd0		N _{CLK} = 128*TPFD			
			%0000: Disable			
4.0			%0001 %1111: 1 15 This bit enables switching to <i>chm</i> =1 and <i>fd</i> =0, when <i>VHIGH</i>			
19	vhighchm	high velocity chopper mode	is exceeded. This way, a higher velocity can be achieved.			
		mode	Can be combined with <i>vhighfs</i> =1. If set, the <i>TOFF</i> setting			
			automatically becomes doubled during high velocity			
			operation in order to avoid doubling of the chopper			
			frequency.			
18	vhighfs	high velocity fullstep	This bit enables switching to fullstep, when VHIGH is			
		selection	exceeded. Switching takes place only at 45° position.			
			The fullstep target current uses the current value from			
			the microstep table at the 45° position.			
17	-	reserved	reserved, set to 0			
16	tbl1	TBL	%00 %11:			
15	tbl0	blank time select	Set comparator blank time to 16, 24, 36 or 54 clocks			
1/	chro	channar da	Hint: %01 or %10 is recommended for most applications			
14	chm	chopper mode	0 Standard mode (spreadCycle)			
			1 Constant off time with fast decay time.			
			Fast decay time is also terminated when the			
			negative nominal current is reached. Fast decay is after on time.			
13	_	reserved	Reserved, set to 0			
12	disfdcc	fast decay mode	chm=1:			
	ansjuce	hast actay mode	<i>cnm=1</i> : <i>disfdcc</i> =1 disables current comparator usage for termi-			
			nation of the fast decay cycle			
11	fd3	TFD [3]	chm=1:			
	,	· L- J	MSB of fast decay time setting TFD			
	1	1				

0x6C	0x6C: CHOPCONF – CHOPPER CONFIGURATION						
Bit	Name	Function	Comment				
10	hend3	HEND	chm=0	%0000 %1111:			
9	hend2	hysteresis low value		Hysteresis is -3, -2, -1, 0, 1,, 12			
8	hend1	OFFSET		(1/512 of this setting adds to current setting)			
7	hend0	sine wave offset		This is the hysteresis value which becomes used for the hysteresis chopper.			
			chm=1	%0000 %1111:			
				Offset is -3, -2, -1, 0, 1,, 12			
				This is the sine wave offset and 1/512 of the			
				value becomes added to the absolute value			
			of each sine wave entry.				
6	hstrt2	HSTRT	chm=0 %000 %111:				
5	hstrt1	hysteresis start value	Add 1, 2,, 8 to hysteresis low value HEND				
4	hstrt0	added to HEND	(1/512 of this setting adds to current setting)				
			Attention: Effective HEND+HSTRT ≤ 16.				
			Hint: Hysteresis decrement is done each 16				
			clocks				
		TFD [20]	<i>chm</i> =1 Fast decay time setting (MSB: <i>fd3</i>):				
		fast decay time setting		%0000 %1111:			
				Fast decay time setting TFD with			
				N _{CLK} = 32* <i>TFD</i> (%0000: slow decay only)			
3	toff3	TOFF off time		etting controls duration of slow decay phase			
2	toff2	and driver enable	N _{CLK} = 12 + 32* <i>TOFF</i>				
1	toff1		%0000: Driver disable, all bridges off				
0	toff0		%0001: 1 – use only with $TBL \ge 2$				
			%0010 %1111: 2 15				

5.3.3 COOLCONF – Smart Energy Control coolStep and stallGuard2

0 x6E	0x6D: COOLCONF – SMART ENERGY CONTROL COOLSTEP AND STALLGUARD2					
Bit	Name	Function	Comment			
	-	reserved	set to 0			
24	sfilt	stallGuard2 filter enable	0 Standard mode, high time resolution for stallGuard2			
			1 Filtered mode, stallGuard2 signal updated for each four fullsteps (resp. six fullsteps for 3 phase motor) only to compensate for motor pole tolerances			
23	-	reserved	set to 0			
22	sgt6	stallGuard2 threshold	This signed value controls stallGuard2 level for stall			
21	sgt5	value	output and sets the optimum measurement range for			
20	sgt4		readout. A lower value gives a higher sensitivity. Zero is			
19	sgt3		the starting value working with most motors.			
18	sgt2		-64 to +63: A higher value makes stallGuard2 less			
17	sgt1		sensitive and requires more torque to			
16	sgt0		indicate a stall.			
15	seimin	minimum current for	0: 1/2 of current setting (IRUN)			
		smart current control	1: 1/4 of current setting (IRUN)			
14	sedn1	current down step	%00: For each 32 stallGuard2 values decrease by one			
13	sedn0	speed	%01: For each 8 stallGuard2 values decrease by one			
			%10: For each 2 stallGuard2 values decrease by one			
			%11: For each stallGuard2 value decrease by one			
12	-	reserved	set to 0			
11	semax3	stallGuard2 hysteresis	If the stallGuard2 result is equal to or above			
10	semax2	value for smart current	(SEMIN+SEMAX+1)*32, the motor current becomes			
9	semax1	control	decreased to save energy.			
8	semax0		%0000 %1111: 0 15			
7	-	reserved	set to 0			
6	seup1	current up step width	Current increment steps per measured stallGuard2 value			
5	seup0		%00 %11: 1, 2, 4, 8			
4	-	reserved	set to 0			
3	semin3	minimum stallGuard2	If the stallGuard2 result falls below SEMIN*32, the motor			
2	semin2	value for smart current	current becomes increased to reduce motor load angle.			
1	semin1	control and	%0000: smart current control coolStep off			
0	semin0	smart current enable	%0001 %1111: 1 15			

5.3.4 PWMCONF - Voltage PWM Mode stealthChop

0 x70	0x70: PWMCONF – VOLTAGE MODE PWM STEALTHCHOP				
Bit	Name	Function	Comment		
31 30 29 28	PWM_LIM	PWM automatic scale amplitude limit when switching on	Limit for <i>PWM_SCALE_AUTO</i> when switching back from spreadCycle to stealthChop. This value defines the upper limit for bits 7 to 4 of the automatic current control when switching back. It can be set to reduce the current jerk during mode change back to stealthChop. It does not limit <i>PWM_GRAD</i> or <i>PWM_GRAD_AUTO</i> offset. (Default = 12)		
27 26 25 24	PWM_REG	Regulation loop gradient	User defined maximum PWM amplitude change per half wave when using <i>pwm_autoscale</i> =1. (115): 1: 0.5 increments (slowest regulation) 2: 1 increment 3: 1.5 increments 4: 2 increments (<i>Reset default</i>)) 8: 4 increments 15: 7.5 increments (fastest regulation)		
23	-	reserved	set to 0		
22	-	reserved	set to 0		
21 20	freewheel1 freewheel0	Allows different standstill modes	 Stand still option when motor current setting is zero (<i>I_HOLD=0</i>). %00: Normal operation %01: Freewheeling %10: Coil shorted using LS drivers %11: Coil shorted using HS drivers 		
19	pwm_ autograd	PWM automatic gradient adaptation	 Fixed value for PWM_GRAD (PWM_GRAD_AUTO = PWM_GRAD) Automatic tuning (only with pwm_autoscale=1) (Reset default) PWM_GRAD_AUTO is initialized with PWM_GRAD while pwm_autograd=0 and becomes optimized automatically during motion. Preconditions PWM_OFS_AUTO has been automatically initialized. This requires standstill at IRUN for >130ms in order to a) detect standstill b) wait > 128 chopper cycles at IRUN and c) regulate PWM_OFS_AUTO so that -1 < PWM_SCALE_AUTO < 1 Motor running and 1.5 * PWM_OFS_AUTO < PWM_SCALE_SUM < 4* PWM_OFS_AUTO and PWM_SCALE_SUM < 255. Time required for tuning PWM_GRAD_AUTO About 8 fullsteps per change of +/-1. Also enables use of reduced chopper frequency for tuning PWM_OFS_AUTO. 		
18	pwm_ autoscale	PWM automatic amplitude scaling	 0 User defined feed forward PWM amplitude. The current settings <i>IRUN</i> and <i>IHOLD</i> have no influence! The resulting PWM amplitude (limited to 0255) is: <i>PWM_OFS</i> * ((CS_ACTUAL+1) / 32) + <i>PWM_GRAD</i> * 256 / <i>TSTEP</i> 1 Enable automatic current control (<i>Reset default</i>) 		

UX/U	0x70: PWMCONF – VOLTAGE MODE PWM STEALTHCHOP				
Bit	Name	Function	Comment		
17	pwm_freq1	PWM frequency	%00: f _{PWM} =2/1024 f _{CLK} (Reset default)		
16	pwm_freq0	selection	%01: f _{PWM} =2/683 f _{CLK}		
			%10: f _{PWM} =2/512 f _{CLK}		
			%11: f _{PWM} =2/410 f _{CLK}		
15	PWM_	User defined amplitude	Velocity dependent gradient for PWM amplitude:		
14	GRAD	gradient	PWM_GRAD * 256 / TSTEP		
13			This value is added to <i>PWM_OFS</i> to compensate for the		
12			velocity-dependent motor back-EMF.		
11			Use <i>PWM_GRAD</i> as initial value for automatic scaling to		
10			speed up the automatic tuning process. To do this, set		
9			<i>PWM_GRAD</i> to the determined, application specific value,		
8			with <i>pwm_autoscale</i> =0. Only afterwards, set		
			<i>pwm_autoscale</i> =1. Enable stealthChop when finished.		
			····		
			Hint:		
			After initial tuning, the required initial value can be read		
			out from PWM_GRAD_AUTO.		
7	PWM_	User defined amplitude	User defined PWM amplitude offset (0-255) related to full		
6	OFS	(offset)	motor current (CS_ACTUAL=31) in stand still.		
5			(Reset default=30)		
4					
3			Use <i>PWM_OFS</i> as initial value for automatic scaling to		
2			speed up the automatic tuning process. To do this, set		
1			<i>PWM_OFS</i> to the determined, application specific value, with away autoscale.		
0			with <i>pwm_autoscale</i> =0. Only afterwards, set		
			<pre>pwm_autoscale=1. Enable stealthChop when finished.</pre>		
			<i>PWM_OFS</i> = 0 will disable scaling down motor current		
			below a motor specific lower measurement threshold. This setting should only be used under certain		
			conditions, i.e. when the power supply voltage can vary		
			up and down by a factor of two or more. It prevents		
			the motor going out of regulation, but it also prevents		
			power down below the regulation limit.		
			<i>PWM_OFS</i> > 0 allows automatic scaling to low PWM duty		
			cycles even below the lower regulation threshold. This		
			allows low (standstill) current settings based on the		
			actual (hold) current scale (register IHOLD_IRUN).		

5.3.5 DRV_STATUS - stallGuard2 Value and Driver Error Flags

0x6F	0x6F: DRV_STATUS – STALLGUARD2 VALUE AND DRIVER ERROR FLAGS				
Bit	Name	Function	Comment		
31	stst	standstill indicator	This flag indicates motor stand still in each operation mode. This occurs 2^20 clocks after the last step pulse.		
30	olb	open load indicator phase B	1: Open load detected on phase A or B. <i>Hint:</i> This is just an informative flag. The driver takes no action		
29	ola	open load indicator phase A	upon it. False detection may occur in fast motion and standstill. Check during slow motion, only.		
28	s2gb	short to ground indicator phase B	1: Short to GND detected on phase A or B. The driver becomes disabled. The flags stay active, until the driver is disabled by		
27	s2ga	short to ground indicator phase A	software (<i>TOFF</i> =0) or by the ENN input.		
26	otpw	overtemperature pre- warning flag	1: Overtemperature pre-warning threshold is exceeded. The overtemperature pre-warning flag is common for both bridges.		
25	ot	overtemperature flag	1: Overtemperature limit has been reached. Drivers become disabled until <i>otpw</i> is also cleared due to cooling down of the IC. The overtemperature flag is common for both bridges.		
24	stallGuard	stallGuard2 status	1: Motor stall detected (<i>SG_RESULT=</i> 0) or dcStep stall in dcStep mode.		
23 22 21	-	reserved	Ignore these bits		
20 19 18 17 16	CS ACTUAL	actual motor current / smart energy current	Actual current control scaling, for monitoring smart energy current scaling controlled via settings in register <i>COOLCONF</i> , or for monitoring the function of the automatic current scaling.		
15	fsactive	full step active indicator	1: Indicates that the driver has switched to fullstep as defined by chopper mode settings and velocity thresholds.		
14	stealth	stealthChop indicator	1: Driver operates in stealthChop mode		
13	s2vsb	short to supply indicator phase B	1: Short to supply detected on phase A or B. The driver becomes disabled. The flags stay active, until the driver is		
12	s2vsa	short to supply indicator phase A	disabled by software (<i>TOFF</i> =0) or by the ENN input. Sense resistor voltage drop is included in the measurement!		
11	-	reserved	Ignore this bit		
10	-	reserved	Ignore this bit		
9 8 7	SG_ RESULT	stallGuard2 result respectively PWM on time for coil A in stand	Mechanical load measurement: The stallGuard2 result gives a means to measure mechanical motor load. A higher value means lower mechanical load. A value of 0 signals highest load. With optimum SGT setting,		
6 5 4		still for motor temperature detection	this is an indicator for a motor stall. The stall detection compares SG_RESULT to 0 in order to detect a stall. SG_RESULT		
3 2			is used as a base for coolStep operation, by comparing it to a programmable upper and a lower limit. It is not applicable in stealthChop mode.		
1			stallGuard2 works best with microstep operation or dcStep.		
0			Temperature measurement: In standstill, no stallGuard2 result can be obtained. SG_RESULT shows the chopper on-time for motor coil A instead. Move the motor to a determined microstep position at a certain current setting to get a rough estimation of motor temperature by a reading the chopper on-time. As the motor heats up, its coil resistance rises and the chopper on-time increases.		

stealthChop™ 6

stealthChop is an extremely quiet mode of operation for stepper motors. It is based on a voltage mode PWM. In case of standstill and at low velocities, the motor is absolutely noiseless. Thus, stealthChop operated stepper motor applications are very suitable for indoor or home use. The motor operates absolutely free of vibration at low velocities. With stealthChop, the motor current is applied by driving a certain effective voltage into the coil,

using a voltage mode PWM. With the enhanced stealthChop2, the driver automatically adapts to the application for best performance. No more configurations are required. Optional configuration allows for tuning the setting in special cases, or for storing initial values for the automatic adaptation algorithm. For high velocity drives spreadCycle should be considered in combination with stealthChop.

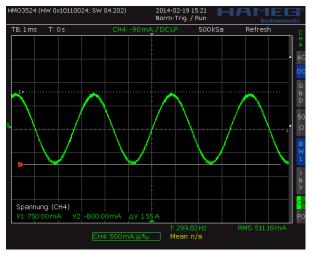


Figure 6.1 Motor coil sine wave current with stealthChop (measured with current probe)

6.1 Automatic Tuning

stealthChop2 integrates an automatic tuning procedure (AT), which adapts the most important operating parameters to the motor automatically. This way, stealthChop2 allows high motor dynamics and supports powering down the motor to very low currents. Just two steps have to be respected by the motion controller for best results: Start with the motor in standstill, but powered with nominal run current (AT#1). Move the motor at a medium velocity, e.g. as part of a homing procedure (AT#2). Figure 6.2 shows the tuning procedure.

Border conditions for AT#1 and AT#2 are shown in the following table:

AUTON	AUTOMATIC TUNING TIMING AND BORDER CONDITIONS				
Step	Parameter	Conditions	Required Duration		
AT#1	PWM_ OFS_AUTO	 Motor in standstill and actual current scale (CS) is identical to run current (IRUN). If standstill reduction is enabled, an initial step pulse switches the drive back to run current, or set IHOLD to IRUN. Pin VS at operating level. Attention: Driver may reduce chopper frequency during AT#1. Use reduced standstill current IHOLD<irun at="" chopper="" extended="" frequency<="" li="" lower="" of="" periods="" prevent="" time="" to=""> </irun>	≤ 2^20+2*2^18 t _{CLK} , ≤ 130ms (with internal clock)		
AT#2	PWM_ GRAD_AUTO	 Move motor at a velocity, where a significant amount of back EMF is generated and where the full run current can be reached. Conditions: 1.5 * PWM_OFS_AUTO < PWM_SCALE_SUM < 4 * PWM_OFS_AUTO PWM_SCALE_SUM < 255. Hint: A typical range is 60-300 RPM. 	8 fullsteps are required for a change of +/-1. For a typical motor with <i>PWM_GRAD_AUTO</i> optimum at 50 or less, up to 400 fullsteps are required when starting from default value 0.		

Determine best conditions for automatic tuning with the evaluation board. Monitor *PWM_SCALE_AUTO* going down to zero during the constant velocity phase in AT#2 tuning. This indicates a successful tuning.

Attention:

Operating in stealthChop without proper tuning can lead to high motor currents during a deceleration ramp, especially with low resistive motors and fast deceleration settings. Follow the automatic tuning process and check optimum tuning conditions using the evaluation board. It is recommended to use an initial value for settings *PWM_OFS* and *PWM_GRAD* determined per motor type.

Protect the power stage and supply by additionally tuning the overcurrent protection.

Known Limitations:

Successful completion of AT#1 tuning phase is not safely detected by the TMC5161. It will require multiple motor start / stop events to safely detect completion.

Successful determination is mandatory for AT#2: Tuning of *PWM_GRAD* will not start when AT#1 has not completed.

Successful completion of AT#1 and AT#2 only can be checked by monitoring *PWM_SCALE_AUTO* approaching 0 during AT#2 motion.

Solution a):

Complete automatic tuning phase AT#1 process, by using a slow-motion sequence which leads to standstill detection in between of each two steps. Use a velocity of 8 (6 Hz) or lower and execute minimum 10 steps during AT#1 phase.

Solution b):

Store initial parameters for *PWM_GRAD_AUTO* for the application. Therefore, use the motor and operating conditions determined for the application and do a complete automatic tuning sequence (refer to *a*)). Store the resulting *PWM_GRAD_AUTO* value and use it for initialization of *PWM_GRAD*. With this, tuning of AT#2 phase is not mandatory in the application and can be skipped. Automatic tuning will further optimize settings during operation. Combine with a) if desired.

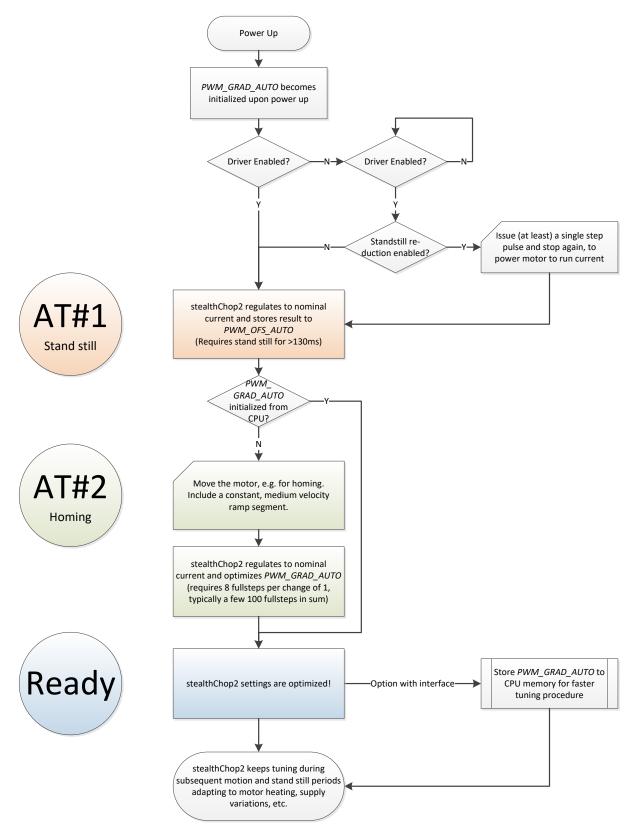


Figure 6.2 stealthChop2 automatic tuning procedure

Attention

Modifying *GLOBALSCALER* or VS voltage invalidates the result of the automatic tuning process. Motor current regulation cannot compensate significant changes until next AT#1 phase. Automatic tuning adapts to changed conditions whenever AT#1 and AT#2 conditions are fulfilled in the later operation.

6.2 stealthChop Options

In order to match the motor current to a certain level, the effective PWM voltage becomes scaled depending on the actual motor velocity. Several additional factors influence the required voltage level to drive the motor at the target current: The motor resistance, its back EMF (i.e. directly proportional to its velocity) as well as the actual level of the supply voltage. Two modes of PWM regulation are provided: The automatic tuning mode (AT) using current feedback (*pwm_autoscale* = 1, *pwm_autograd* = 1) and a feed forward velocity controlled mode (*pwm_autoscale* = 0). The feed forward velocity controlled mode will not react to a change of the supply voltage or to events like a motor stall, but it provides very stable amplitude. It does not use nor require any means of current measurement. This is perfect when motor type and supply voltage are well known. Therefore we recommend the automatic mode, unless current regulation is not satisfying in the given operating conditions.

It is recommended to operate in automatic tuning mode.

Non-automatic mode (*pwm_autoscale=0*) should be taken into account only with well-known motor and operating conditions. In this case, careful programming via the interface is required. The operating parameters *PWM_GRAD* and *PWM_OFS* can be determined in automatic tuning mode initially.

The stealthChop PWM frequency can be chosen in four steps in order to adapt the frequency divider to the frequency of the clock source. A setting in the range of 20-50kHz is good for most applications. It balances low current ripple and good higher velocity performance vs. dynamic power dissipation.

CHOICE OF PWM FREQUENCY FOR STEALTHCHOP							
Clock frequency	Clock frequency PWM_FREQ=%00 PWM_FREQ=%01 PWM_FREQ=%10 PWM_FREQ=%11						
f _{clk}	f _{PWM} =2/1024 f _{CLK}	f _{PWM} =2/683 f _{CLK}	f _{PWM} =2/512 f _{CLK}	f _{PWM} =2/410 f _{CLK}			
18MHz	35.2kHz	52.7kHz	70.3kHz	87.8kHz			
16MHz	31.3kHz	46.9kHz	62.5kHz	78.0kHz			
12MHz (internal)	23.4kHz	35.1kHz	46.9kHz	58.5kHz			
10MHz	19.5kHz	29.3kHz	39.1kHz	48.8kHz			
8MHz	15.6kHz	23.4kHz	31.2kHz	39.0kHz			

Table 6.1 Choice of PWM frequency - green / light green: recommended

6.3 stealthChop Current Regulator

In stealthChop voltage PWM mode, the autoscaling function (pwm autoscale = 1, pwm autograd = 1) regulates the motor current to the desired current setting. Automatic scaling is used as part of the automatic tuning process (AT), and for subsequent tracking of changes within the motor parameters. The driver measures the motor current during the chopper on time and uses a proportional regulator to regulate PWM_SCALE_AUTO in order match the motor current to the target current. PWM_REG is the proportionality coefficient for this regulator. Basically, the proportionality coefficient should be as small as possible in order to get a stable and soft regulation behavior, but it must be large enough to allow the driver to quickly react to changes caused by variation of the motor target current (e.g. change of VREF). During initial tuning step AT#2, PWM REG also compensates for the change of motor velocity. Therefore, a high acceleration during AT#2 will require a higher setting of PWM_REG. With careful selection of homing velocity and acceleration, a minimum setting of the regulation gradient often is sufficient (PWM_REG=1). PWM_REG setting should be optimized for the fastest required acceleration and deceleration ramp (compare Figure 6.3 and Figure 6.4). The quality of the setting PWM REG in phase AT#2 and the finished automatic tuning procedure (or non-automatic settings for PWM_OFS and PWM_GRAD) can be examined when monitoring motor current during an acceleration phase Figure 6.5.

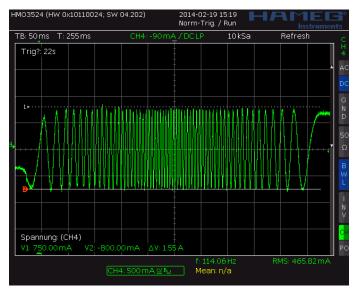


Figure 6.3 Scope shot: good setting for PWM_REG

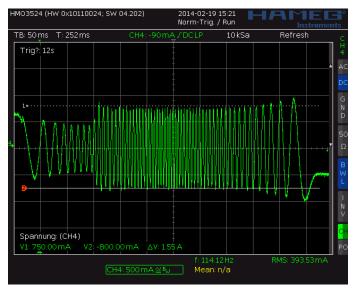


Figure 6.4 Scope shot: too small setting for PWM_REG during AT#2

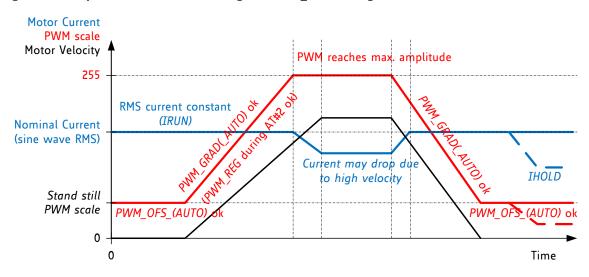


Figure 6.5 Successfully determined PWM_GRAD(_AUTO) and PWM_OFS(_AUTO)

Quick Start

For a quick start, see the Quick Configuration Guide in chapter 18.

6.3.1 Lower Current Limit

The stealthChop current regulator imposes a lower limit for motor current regulation. As the coil current can be measured in the shunt resistor during chopper on phase only, a minimum chopper duty cycle allowing coil current regulation is given by the blank time as set by *TBL* and by the chopper frequency setting. Therefore, the motor specific minimum coil current in stealthChop autoscaling mode rises with the supply voltage and with the chopper frequency. A lower blanking time allows a lower current limit. It is important for the correct determination of *PWM_OFS_AUTO*, that in AT#1 the run current set by the sense resistor, *GLOBALSCALER* and *IRUN* is well within the regulation range. Lower currents (e.g. for standstill power down) are automatically realized based on *PWM_OFS_AUTO* and *PWM_GRAD_AUTO* respectively based on *PWM_OFS* and *PWM_GRAD* with non-automatic current scaling. The freewheeling option allows going to zero motor current.

Lower motor coil current limit for stealthChop2 automatic tuning:

$$I_{Lower\ Limit} = t_{BLANK} * f_{PWM} * \frac{V_M}{R_{COIL}}$$

With V_M the motor supply voltage and R_{COIL} the motor coil resistance.

 $I_{Lower \ Limit}$ can be treated as a thumb value for the minimum nominal *IRUN* motor current setting. In case the lower current limit is not sufficient to reach the desired setting, the driver will retry with a lower chopper frequency in step AT#1, only.

 f_{PWM} is the chopper frequency as determined by setting *PWM_FREQ*. In AT#1, the driver tries a lower, (roughly half frequency), in case it cannot reach the current. The frequency will remain active in standstill, while currentscale *CS=IRUN*. With automatic standstill reduction, this is a short moment.

EXAMPLE:

A motor has a coil resistance of 5 Ω , the supply voltage is 24V. With *TBL*=%01 and *PWM_FREQ*=%00, t_{BLANK} is 24 clock cycles, f_{PWM} is 2/(1024 clock cycles):

$$I_{Lower \ Limit} = 24 \ t_{CLK} * \frac{2}{1024} \ t_{CLK} * \frac{24V}{5\Omega} = \frac{24}{512} * \frac{24V}{5\Omega} = 225mA$$

This means, the motor target current for automatic tuning must be 225mA or more, taking into account all relevant settings. This lower current limit also applies for modification of the motor current via the *GLOBALSCALER*.

Attention

For automatic tuning, a lower coil current limit applies. The motor current in automatic tuning phase AT#1 must exceed this lower limit. $I_{LOWER \ LIMIT}$ can be calculated or measured using a current probe. Setting the motor run-current or hold-current below the lower current limit during operation by modifying *IRUN* and *IHOLD* is possible after successful automatic tuning.

The lower current limit also limits the capability of the driver to respond to changes of *GLOBALSCALER*.

6.4 Velocity Based Scaling

Velocity based scaling scales the stealthChop amplitude based on the time between each two steps, i.e. based on *TSTEP*, measured in clock cycles. This concept basically does not require a current measurement, because no regulation loop is necessary. A pure velocity based scaling is available via

programming, only, when setting *pwm_autoscale* = 0. The basic idea is to have a linear approximation of the voltage required to drive the target current into the motor. The stepper motor has a certain coil resistance and thus needs a certain voltage amplitude to yield a target current based on the basic formula I=U/R. With R being the coil resistance, U the supply voltage scaled by the PWM value, the current I results. The initial value for *PWM_OFS* can be calculated:

$$PWM_OFS = \frac{374 * R_{COIL} * I_{COIL}}{V_M}$$

With V_M the motor supply voltage and I_{COIL} the target RMS current

The effective PWM voltage U_{PWM} (1/SQRT(2) x peak value) results considering the 8 bit resolution and 248 sine wave peak for the actual PWM amplitude shown as *PWM_SCALE*:

$$U_{PWM} = V_M * \frac{PWM_SCALE}{256} * \frac{248}{256} * \frac{1}{\sqrt{2}} = V_M * \frac{PWM_SCALE}{374}$$

With rising motor velocity, the motor generates an increasing back EMF voltage. The back EMF voltage is proportional to the motor velocity. It reduces the PWM voltage effective at the coil resistance and thus current decreases. The TMC2160 provides a second velocity dependent factor (*PWM_GRAD*) to compensate for this. The overall effective PWM amplitude (*PWM_SCALE_SUM*) in this mode automatically is calculated in dependence of the microstep frequency as:


$$PWM_SCALE_SUM = PWM_OFS + PWM_GRAD * 256 * \frac{f_{STEP}}{f_{CLK}}$$

With f_{STEP} being the microstep frequency for 256 microstep resolution equivalent and f_{CLK} the clock frequency supplied to the driver or the actual internal frequency

As a first approximation, the back EMF subtracts from the supply voltage and thus the effective current amplitude decreases. This way, a first approximation for *PWM_GRAD* setting can be calculated:

$$PWM_GRAD = C_{BEMF} \left[\frac{V}{\frac{rad}{s}} \right] * 2\pi * \frac{f_{CLK} * 1.46}{V_M * MSPR}$$

 C_{BEMF} is the back EMF constant of the motor in Volts per radian/second. MSPR is the number of microsteps per rotation, e.g. 51200 = 256µsteps multiplied by 200 fullsteps for a 1.8° motor.

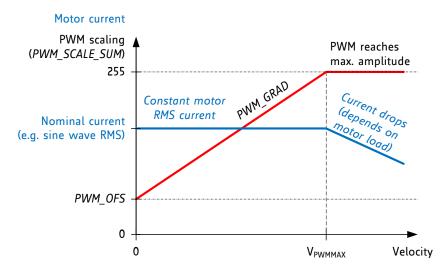



Hint

The values for *PWM_OFS* and *PWM_GRAD* can easily be optimized by tracing the motor current with a current probe on the oscilloscope. Alternatively, automatic tuning determines these values and they can be read out from *PWM_OFS_AUTO* and *PWM_GRAD_AUTO*.

UNDERSTANDING THE BACK EMF CONSTANT OF A MOTOR

The back EMF constant is the voltage a motor generates when turned with a certain velocity. Often motor datasheets do not specify this value, as it can be deducted from motor torque and coil current rating. Within SI units, the numeric value of the back EMF constant C_{BEMF} has the same numeric value as the numeric value of the torque constant. For example, a motor with a torque constant of 1 Nm/A would have a C_{BEMF} of 1V/rad/s. Turning such a motor with 1 rps (1 rps = 1 revolution per second = 6.28 rad/s) generates a back EMF voltage of 6.28V. Thus, the back EMF constant can be calculated as:

$$C_{BEMF}\left[\frac{V}{rad/s}\right] = \frac{HoldingTorque[Nm]}{2 * I_{COULNOM}[A]}$$

 $I_{\mbox{\scriptsize COILNOM}}$ is the motor's rated phase current for the specified holding torque

HoldingTorque is the motor specific holding torque, i.e. the torque reached at $I_{COILNOM}$ on both coils. The torque unit is [Nm] where 1Nm = 100Ncm = 1000mNm.

The voltage is valid as RMS voltage per coil, thus the nominal current is multiplied by 2 in this formula, since the nominal current assumes a full step position, with two coils operating.

6.5 Combining stealthChop and spreadCycle

For applications requiring high velocity motion, spreadCycle may bring more stable operation in the upper velocity range. To combine no-noise operation with highest dynamic performance, the TMC2160 allows combining stealthChop and spreadCycle based on a velocity threshold (Figure 6.7). With this, stealthChop is only active at low velocities.

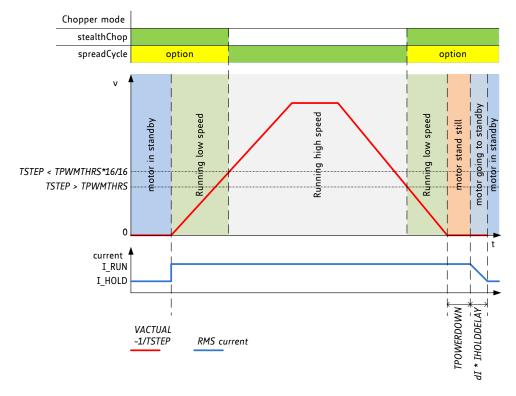


Figure 6.7 TPWMTHRS for optional switching to spreadCycle

As a first step, both chopper principles should be parameterized and optimized individually. In a next step, a transfer velocity has to be fixed. For example, stealthChop operation is used for precise low speed positioning, while spreadCycle shall be used for highly dynamic motion. *TPWMTHRS* determines the transition velocity. Read out *TSTEP* when moving at the desired velocity and program the resulting value to *TPWMTHRS*. Use a low transfer velocity to avoid a jerk at the switching point.

A jerk occurs when switching at higher velocities, because the back-EMF of the motor (which rises with the velocity) causes a phase shift of up to 90° between motor voltage and motor current. So when switching at higher velocities between voltage PWM and current PWM mode, this jerk will occur with increased intensity. A high jerk may even produce a temporary overcurrent condition (depending on the motor coil resistance). At low velocities (e.g. 1 to a few 10 RPM), it can be completely neglected for most motors. Therefore, consider the switching jerk when choosing *TPWMTHRS*. Set *TPWMTHRS* zero if you want to work with stealthChop only.

When enabling the stealthChop mode the first time using automatic current regulation, the motor must be at stand still in order to allow a proper current regulation. When the drive switches to stealthChop at a higher velocity, stealthChop logic stores the last current regulation setting until the motor returns to a lower velocity again. This way, the regulation has a known starting point when returning to a lower velocity, where stealthChop becomes re-enabled. Therefore, neither the velocity threshold nor the supply voltage must be considerably changed during the phase while the chopper is switched to a different mode, because otherwise the motor might lose steps or the instantaneous current might be too high or too low.

A motor stall or a sudden change in the motor velocity may lead to the driver detecting a short circuit or to a state of automatic current regulation, from which it cannot recover. Clear the error flags and restart the motor from zero velocity to recover from this situation.

Hint

Start the motor from standstill when switching on stealthChop the first time and keep it stopped for at least 128 chopper periods to allow stealthChop to do initial standstill current control.

6.6 Flags in stealthChop

As stealthChop uses voltage mode driving, status flags based on current measurement respond slower, respectively the driver reacts delayed to sudden changes of back EMF, like on a motor stall.

Attention

A motor stall, or abrupt stop of the motion during operation in stealthChop can lead to a overcurrent condition. Depending on the previous motor velocity, and on the coil resistance of the motor, it significantly increases motor current for a time of several 10ms. With low velocities, where the back EMF is just a fraction of the supply voltage, there is no danger of triggering the short detection.

Hint

Tune low side driver overcurrent detection to safely trigger upon motor stall, when using stealthChop. This will avoid high peak current draw from the power supply.

6.6.1 Open Load Flags

In stealthChop mode, status information is different from the cycle-by-cycle regulated spreadCycle mode. OLA and OLB show if the current regulation sees that the nominal current can be reached on both coils.

- A flickering OLA or OLB can result from asymmetries in the sense resistors or in the motor coils.
- An interrupted motor coil leads to a continuously active open load flag for the coil.
- One or both flags are active, if the current regulation did not succeed in scaling up to the full target current within the last few fullsteps (because no motor is attached or a high velocity exceeds the PWM limit).

If desired, do an on-demand open load test using the spreadCycle chopper, as it delivers the safest result. With stealthChop, *PWM_SCALE_SUM* can be checked to detect the correct coil resistance.

6.6.2 PWM_SCALE_SUM Informs about the Motor State

Information about the motor state is available with automatic scaling by reading out *PWM_SCALE_SUM*. As this parameter reflects the actual voltage required to drive the target current into the motor, it depends on several factors: motor load, coil resistance, supply voltage, and current setting. Therefore, an evaluation of the *PWM_SCALE_SUM* value allows checking the motor operation point. When reaching the limit (255), the current regulator cannot sustain the full motor current, e.g. due to a drop in supply volage.

6.7 Freewheeling and Passive Braking

stealthChop provides different options for motor standstill. These options can be enabled by setting the standstill current *IHOLD* to zero and choosing the desired option using the *FREEWHEEL* setting. The desired option becomes enabled after a time period specified by *TPOWERDOWN* and *IHOLD_DELAY*. Current regulation becomes frozen once the motor target current is at zero current in order to ensure a quick startup. With the freewheeling options, both freewheeling and passive braking can be realized. Passive braking is an effective eddy current motor braking, which consumes a minimum of energy, because no active current is driven into the coils. However, passive braking will allow slow turning of the motor when a continuous torque is applied.

Hint

Operate the motor within your application when exploring stealthChop. Motor performance often is better with a mechanical load, because it prevents the motor from stalling due mechanical oscillations which can occur without load.

err. spread cycle General disable for use of stealthChop (register CCOR). The input SPREAD is XORed to this flag. Do not use stealthChop stealthChop enabled TPWMTHRS Specifies the upper velocity for operation in stealthChop. Entry the TSTEP reading (time desired threshold velocity. 1048575 TSTEP fails TPWMTHRS PWM_LIM Limiting value for limiting the current jerk when desired threshold velocity. 0 15 Upper four bits of 8 bit amplitude limit (Upfault=12) pwm	PARAMETERS	PARAMETERS RELATED TO STEALTHCHOP				
Cycle GCOND. The input SPREAD is X0Red to this flag. 0 stealthChop enabled TPWMTHRS Specifies the upper velocity for operation in between two microsteps) when operating at the desired threshold velocity. 10 - 15 stealthChop Falls TPWMTHRS PWM_LIM Limiting value for limiting the current jerk when switching from spreadCycle to stealthChop. Reduce the value to yield a lower current yerk. 0 - 15 Upper four bits of 8 bit amplitude limit (Default-12) pwm_ Enable automatic current scaling using current or velocity-based mode. 0 Forward controlled 1 Automatic scaling with current regulator pwm_duction Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD from register instead pwm_gig good results. The frequency measured at effective chopper frequency from. 1 from -2/1024 frax pWM_FREQ User defined PWM amplitude (offset) for velocity 0 2 Frew-2/1024 frax pWM_OFS User defined PWM amplitude (offset) for velocity 0 2 Frew-2/1024 frax pWM_OFS User defined PWM amplitude (offset) for velocity 0 2 Frew-2/1024 frax pWM_OFS User defined PWM amplitude (offset) for velocity 0 2 2 Frew-2/1024 frax pWM_OFS User d	Parameter	Description	Setting	Comment		
TPWMTHRS Specifies the upper velocity for operation in stealthChop. Entry the TSTEP reading (time 1048575) stealthChop is disabled if TSTEP falls TPWMTHRS PWM_LIM Limiting value for limiting the current jerk when operating at the value to yield a lower current jerk. 0 - 15 Upper four bits of 8 bit amplitude limit (Default-12) pwm Enable automatic current scaling using current or velocity-based mode. 0 Forward controlled node utograd controlled in amplitude limit (Default-12) pwm measurement. If off, use forward controlled in automatic scaling with velocity-based mode. 0 disable, use PWM_GRAD pwm autograd utograd Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD quitograd Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD quitograd Enable automatic tuning of PWM_GRAD_AUTO 0 firmw=2/1024 fcr.x quitograd freme=2/1024 fcr.x 1 freme=2/1024 fcr.x PWM_FREQ PWM frequency selection. Use the lowest setting of the chopper outputs is half of the adaptation speed when pvm_autoscale=1. 1 Frew=2/1024 fcr.x PWM_REG User defined PWM amplitude (offsch) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_UTO. 0 255 PWM_GRAD Use	en_spread_	General disable for use of stealthChop (register	1	Do not use stealthChop		
steathChop. Entry the TSTEP reading (time between two microsteps) when operating at the desired threshold velocity. 1048575 PWM_LIM Limiting value for limiting the current jerk when switching from spreadCycle to steathtChop. Reduce the value to yield a lower current jerk. 0 15 Upper four bits of 8 bit amplitude limit (Upfault=12) pwm_ eutoscole Enable automatic current scaling using current wessurement. If off, use forward controlled 0 15 Upper four bits of 8 bit amplitude limit (Upfault=12) pwm_ eutoscole Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD from register instead pwm_ each of the chopper outputs is half of the effective chopper frequency frequency measured at daptation speed when pwm_autoscole=1. 1 frww=2/1312 frax PWM_GREG User defined PWM amplitude (gradient) for velocity based scaling and initialization value for adaptation speed when pwm_autoscole=1. 1 1 Results in 0.5 to 7.5 steps for PWM_OFS-D disables linear current scaling used on current scaling PWM_GRAD User defined PWM amplitude (Gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 255	cycle	GCONF). The input SPREAD is XORed to this flag.	0	stealthChop enabled		
between two microsteps) when operating at the desired threshold velocity. PWM_LIM Limiting value for limiting the current jerk when switching from spreadCycle to stealthChop. Reduce the value to yield a lower current jerk. 0 - 15 pwm	TPWMTHRS	Specifies the upper velocity for operation in	0	stealthChop is disabled if		
desired threshold velocity. Imiting value for limiting the current jerk when switching from spread/cycle to stealthChop. Reduce the value to yield a lower current jerk. Description pwm		stealthChop. Entry the TSTEP reading (time	1048575	TSTEP falls TPWMTHRS		
PWM_LIM switching from spreadCycle to stealthChop. Reduce the value to yield a lower current jerk. 0 15 Upper four bits of 8 bit amplitude limit (Default-12) pwm_ autoscale Enable automatic current scaling using current measurement. If off, use forward controlled velocity-based mode. 0 Forward controlled ucrrent regulator pwm_ autograd Enable automatic tuning of PWM_GRAD_AUTO autograd 0 disable, use PWM_GRAD from register instead PWM_FREQ PWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency fews. 0 fsws=2/1024 fctx PWM_REG User defined PWM amplitude regulation loop P coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale_1. 1 Results in 0.5 to 7.5 steps for PWM_CSCAUE_AUTO regulator per fullstep PWM_OFS User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 -255 FREEWHEEL Stand still option when motor current setting is caling correction as determined by the current gualator. Shall regulate close to 0 during tuning. 0 Normal operation realize a passive brake. PWM_GRAD _AUTO Allow monitoring of the automatic tuning and pased on current setting is priver off rusing on the sense resistor. Choose a setting of 1 0 -255 Coil short ia LS drivers coi		between two microsteps) when operating at the				
switching from spreadCycle to stealthChop. Reduce the value to yield a lower current jerk. amplitude limit (Default-12) pwm_ autoscale Enable automatic current scaling using current velocity-based mode. 0 Forward controlled 1 Automatic scaling with current regulator pwm_ autograd Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD 1 enable PWM_FREQ PWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frews. 0 frews-2/1024 fcux frews-2/1024 fcux PWM_REG User defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when <i>pwm_autoscale=1</i> . 1 in 15 PWM_OFS User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of <i>PWM_OFS_AUTO</i> . 0 .255 PWM_GRAD User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of <i>PWM_GRAD_AUTO</i> . 0 .255 Freewheeling tuning of <i>PWM_OFS_AUTO</i> . 0 .255 (coil short via LS drivers realize a passive brake. PWM_GRAD Automatic tuning of PWM_GRAD_AUTO. 0 .255 Freewheeling tuning of PUM_GRAD 0 .255 <td></td> <td></td> <td></td> <td></td>						
the value to yield a lower current jerk.(Default=12)pwm_ autoscaleEnable automatic current scaling using current measurement. If off, use forward controlled velocity-based mode.0Forward controlled formatic scaling with current regulatorpwm_ autogradEnable automatic tuning of PWM_GRAD_AUTO autograd0disable, use PWM_GRAD from register instead 1pwm_fREQ giving good results. The frequency measured at effective chopper frequency forwer.0fisher 21024 fcut frwm=2/1024 fcutPWM_REG coefficient. A higher value leads to a higher adaptation speed when pwm_autoscole=1.1fswm=2/410 fcut for PWM_SCALE_AUTO regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0.255PWM_GRAD uuning of PWM_OFFS_AUTO.0.255PWM_OFS-0 disables linear current scaling based on current settingPWM_GRAD AUTOUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PVM_GRAD_AUTO.0.255FREEWHEEL AUTO realutare apassive brake.0Normal operation restres realize a passive brake255 (read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and regulator. Shall regulate close to 0 during tuning.0.255PWM_GRAD AUTOComparator blank time. This time needs to safely value does not influence stealthChop0.255PWM_GRAD AUTOComparator	PWM_LIM		0 15			
pwm_ autoscale Enable automatic current scaling using current measurement. If off, use forward controlled O Forward controlled mode Autograd pwm_ autograd Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD from register instead pwm_ autograd Enable automatic tuning of PWM_GRAD_AUTO 0 disable, use PWM_GRAD from register instead pWM_FREQ PWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frome. 1 from?2/1024 fcux PWM_REG User defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when <i>pwm_autoscale=1</i> . 115 Results in 0.5 to 7.5 steps for PWM_SCALE_AUTO regulator per fullstep PWM_OFS User defined PWM amplitude (offset) for velocity velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 255 FREEWHEEL Stand still option when motor current setting is or easy movable, while both coil short options realize a passive brake. 0 Normal operation Freewheeling enabled. The freewheeling option makes the automatic tuning of he automatic tuning and oerating in spreadCycle PWM_GRAD 0 255 (read only) Scaling value becomes frozen when operating in spreadCycle PWM_GRAD AUTO Allow monitoring of the automatic tuning and pregulato				•		
autoscale measurement. If off, use forward controlled 1 Automatic scaling with current regulator pwm						
velocity-based mode.current regulatorpwm_ autogradEnable automatic tuning of PWM_GRAD_AUTO0disable, use PWM_GRAD from register insteadPWM_FREQPWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frequency frequency frequency frequency adaptation speed when pwm_autoscale=1.0frequency=2/1024 fctkPWM_REGUser defined PWM amplitude regulation loop Pr adaptation speed when pwm_autoscale=1.1Results in 0.5 to 7.5 steps for PVM_SCALE AUTO regulator per fullstepPWM_OFSUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0255PWM_OFSStand still option when motor current setting enabled. The freewheeling option makes the motor easy movable, while both coil short options.0Normal operation 2PWM_SCALE AUTORead back of the actual steatthChop of regulator. Shall regulate close to 0 during tuning.255(read only) Scaling value perating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and regulator. Shall regulate close to 0 during tuning.0255PWM_GRAD AUTOCore and black time. This time needs to safely to over the switching event and the duration of the ringing on the sense resistor. Choose a setting 00255176General enable for the motor driver, the actual value does not influence stealthChop00255176General enable for the mot	• –					
pwm_ autograd Enable automatic tuning of PWM_GRAD_AUTO autograd 0 disable, use PWM_GRAD from register instead PWM_FREQ PWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frequency frequency effective chopper frequency frequency frequency adaptation speed when pwm_autoscole1. 0 frwm=2/1024 fcik fcik PWM_REG User defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when pwm_autoscole1. 1 nesults in 0.5 to 7.5 steps for PWM_OFS dutto based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO. 0 255 PWM_GRAD User defined PWM amplitude (gradient) tuoing of PWM_OFFS_AUTO. 0 255 PWM_GRAD User defined PWM amplitude (gradient) tuoing of PWM_OFFS_AUTO. 0 255 PWM_GRAD User defined PWM amplitude (gradient) tuoing of PWM_GRAD_AUTO. 0 Normal operation 1 FREEWHEEL Stand still option when motor current setting enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake. 255 (read only) Scaling value becomes frozen when operating in spreadCycle PWM_GRAD Allow monitoring of the automatic tuning and pWM_GRAD. 0 0 255 PWM_GRAD Allow monitoring of the automatic tuning and	autoscale		1	2		
autograd from register instead PWM_FREQ PWM frequency selection. Use the lowest setting 0 frww=2/1024 fcLx giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency fxwm. 1 frww=2/683 fcLx PWM_REG User defined PWM amplitude regulation loop P coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1. 1		-	0	P P		
PWM_FREQPWM frequency selection. Use the lowest setting0frww=2/1024 fctkgiving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frww.0frww=2/1024 fctkPWM_REGUser defined PWM amplitude regulation loop P coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1.1frww=2/63 fctkPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFS_AUTO.0 255PWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255FREEWHEELStand still option when motor current setting is zero (LHOD=0). Only available with stealthChop regulator. Shall regulate close to 0 during tuning.0Normal operation 1AUTORead back of the actual stealthChop voltage PWM determination of initial values for PWM_OFS autom-255 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS AUTO0 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS AUTO0 255(read only) Scaling value 255TBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2	• –	Enable automatic tuning of <i>PWM_GRAD_AUTO</i>	0			
PWM_FREQ PWM frequency selection. Use the lowest setting giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency frews. 0 frews=2/1024 fctk PWM_REG User defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1. 1 1 1 Results in 0.5 to 7.5 steps for PWM_SCALE_AUTO regulator per fullstep PWM_OFS User defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO. 0 255 WM_OFS=0 disables PWM_GRAD User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 255 Coil short via LS drivers acting correction as determined by the current realize a passive brake. PWM_SCALE Read back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning. 0 255 (read only) Scaling value becomes frozen when operating in spreadCycle PWM_GRAD Allow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_OFS 0 255 (read only) PWM_GRAD Allow monitoring of the automatic tuning and	autograa		1	-		
giving good results. The frequency measured at each of the chopper outputs is half of the effective chopper frequency freq						
each of the chopper outputs is half of the effective chopper frequency f _{PWM} .2f_{FWM=2/512 f_{CLK}}PWM_REGUser defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1.1 15Results in 0.5 to 7.5 steps for PWM_SCALE_AUTO regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFS_AUTO.0 255PWM_OFS- User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255Normal operationFREEWHEELStand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the acating correction as determined by the current regulator. Shall regulate close to 0 during tuning.0 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and tealize a passive brake.0 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOGeneral enable for the motor driver, the actual value does not influence stealthChop0 255(read only)TDFFGeneral enable for the motor driver, the actual value does not influence stealthChop0 255(read only)TDFFGeneral enable for the motor driver, the actual value does not influence stealthChop0 25516 t_{ClK}TDFFGeneral enable for the motor driver, the actual value does not influence stealthChop0 255 <td< td=""><td>PWM_FREQ</td><td></td><td></td><td></td></td<>	PWM_FREQ					
effective chopper frequency f _{PWM} .3frww=2/410 f _{LK} PWM_REGUser defined PWM amplitude regulation loop P- adaptation speed when <i>pwm_autoscale=1.</i> 1 15Results in 0.5 to 7.5 steps for <i>PWM_SCALE_AUTO</i> regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of <i>PWM_OFFS_AUTO</i> .0 255 <i>PWM_OFS-O</i> disables linear current scaling based on current settingPWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of <i>PWM_GRAD_AUTO</i> .0 255 <i>PWM_OFS-O</i> disables linear current setting based on current setting <i>PWM_GRAD_LERStand still option when motor current setting is realize a passive brake.</i> 0 2550 255 <i>PWM_SCALE AUTO</i> Read back of the actual stealthChop voltage PWM regulator. Shall regulate close to 0 during tuning255 (read only) Scaling value becomes frozen when operating in spreadCycle <i>PWM_GRAD_ AUTO</i> Allow monitoring of the automatic tuning and determination of initial values for <i>PWM_OFS</i> and <i>PWM_GRAD.</i> 0 255(read only) <i>TOFF</i> General enable for the motor driver, the actual value does not influence stealthChop0 255(read only) <i>TOFF</i> General enable for the motor driver, the actual ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to0 2553 <i>Solution</i> 1 or 2 for typical applications. For higher settings allow stealthChop						
PWM_REGUser defined PWM amplitude regulation loop P- coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1.1 15Results in 0.5 to 7.5 steps for PWM_SCALE_AUTO regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO.0 255PWM_OFS-O disables linear current scaling based on current settingPWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255Normal operationFREEWHEELStand still option when motor current setting is realize a passive brake.0Normal operationPWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_OFS AUTOAllow monitoring of the automatic tuning and value does not influence stealthChop0 255(read only)TOFFGeneral enable for the motor driver, the actual ringing on the sense resistor. Choose a setting of 1 150Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{clk} 236 t _{clk} 354 t _{clk}						
coefficient. A higher value leads to a higher adaptation speed when pwm_autoscale=1.for PWM_SCALE_AUTO regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO.0 255PWM_OFS-O disables linear current scaling based on current settingPWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255PWM_OFSFREEWHEELStand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE AUTORead back of the actual stealthChop voltage PWM galator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.0Driver offTOFF Comparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to0Driver off124 t _{CLK} 236 t _{CLK} 236 t _{CLK} 354 t _{CLK}	D1444 D56					
adaptation speed when pwm_autoscale=1.regulator per fullstepPWM_OFSUser defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO.0 255PWM_OFS=0 disables linear current scaling based on current settingPWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255PWM_OFS=0 disables linear current settingFREEWHEELStand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_OFS AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GFAD.0 255(read only)TDFFGeneral enable for the motor driver, the actual value does not influence stealthChop01 15Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to354 tcttk236 tcttk354 tcttk354 tcttk	PWM_REG		1 15	•		
PWM_OFS User defined PWM amplitude (offset) for velocity based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO. 0 255 PWM_OFS_O disables linear current scaling based on current setting PWM_GRAD User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 255 PWM_OFS_O disables linear current setting FREEWHEEL Stand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake. 0 Normal operation PWM_SCALE Read back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning. -255 (read only) Scaling value becomes frozen when operating in spreadCycle PWM_OFS Allow monitoring of the automatic tuning and QAUTO 0 255 (read only) AUTO General enable for the motor driver, the actual value does not influence stealthChop 0 Driver off 1 15 TOFF General enable for the motor driver, the actual value does not influence stealthChop 0 16 t _{CLK} 2 36 t _{CLK} TOFF Comparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of t _{LLK} 2						
based scaling and initialization value for automatic tuning of PWM_OFFS_AUTO.linear current scaling based on current settingPWM_GRAD Velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255FREEWHEEL Stand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0PWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255PWM_GRAD AUTOAllow monitoring of the automatic tuning and operating in spreadCycle0 255AUTOGeneral enable for the motor driver, the actual value does not influence stealthChop0 255TOFF Comparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK} 2454 t _{CLK} 254 t _{CLK}			0 255	· · ·		
tuning of PWM_OFFS_AUTO.based on current settingPWM_GRADUser defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.0 255FREEWHEELStand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE _AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD _AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.0 255(read only)TOFFGeneral enable for the motor driver, the actual value does not influence stealthChop to regulate inging on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 tclk24 tclk 2 adit to regulate down to354 tclk	PVVM_OFS		0 200	—		
PWM_GRAD User defined PWM amplitude (gradient) for velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO. 0 255 FREEWHEEL Stand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake. 0 Normal operation PWM_SCALE Read back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning. -255 (read only) Scaling value becomes frozen when operating in spreadCycle PWM_GRAD Allow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD. 0 255 (read only) TOFF General enable for the motor driver, the actual value does not influence stealthChop 0 1 1 Lux TBL Comparator blank time. This time needs to safely on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to 16 124 12.kK		-		5		
velocity based scaling and initialization value for automatic tuning of PWM_GRAD_AUTO.Normal operationFREEWHEELStand still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.0 255(read only)TOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver off1TBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to054 tcuk	PWM GRAD		0 255	based on current setting		
automatic tuning of PWM_GRAD_AUTO.FREEWHEEL FREEWHEEL and still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE _AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255 255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD _AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.0 255AUTO _AUTOGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to054 tcuk	I WII_GIAD		0			
FREEWHEEL Read still option when motor current setting is zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.0Normal operationPWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255 (read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS AUTO0 255(read only)PWM_GRAD. AUTOComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK} 1016 t _{CLK} 36 t _{CLK}						
zero (I_HOLD=0). Only available with stealthChop enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.1FreewheelingPWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255 (read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD. AUTO0 255(read only)TOFF TOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 tclk354 tclk354 tclk	FREEWHEEL		0	Normal operation		
enabled. The freewheeling option makes the motor easy movable, while both coil short options realize a passive brake.2Coil short via LS driversPWM_SCALE _AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD _AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS _AUTO0 255(read only)PWM_GRAD. _AUTOComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK} 236 t _{CLK} 354 t _{CLK}				· · · · · · · · · · · · · · · · · · ·		
realize a passive brake.realize a passive brake.PWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_OFS AUTO0 255(read only)PWM_GRAD. AUTOCeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK}		enabled. The freewheeling option makes the	2			
PWM_SCALE AUTORead back of the actual stealthChop voltage PWM scaling correction as determined by the current regulator. Shall regulate close to 0 during tuning255(read only) Scaling value becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS AUTO0 255(read only)PWM_OFS AUTOPWM_GRAD.0 255(read only)TOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK}		motor easy movable, while both coil short options	3	Coil short cia HS drivers		
AUTOscaling correction as determined by the current regulator. Shall regulate close to 0 during tuning.255becomes frozen when operating in spreadCyclePWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_OFS AUTO0 255(read only)PWM_OFS AUTOPWM_GRAD.0Driver offTOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK}						
regulator. Shall regulate close to 0 during tuning.operating in spreadCyclePWM_GRAD _AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS and PWM_GRAD.0 255(read only)PWM_OFS _AUTOPWM_GRAD.0Driver offTOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK}	PWM_SCALE					
PWM_GRAD AUTOAllow monitoring of the automatic tuning and determination of initial values for PWM_OFS AUTO0 255(read only)PWM_OFS AUTOPWM_GRAD.0Driver offTOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK} 236 t _{CLK} 354 t _{CLK}	_AUTO		255			
AUTO PWM_OFS AUTOdetermination of initial values for PWM_OFS and PWM_GRAD.0Driver offTOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK}						
PWM_OFS _AUTOPWM_GRAD.OTOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to0Driver offDriver off124 t _{CLK} Structure236 t _{CLK} Structure354 t _{CLK}			0 255	(read only)		
AUTOComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down toODriver off Driver enabledAUTO0Driver offDriver off1 15Driver enabled016 t _{CLK} 124 t _{CLK} 236 t _{CLK} 354 t _{CLK}	—	_				
TOFFGeneral enable for the motor driver, the actual value does not influence stealthChop0Driver offTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to0Driver off 1 15TBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher settings allow stealthChop to regulate down to016 t _{CLK} 124 t _{CLK} 236 t _{CLK}	_					
value does not influence stealthChop1 15Driver enabledTBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to1 15Driver enabled1 15Converted applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to54t _{CLK}	-	Ganaral anable for the motor driver the actual	0	Driver off		
TBLComparator blank time. This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to016 t _{CLK} 124 t _{CLK} 236 t _{CLK} 354 t _{CLK}	TOFF					
cover the switching event and the duration of the ringing on the sense resistor. Choose a setting of 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to124 t_{CLK}236 t_{CLK}	TRI	· ·				
ringing on the sense resistor. Choose a setting of 2 36 t _{CLK} 1 or 2 for typical applications. For higher capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to	, DL					
1 or 2 for typical applications. For higher354 t _{CLK} capacitive loads, 3 may be required. Lower54 t _{CLK} settings allow stealthChop to regulate down to		-				
capacitive loads, 3 may be required. Lower settings allow stealthChop to regulate down to						
settings allow stealthChop to regulate down to						
		lower coil current values.				

7 spreadCycle and Classic Chopper

While stealthChop is a voltage mode PWM controlled chopper, spreadCycle is a cycle-by-cycle current control. Therefore, it can react extremely fast to changes in motor velocity or motor load. The currents through both motor coils are controlled using choppers. The choppers work independently of each other. In Figure 7.1 the different chopper phases are shown.

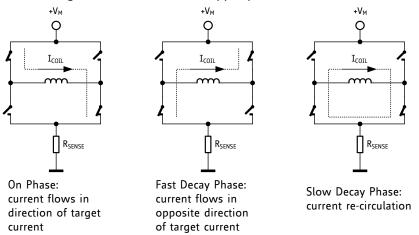


Figure 7.1 Chopper phases

Although the current could be regulated using only on phases and fast decay phases, insertion of the slow decay phase is important to reduce electrical losses and current ripple in the motor. The duration of the slow decay phase is specified in a control parameter and sets an upper limit on the chopper frequency. The current comparator can measure coil current during phases when the current flows through the sense resistor, but not during the slow decay phase, so the slow decay phase is terminated by a timer. The on phase is terminated by the comparator when the current through the coil reaches the target current. The fast decay phase may be terminated by either the comparator or another timer.

When the coil current is switched, spikes at the sense resistors occur due to charging and discharging parasitic capacitances. During this time, typically one or two microseconds, the current cannot be measured. Blanking is the time when the input to the comparator is masked to block these spikes.

There are two cycle-by-cycle chopper modes available: a new high-performance chopper algorithm called spreadCycle and a proven constant off-time chopper mode. The constant off-time mode cycles through three phases: on, fast decay, and slow decay. The spreadCycle mode cycles through four phases: on, slow decay, fast decay, and a second slow decay.

The chopper frequency is an important parameter for a chopped motor driver. A too low frequency might generate audible noise. A higher frequency reduces current ripple in the motor, but with a too high frequency magnetic losses may rise. Also, power dissipation in the driver rises with increasing frequency due to the increased influence of switching slopes causing dynamic dissipation. Therefore, a compromise needs to be found. Most motors are optimally working in a frequency range of 16 kHz to 30 kHz. The chopper frequency is influenced by a number of parameter settings as well as by the motor inductivity and supply voltage.

Hint

A chopper frequency in the range of 16 kHz to 30 kHz gives a good result for most motors when using spreadCycle. A higher frequency leads to increased switching losses.

Parameter	Description	Setting	Comment
TOFF	Sets the slow decay time (off time). This setting also	0	chopper off
	limits the maximum chopper frequency. For operation with stealthChop, this parameter is not used, but it is required to enable the motor. In case of operation with stealthChop only, any setting is OK. Setting this parameter to zero completely disables all driver transistors and the motor can free-wheel.		off time setting N _{CLK} = 12 + 32* <i>TOFF</i> (1 will work with minimum blank time of 24 clocks)
TBL	Selects the comparator <i>blank time</i> . This time needs to safely cover the switching event and the duration of the ringing on the sense resistor. For most applications, a setting of 1 or 2 is good. For highly capacitive loads, e.g. when filter networks are used, a setting of 2 or 3 will be required.	-	16 t _{CLK}
			24 t _{CLK}
		2	36 t _{CLK}
		3	54 t _{CLK}
chm	Selection of the chopper mode	0	spreadCycle
		1	classic const. off time
TPFD	Adds passive fast decay time after bridge polarity		Fast decay time in multiple
	change. Starting from 0, increase value, in case the	015	of 128 clocks (128 clocks
	motor suffers from mid-range resonances.		are roughly 10µs)

Three parameters are used for controlling both chopper modes:

7.1 spreadCycle Chopper

The spreadCycle (patented) chopper algorithm is a precise and simple to use chopper mode which automatically determines the optimum length for the fast-decay phase. The spreadCycle will provide superior microstepping quality even with default settings. Several parameters are available to optimize the chopper to the application.

Each chopper cycle is comprised of an on phase, a slow decay phase, a fast decay phase and a second slow decay phase (see Figure 7.3). The two slow decay phases and the two blank times per chopper cycle put an upper limit to the chopper frequency. The slow decay phases typically make up for about 30%-70% of the chopper cycle in standstill and are important for low motor and driver power dissipation.

Calculation of a starting value for the slow decay time TOFF:

EXAMPLE:

Target Chopper frequency: 25kHz. Assumption: Two slow decay cycles make up for 50% of overall chopper cycle time

$$t_{OFF} = \frac{1}{25kHz} * \frac{50}{100} * \frac{1}{2} = 10\mu s$$

For the *TOFF* setting this means:

$$TOFF = (t_{OFF} * f_{CLK} - 12)/32$$

With 12 MHz clock this gives a setting of TOFF=3.4, i.e. 3 or 4. With 16 MHz clock this gives a setting of TOFF=4.6, i.e. 4 or 5.

The hysteresis start setting forces the driver to introduce a minimum amount of current ripple into the motor coils. The current ripple must be higher than the current ripple which is caused by resistive losses in the motor in order to give best microstepping results. This will allow the chopper to precisely regulate the current both for rising and for falling target current. The time required to introduce the current ripple into the motor coil also reduces the chopper frequency. Therefore, a higher hysteresis setting will lead to a lower chopper frequency. The motor inductance limits the ability of the chopper to follow a changing motor current. Further the duration of the on phase and the fast decay must be longer than the blanking time, because the current comparator is disabled during blanking.

It is easiest to find the best setting by starting from a low hysteresis setting (e.g. *HSTRT*=0, *HEND*=0) and increasing *HSTRT*, until the motor runs smoothly at low velocity settings. This can best be checked when measuring the motor current either with a current probe or by probing the sense resistor voltages (see Figure 7.2). Checking the sine wave shape near zero transition will show a small ledge between both half waves in case the hysteresis setting is too small. At medium velocities (i.e. 100 to 400 fullsteps per second), a too low hysteresis setting will lead to increased humming and vibration of the motor.

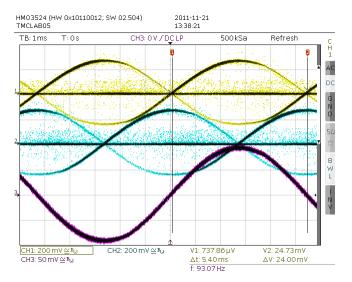


Figure 7.2 No ledges in current wave with sufficient hysteresis (magenta: current A, yellow & blue: sense resistor voltages A and B)

A too high hysteresis setting will lead to reduced chopper frequency and increased chopper noise but will not yield any benefit for the wave shape.

Quick Start

For a quick start, see the Quick Configuration Guide in chapter 18. For detail procedure see Application Note AN001 - *Parameterization of spreadCycle*

As experiments show, the setting is quite independent of the motor, because higher current motors typically also have a lower coil resistance. Therefore, choosing a low to medium default value for the hysteresis (for example, effective hysteresis = 4) normally fits most applications. The setting can be optimized by experimenting with the motor: A too low setting will result in reduced microstep accuracy, while a too high setting will lead to more chopper noise and motor power dissipation. When measuring the sense resistor voltage in motor standstill at a medium coil current with an oscilloscope, a too low setting shows a fast decay phase not longer than the blanking time. When the fast decay time becomes slightly longer than the blanking time, the setting is optimum. You can reduce the off-time setting, if this is hard to reach.

The hysteresis principle could in some cases lead to the chopper frequency becoming too low, e.g. when the coil resistance is high when compared to the supply voltage. This is avoided by splitting the hysteresis setting into a start setting (*HSTRT+HEND*) and an end setting (*HEND*). An automatic hysteresis decrementer (HDEC) interpolates between both settings, by decrementing the hysteresis value stepwise each 16 system clocks. At the beginning of each chopper cycle, the hysteresis begins with a value which is the sum of the start and the end values (*HSTRT+HEND*), and decrements during the cycle, until either the chopper cycle ends or the hysteresis end value (*HEND*) is reached. This way,

the chopper frequency is stabilized at high amplitudes and low supply voltage situations, if the frequency gets too low. This avoids the frequency reaching the audible range.

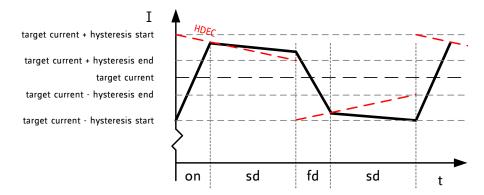


Figure 7.3 spreadCycle chopper scheme showing coil current during a chopper cycle

Two parameters control spreadCycle mode:

Parameter	Description	Setting	Comment
HSTRT	Hysteresis start setting. This value is an offset	07	HSTRT=18
	from the hysteresis end value HEND.		This value adds to HEND.
HEND	Hysteresis end setting. Sets the hysteresis end		-31: negative HEND
	value after a number of decrements. The sum <i>HSTRT+HEND</i> must be ≤16. At a current setting of	3	0: zero HEND
	max. 30 (amplitude reduced to 240), the sum is not limited.	415	112: positive HEND

With HSTRT=0 and HEND=0, the hysteresis is 0 (off).

EXAMPLE:				
A hysteresis of set:	f 4 has been chosen. You might decide to not use hysteresis decrement. In this case			
HEND=6 HSTRT=0	(sets an effective end value of 6-3=3) (sets minimum hysteresis, i.e. 1: 3+1=4)			
In order to take advantage of the variable hysteresis, we can set most of the value to the HSTRT, i.e. 4, and the remaining 1 to hysteresis end. The resulting configuration register values are as follows:				
HEND=0 HSTRT=6	(sets an effective end value of -3) (sets an effective start value of hysteresis end +7: 7-3=4)			

Hint

Highest motor velocities sometimes benefit from setting TOFF to 2 or 3 and a short TBL of 2 or 1.

7.2 Classic Constant Off Time Chopper

The classic constant off time chopper is an alternative to spreadCycle. Perfectly tuned, it also gives good results. Also, the classic constant off time chopper (automatically) is used in combination with fullstepping in dcStep operation.

The classic constant off-time chopper uses a fixed-time fast decay following each on phase. While the duration of the on phase is determined by the chopper comparator, the fast decay time needs to be long enough for the driver to follow the falling slope of the sine wave, but it should not be so long that it causes excess motor current ripple and power dissipation. This can be tuned using an oscilloscope or evaluating motor smoothness at different velocities. A good starting value is a fast decay time setting similar to the slow decay time setting.


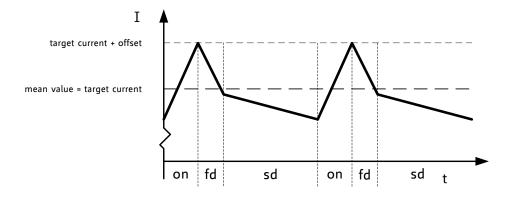


Figure 7.4 Classic const. off time chopper with offset showing coil current

After tuning the fast decay time, the offset should be tuned for a smooth zero crossing. This is necessary because the fast decay phase makes the absolute value of the motor current lower than the target current (see Figure 7.5). If the zero offset is too low, the motor stands still for a short moment during current zero crossing. If it is set too high, it makes a larger microstep. Typically, a positive offset setting is required for smoothest operation.

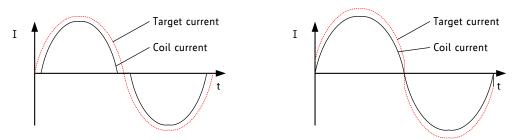

Coil current does not have optimum shape

Target current corrected for optimum shape of coil current

Figure 7.5 Zero crossing with classic chopper and correction using sine wave offset Three parameters control constant off-time mode:

Parameter	Description	Setting	Comment
TFD	<i>Fast decay time</i> setting. With CHM=1, these bits control the portion of fast decay for each chopper cycle.		slow decay only
(fd3 & HSTRT)		115	duration of fast decay phase
OFFSET	Sine wave offset. With CHM=1, these bits control the sine wave offset. A positive offset corrects for zero crossing error.		negative offset: -31
(HEND)		3	no offset: 0
		415	positive offset 112
disfdcc	Selects usage of the <i>current comparator</i> for termination of the <i>fast decay</i> cycle. If current comparator is enabled, it terminates the fast decay cycle in case the current reaches a higher negative value than the actual positive value.		enable comparator termination of fast decay cycle
		1	end by time only

8 Selecting Sense Resistors

The TMC2160 provides several means to set the motor current: Sense resistors, *GLOBALSCALER* and currentscale *CS*. To adapt a drive to the motor, choose a sense-resistor value fitting or slightly exceeding the maximum desired current at 100% settings of the scalers. Fine-tune the current to the specific motor via the 8 bit *GLOBALSCALER*. Situation specific motor current adaptation is done by 5 bit scalers (actual scale can be read via *CS*), controlled by coolStep, run- and hold current (*IRUN*, *IHOLD*). This makes the *CS* control compatible to other TRINAMIC ICs.

Set the desired maximum motor current by selecting an appropriate value for the sense resistor. The following table shows the RMS current values which are reached using standard resistors.

CHOICE OF R_{SENSE} and resulting max. Motor current with <i>GLOBALSCALER</i> =255			
R _{sense} [Ω]	RMS current [A] (CS=31)	Sine wave peak current [A] (CS=31)	
0.22	1.1	1.5	
0.15	1.6	2.2	
0.12	2.0	2.8	
0.10	2.3	3.3	
0.075	3.1	4.4	
0.066	3.5	5.0	
0.050	4.7	6.6	
0.033	7.1	10.0	
0.022	10.6	15.0	

Sense resistors should be carefully selected. The full motor current flows through the sense resistors. Due to chopper operation the sense resistors see pulsed current from the MOSFET bridges. Therefore, a low-inductance type such as film or composition resistors is required to prevent voltage spikes causing ringing on the sense voltage inputs leading to unstable measurement results. Also, a low-inductance, low-resistance PCB layout is essential. A massive ground plane is best. Please also refer to layout considerations in chapter 25.

The sense resistor sets the upper current which can be set by software settings *IRUN*, *IHOLD* and *GLOBALSCALER*. Choose the sense resistor value so that the maximum desired current (or slightly more) flows at the maximum current setting (*GLOBALSCALER* = 0 and *IRUN* = 31).

CALCULATION OF RMS CURRENT

$$I_{RMS} = \frac{GLOBALSCALER}{256} * \frac{CS+1}{32} * \frac{V_{FS}}{R_{SENSE}} * \frac{1}{\sqrt{2}}$$

The momentary motor current is calculated by:

$$I_{MOT} = \frac{GLOBALSCALER}{256} * \frac{CUR_{A/B}}{248} * \frac{CS+1}{32} * \frac{V_{FS}}{R_{SENSE}}$$

GLOBALSCALER is the global current scaler. A setting of 0 is treated as full scale (256). *CS* is the current scale setting as set by the *IHOLD* and *IRUN* and coolStep. V_{FS} is the full scale voltage (please refer to electrical characteristics, V_{SRT}). *CUR_{A/B}* is the actual value from the internal sine wave table. 248 is the amplitude of the internal sine wave table.

The sense resistor needs to be able to conduct the peak motor coil current in motor standstill conditions, unless standby power is reduced. Under normal conditions, the sense resistor conducts

less than the coil RMS current, because no current flows through the sense resistor during the slow decay phases.

CALCULATION OF PEAK SENSE RESISTOR POWER DISSIPATION

 $P_{RSMAX} = I_{COIL}^2 * R_{SENSE}$

Hint

For best precision of current setting, it is advised to measure and fine tune the current in the application. Choose the sense resistors to the next value covering the desired motor current. Set *IRUN* to 31 corresponding 100% of the desired motor current and fine-tune motor current using *GLOBALSCALER*.

Attention

Be sure to use a symmetrical sense resistor layout and short and straight sense resistor traces of identical length. Well matching sense resistors ensure best performance. A compact layout with massive ground plane is best to avoid parasitic resistance effects.

Parameter Description Setting Comment IRUN Current scale when motor is running. Scales coil 0 ... 31 scaling factor current values as taken from the internal sine 1/32, 2/32, ... 32/32 wave table. For high precision motor operation, work with a current scaling factor in the range 16 to 31, because scaling down the current values reduces the effective microstep resolution by making microsteps coarser. This setting also controls the maximum current value set by coolStep. IHOLD Identical to IRUN, but for motor in stand still. IHOLD Allows smooth current reduction from run current 0 instant IHOLD 1*2¹⁸ ... 15*2¹⁸ DELAY to hold current. *IHOLDDELAY* controls the number 1 ... 15 of clock cycles for motor power down after clocks per current TZEROWAIT in increments of 2¹⁸ clocks: 0=instant decrement power down, 1..15: Current reduction delay per current step in multiple of 2¹⁸ clocks. Example: When using IRUN=31 and IHOLD=16, 15 current steps are required for hold current reduction. A IHOLDDELAY setting of 4 thus results in a power down time of 4*15*2^18 clock cycles, i.e. roughly one second at 16MHz. Allows fine control of the motor current range 0 ... 255 GLOBAL scales in 1/256 steps SCALER setting 0=full scale

9 Velocity Based Mode Control

The TMC2160 allows the configuration of different chopper modes and modes of operation for optimum motor control. Depending on the motor load, the different modes can be optimized for lowest noise & high precision, highest dynamics, or maximum torque at highest velocity. Some of the features like coolStep or stallGuard2 are useful in a limited velocity range. A number of velocity thresholds allow combining the different modes of operation within an application requiring a wide velocity range.

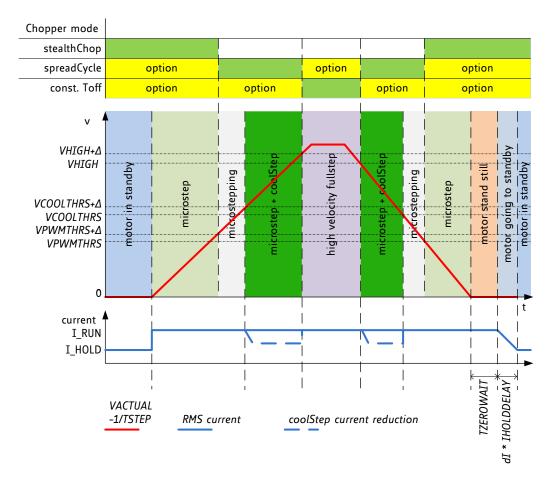


Figure 9.1 Choice of velocity dependent modes

Figure 9.1 shows all available thresholds and the required ordering. VPWMTHRS, VHIGH and VCOOLTHRS are determined by the settings *TPWMTHRS*, *THIGH* and *TCOOLTHRS*. The velocity is described by the time interval *TSTEP* between each two step pulses. This allows determination of the velocity when an external step source is used. *TSTEP* always becomes normalized to 256 microstepping. This way, the thresholds do not have to be adapted when the microstep resolution is changed. The thresholds represent the same motor velocity, independent of the microstep settings. *TSTEP* becomes compared to these threshold values. A hysteresis of 1/16 *TSTEP* resp. 1/32 *TSTEP* is applied to avoid continuous toggling of the comparison results when a jitter in the *TSTEP* measurement occurs. The upper switching velocity is higher by 1/16, resp. 1/32 of the value set as threshold. The stealthChop threshold *TPWMTHRS* is not shown. It can be included with VPWMTHRS < VCOOLTHRS. The motor current can be programmed to a run and a hold level, dependent on the standstill flag *stst*.

Using automatic velocity thresholds allows tuning the application for different velocity ranges. Features like coolStep will integrate completely transparently in your setup. This way, once parameterized, they do not require any activation or deactivation via software.

Parameter	Description	Setting	Comment
stst	This flag indicates motor stand still in each operation mode. This occurs 2^20 clocks after the last step pulse.	0/1	Status bit, read only
TPOWER DOWN	This is the delay time after stand still (<i>stst</i>) of the motor to motor current power down. Time range is about 0 to 4 seconds.	0255	Time in multiples of 2^18 t _{CLK}
TSTEP	Actual measured time between two 1/256 microsteps derived from the step input frequency in units of 1/fCLK. Measured value is (2^20)-1 in case of overflow or stand still.		Status register, read only. Actual measured step time in multiple of t_{CLK}
TPWMTHRS	TSTEP ≥ TPWMTHRS - stealthChop PWM mode is enabled, if configured - dcStep is disabled	0 1048575	Setting to control the upper velocity threshold for operation in stealthChop
TCOOLTHRS	TCOOLTHRS ≥ TSTEP ≥ THIGH: - coolStep is enabled, if configured - stealthChop voltage PWM mode is disabled	0 1048575	Setting to control the lower velocity threshold for operation with coolStep and stallGuard
	TCOOLTHRS ≥ TSTEP - Stop on stall and stall output signal is enabled, if configured		
THIGH	 TSTEP ≤ THIGH: coolStep is disabled (motor runs with normal current scale) stealthChop voltage PWM mode is disabled If vhighchm is set, the chopper switches to chm=1 with TFD=0 (constant off time with slow decay, only). If vhighfs is set, the motor operates in fullstep mode and the stall detection becomes switched over to dcStep stall 		Setting to control the upper threshold for operation with coolStep and stallGuard as well as optional high velocity step mode
small	detection. Hysteresis for step frequency comparison based	0	Hysteresis is 1/16
hysteresis	on <i>TSTEP</i> (lower velocity threshold) and (<i>TSTEP</i> *15/16)-1 respectively (<i>TSTEP</i> *31/32)-1 (upper velocity threshold)		Hysteresis is 1/32
vhighfs	This bit enables switching to fullstep, when VHIGH is exceeded. Switching takes place only at 45° position. The fullstep target current uses the current value from the microstep table at the 45° position.		No switch to fullstep Fullstep at high velocities
vhighchm	This bit enables switching to <i>chm</i> =1 and <i>fd</i> =0, when <i>VHIGH</i> is exceeded. This way, a higher velocity can		No change of chopper mode
	be achieved. Can be combined with <i>vhighfs</i> =1. If set, the <i>TOFF</i> setting automatically becomes doubled during high velocity operation in order to avoid doubling of the chopper frequency.	1	Classic const. Toff chopper at high velocities
en_pwm_	stealthChop voltage PWM enable flag (depending		No stealthChop
mode	on velocity thresholds). Switch from off to on state while in stand still, only.	1	StealthChop below VPWMTHRS

10 Diagnostics and Protection

The TMC2160 supplies a complete set of diagnostic and protection capabilities, like short circuit protection and undervoltage detection. Open load detection allows testing if a motor coil connection is interrupted. See the *DRV_STATUS* table for details.

10.1 Temperature Sensors

The driver integrates a four level temperature sensor (120°C pre-warning and selectable 136°C / 143°C / 150°C thermal shutdown) for diagnostics and for protection of the IC and the power MOSFETs and adjacent components against excess heat. Choose the overtemperature level to safely cover error conditions like missing heat convection. Heat is mainly generated by the power MOSFETs, and, at increased voltage, by the internal voltage regulators. For many applications, already the overtemperature pre-warning will indicate an abnormal operation situation and can be used to initiate user warning or power reduction measures like motor current reduction. The thermal shutdown is just an emergency measure and temperature rising to the shutdown level should be prevented by design.

After triggering the overtemperature sensor (ot flag), the driver remains switched off until the system temperature falls below the pre-warning level (otpw) to avoid continuous heating to the shutdown level.

10.2 Short Protection

The TMC2160 protects the MOSFET power stages against a short circuit or overload condition by monitoring the voltage drop in the high-side MOSFETs, as well as the voltage drop in sense resistor and low-side MOSFETs (Figure 10.1). A programmable short detection delay (*shortdelay*) allows adjusting the detector to work with very slow switching slopes. Additionally, the short detector allows filtering of the signal. This helps to prevent spurious triggering caused by effects of PCB layout, or long, adjacent motor cables (*SHORTFILTER*). All control bits are available via register *SHORT_CONF*. Additionally, the short detection is protected against single events, e.g. caused by ESD discharges, by retrying three times before switching off the motor continuously.

Parameter	Description	Setting	Comment
S2VS_LEVEL	Short or overcurrent detector level for lowside FETs. Checks for voltage drop in LS MOSFET and sense resistor. <i>Hint:</i> 6 to 8 recommended, down to 4 at low current scale	415	4 (highest sensitivity) 15 (lowest sensitivity) (Reset Default: OTP 6 or 12)
S2G_LEVEL	S2G_LEVEL: Short to GND detector level for highside FETs. Checks for voltage drop on high side MOSFET. <i>Hint:</i> 6 to 14 recommended (minimum 12 if the bridge supply voltage can exceed 52V)	215	2 (highest sensitivity) 15 (lowest sensitivity) (Reset Default: OTP 6 or 12)
SHORT_ FILTER	Spike filtering bandwidth for short detection <i>Hint:</i> A good PCB layout will allow using setting 0. Increase value, if erroneous short detection occurs.	03	0 (lowest, 100ns), 1 (1μs) (<i>Reset Default</i>), 2 (2μs), 3 (3μs)
shortdelay	<i>shortdelay</i> : Short detection delay The short detection delay shall cover the bridge switching time. 0 will work for most applications.	0/1	0=750ns: normal, 1=1500ns: high
CHOPCONF. diss2vs	Allows to disable short to VS protection.	0/1	Leave detection enabled for normal use (0).
CHOPCONF. diss2g	Allows to disable short to GND protection.	0/1	Leave detection enabled for normal use (0).

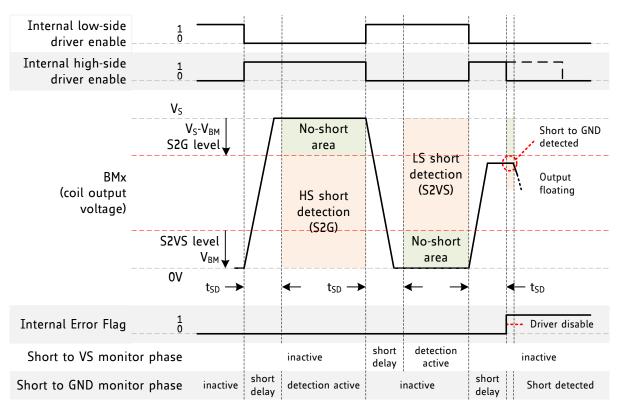


Figure 10.1 Short detection

As the low-side short detection includes the sense resistor, it can be set to a high sensitivity and provides good precision of current detection. This way, it will safely cover most overcurrent conditions, i.e. when the motor stalls, or is abruptly stopped in stealthChop mode.

Hint

Once a short condition is safely detected, the corresponding driver bridge (A or B) becomes switched off, and the *s2ga* or *s2gb* flag, respectively *s2vsa* or *s2vsb* becomes set. To restart the motor, disable and re-enable the driver.

Attention

Short protection cannot protect the system and the power stages for all possible short events, as a short event is rather undefined and a complex network of external components may be involved. Therefore, short circuits should basically be avoided.

Hint

Set low-side short protection (S2VS) to sensitively detect an overcurrent condition (at 150 to 200% of nominal peak current). Especially with low resistive motors an overcurrent can easily be triggered by false settings, or motor stall when using stealthChop. Therefore, a sensitive short to VS setting will protect the power stage.

Attention

High-side short detection (S2G) sensitivity may increase at voltages above 52V. Therefore, a higher setting is required if motor supply voltage can overshoot up to 55V. We recommend a setting of 12 to 15 in this case. For fine tuning of overcurrent detection, trim the S2VS detector threshold. High-side short detection may falsely trigger if motor supply voltage overshoots 55V.

10.3 Open Load Diagnostics

Interrupted cables are a common cause for systems failing, e.g. when connectors are not firmly plugged. The TMC2160 detects open load conditions by checking, if it can reach the desired motor coil current. This way, also undervoltage conditions, high motor velocity settings or short and overtemperature conditions may cause triggering of the open load flag, and inform the user, that motor torque may suffer. In motor stand still, open load cannot be measured, as the coils might eventually have zero current.

Open load detection is provided for system debugging.

In order to safely detect an interrupted coil connection, read out the open load flags at low or nominal motor velocity operation, only. If possible, use spreadCycle for testing, as it provides the most accurate test. However, the *ola* and *olb* flags have just informative character and do not cause any action of the driver.

11 stallGuard2 Load Measurement

stallGuard2 provides an accurate measurement of the load on the motor. It can be used for stall detection as well as other uses at loads below those which stall the motor, such as coolStep load-adaptive current reduction. The stallGuard2 measurement value changes linearly over a wide range of load, velocity, and current settings, as shown in Figure 11.1. At maximum motor load, the value goes to zero or near to zero. This corresponds to a load angle of 90° between the magnetic field of the coils and magnets in the rotor. This also is the most energy-efficient point of operation for the motor.

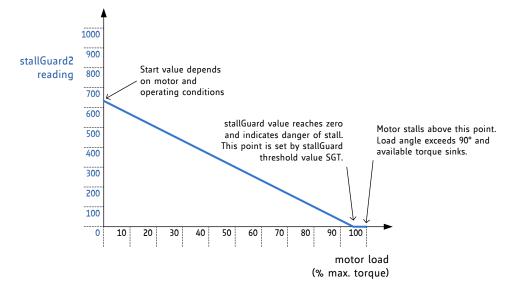


Figure 11.1 Function principle of stallGuard2

Parameter	Description	Setting	Comment
SGT	This signed value controls the stallGuard2 threshold level for stall detection and sets the optimum measurement range for readout. A lower value gives a higher sensitivity. Zero is the starting value working with most motors. A higher value makes stallGuard2 less sensitive and requires more torque to indicate a stall.	0	indifferent value
		+1 +63	less sensitivity
		-164	higher sensitivity
sfilt	Enables the stallGuard2 filter for more precision of the measurement. If set, reduces the measurement frequency to one measurement per electrical period of the motor (4 fullsteps).		standard mode
		1	filtered mode
Status word	Description	Range	Comment
SG_RESULT	This is the stallGuard2 result. A higher reading indicates less mechanical load. A lower reading indicates a higher load and thus a higher load angle. Tune the SGT setting to show a SG_RESULT reading of roughly 0 to 100 at maximum load before motor stall.	0 1023	0: highest load low value: high load high value: less load

Hint

In order to use stallGuard2 and coolStep, the stallGuard2 sensitivity should first be tuned using the SGT setting!

11.1 Tuning stallGuard2 Threshold SGT

The stallGuard2 value *SG_RESULT* is affected by motor-specific characteristics and application-specific demands on load and velocity. Therefore, the easiest way to tune the stallGuard2 threshold *SGT* for a specific motor type and operating conditions is interactive tuning in the actual application.

INITIAL PROCEDURE FOR TUNING STALLGUARD SGT

- 1. Operate the motor at the normal operation velocity for your application and monitor SG_RESULT.
- 2. Apply slowly increasing mechanical load to the motor. If the motor stalls before SG_RESULT reaches zero, decrease SGT. If SG_RESULT reaches zero before the motor stalls, increase SGT. A good SGT starting value is zero. SGT is signed, so it can have negative or positive values.
- 3. Set *TCOOLTHRS* to a value above *TSTEP* and monitor the stallGuard output signal (configure DIAGO or DIAG1 to output stall detection). Stop the motor when a pulse is seen on the respective output. Make sure, that the motor is safely stopped whenever it is stalled. Increase *SGT* if the motor becomes stopped before a stall occurs.
- 4. The optimum setting is reached when SG_RESULT is between 0 and roughly 100 at increasing load shortly before the motor stalls, and SG_RESULT increases by 100 or more without load. SGT in most cases can be tuned for a certain motion velocity or a velocity range. Make sure, that the setting works reliable in a certain range (e.g. 80% to 120% of desired velocity) and also under extreme motor conditions (lowest and highest applicable temperature).

OPTIONAL PROCEDURE ALLOWING AUTOMATIC TUNING OF SGT

The basic idea behind the SGT setting is a factor, which compensates the stallGuard measurement for resistive losses inside the motor. At standstill and very low velocities, resistive losses are the main factor for the balance of energy in the motor, because mechanical power is zero or near to zero. This way, SGT can be set to an optimum at near zero velocity. This algorithm is especially useful for tuning SGT within the application to give the best result independent of environment conditions, motor stray, etc.

- Operate the motor at low velocity < 10 RPM (i.e. a few to a few fullsteps per second) and target operation current and supply voltage. In this velocity range, there is not much dependence of SG_RESULT on the motor load, because the motor does not generate significant back EMF. Therefore, mechanical load will not make a big difference on the result.
- 2. Switch on *sfilt*. Now increase *SGT* starting from 0 to a value, where *SG_RESULT* starts rising. With a high *SGT*, *SG_RESULT* will rise up to the maximum value. Reduce again to the highest value, where *SG_RESULT* stays at 0. Now the *SGT* value is set as sensibly as possible. When you see *SG_RESULT* increasing at higher velocities, there will be useful stall detection.

The upper velocity for the stall detection with this setting is determined by the velocity, where the motor back EMF approaches the supply voltage and the motor current starts dropping when further increasing velocity.

SG_RESULT goes to zero when the motor stalls and the stall output becomes activated. The external motion controller should react to a single pulse by stopping the motor, if desired. Set *TCOOLTHRS* to match the lower velocity threshold where stallGuard delivers a good result.

The power supply voltage also affects SG_RESULT , so tighter voltage regulation results in more accurate values. stallGuard measurement has a high resolution, and there are a few ways to enhance its accuracy, as described in the following sections.

Quick Start

For a quick start, see the Quick Configuration Guide in chapter 18. For detail procedure see Application Note AN002 - *Parameterization of stallGuard2 & coolStep*

11.1.1 Variable Velocity Limits TCOOLTHRS and THIGH

The *SGT* setting chosen as a result of the previously described *SGT* tuning can be used for a certain velocity range. Outside this range, a stall may not be detected safely, and coolStep might not give the optimum result.

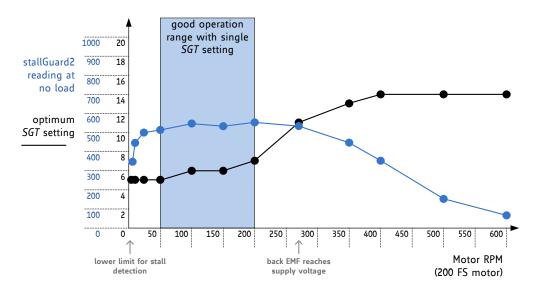


Figure 11.2 Example: optimum SGT setting and stallGuard2 reading with an example motor

In many applications, operation at or near a single operation point is used most of the time and a single setting is sufficient. The driver provides a lower and an upper velocity threshold to match this. The stall detection is disabled outside the determined operation point, e.g. during acceleration phases preceding a sensorless homing procedure when setting *TCOOLTHRS* to a matching value. An upper limit can be specified by *THIGH*.

In some applications, a velocity dependent tuning of the *SGT* value can be expedient, using a small number of support points and linear interpolation.

11.1.2 Small Motors with High Torque Ripple and Resonance

Motors with a high detent torque show an increased variation of the stallGuard2 measurement value SG with varying motor currents, especially at low currents. For these motors, the current dependency should be checked for best result.

11.1.3 Temperature Dependence of Motor Coil Resistance

Motors working over a wide temperature range may require temperature correction, because motor coil resistance increases with rising temperature. This can be corrected as a linear reduction of *SGT* at increasing temperature, as motor efficiency is reduced.

11.1.4 Accuracy and Reproducibility of stallGuard2 Measurement

In a production environment, it may be desirable to use a fixed *SGT* value within an application for one motor type. Most of the unit-to-unit variation in stallGuard2 measurements results from manufacturing tolerances in motor construction. The measurement error of stallGuard2 – provided that all other parameters remain stable – can be as low as:

```
stallGuard measurement error = \pm max(1, |SGT|)
```

11.2 stallGuard2 Update Rate and Filter

The stallGuard2 measurement value *SG_RESULT* is updated with each full step of the motor. This is enough to safely detect a stall, because a stall always means the loss of four full steps. In a practical application, especially when using coolStep, a more precise measurement might be more important than an update for each fullstep because the mechanical load never changes instantaneously from one step to the next. For these applications, the *sfilt* bit enables a filtering function over four load measurements. The filter should always be enabled when high-precision measurement is required. It compensates for variations in motor construction, for example due to misalignment of the phase A to phase B magnets. The filter should be disabled when rapid response to increasing load is required and for best results of sensorless homing using stallGuard.

11.3 Detecting a Motor Stall

For best stall detection, work without stallGuard filtering (*sfilt*=0). To safely detect a motor stall the stall threshold must be determined using a specific *SGT* setting. Therefore, the maximum load needs to be determined, which the motor can drive without stalling. At the same time, monitor the *SG_RESULT* value at this load, e.g. some value within the range 0 to 100. The stall threshold should be a value safely within the operating limits, to allow for parameter stray. The response at an *SGT* setting at or near 0 gives some idea on the quality of the signal: Check the *SG* value without load and with maximum load. They should show a difference of at least 100 or a few 100, which shall be large compared to the offset. If you set the *SGT* value in a way, that a reading of 0 occurs at maximum motor load, the stall can be automatically detected by the motion controller to issue a motor stop. In the moment of the step resulting in a step loss, the lowest reading will be visible. After the step loss, the motor will vibrate and show a higher *SG_RESULT* reading.

11.4 Homing with stallGuard

The homing of a linear drive requires moving the motor into the direction of a hard stop. As stallGuard needs a certain velocity to work (as set by *TCOOLTHRS*), make sure that the start point is far enough away from the hard stop to provide the distance required for the acceleration phase. After setting up *SGT* and the ramp generator registers, start a motion into the direction of the hard stop and activate the stop on stall function of your controller. Best results are yielded at 30% to 70% of nominal motor current and typically 1 to 5 RPS (motors smaller than NEMA17 may require higher velocities).

11.5 Limits of stallGuard2 Operation

stallGuard2 does not operate reliably at extreme motor velocities: Very low motor velocities (for many motors, less than one revolution per second) generate a low back EMF and make the measurement unstable and dependent on environment conditions (temperature, etc.). The automatic tuning procedure described above will compensate for this. Other conditions will also lead to extreme settings of *SGT* and poor response of the measurement value *SG_RESULT* to the motor load.

Very high motor velocities, in which the full sinusoidal current is not driven into the motor coils also leads to poor response. These velocities are typically characterized by the motor back EMF reaching the supply voltage.

12 coolStep Operation

coolStep is an automatic smart energy optimization for stepper motors based on the motor mechanical load, making them "green".

12.1 User Benefits



Energy efficiency Motor generates less heat Less cooling infrastructure Cheaper motor consumption decreased up to 75%

- improved mechanical precision

- for motor and driver
- does the job!

coolStep allows substantial energy savings, especially for motors which see varying loads or operate at a high duty cycle. Because a stepper motor application needs to work with a torque reserve of 30% to 50%, even a constant-load application allows significant energy savings because coolStep automatically enables torque reserve when required. Reducing power consumption keeps the system cooler, increases motor life, and allows reducing cost in the power supply and cooling components.

Reducing motor current by half results in reducing power by a factor of four.

12.2 Setting up for coolStep

coolStep is controlled by several parameters, but two are critical for understanding how it works:

Parameter	Description	Range	Comment
SEMIN	4-bit unsigned integer that sets a <i>lower threshold</i> . If <i>SG</i> goes below this threshold, coolStep increases the current to both coils. The 4-bit <i>SEMIN</i> value is scaled by 32 to cover the lower half of the range of the 10-bit <i>SG</i> value. (The name of this parameter is derived from smartEnergy, which is an earlier name for coolStep.)	115	disable coolStep threshold is <i>SEMIN</i> *32
SEMAX	4-bit unsigned integer that controls an <i>upper threshold</i> . If SG is sampled equal to or above this threshold enough times, coolStep decreases the current to both coils. The upper threshold is (<i>SEMIN</i> + <i>SEMAX</i> + 1)*32.		threshold is (<i>SEMIN+SEMAX</i> +1)*32

Figure 12.1 shows the operating regions of coolStep:

- The black line represents the SG measurement value.
- The blue line represents the mechanical load applied to the motor.
- The red line represents the current into the motor coils.

When the load increases, SG_RESULT falls below SEMIN, and coolStep increases the current. When the load decreases, SG_RESULT rises above (SEMIN + SEMAX + 1) * 32, and the current is reduced.

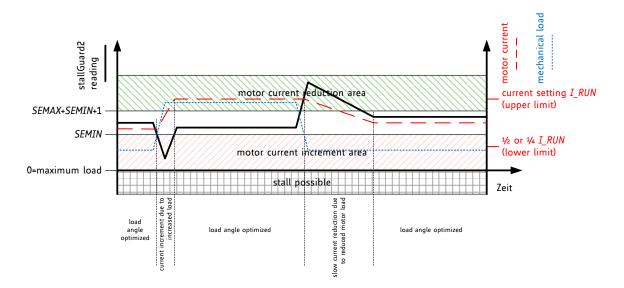


Figure 12.1 coolStep adapts motor current to the load

Five more parameters control coolStep and one status value is returned:

Parameter	Description	Range	Comment
SEUP	Sets the <i>current increment step</i> . The current becomes incremented for each measured stallGuard2 value below the lower threshold.	03	step width is 1, 2, 4, 8
SEDN	Sets the number of stallGuard2 readings above the upper threshold necessary for each <i>current decrement</i> of the motor current.	03	number of stallGuard2 measurements per decrement: 32, 8, 2, 1
SEIMIN	Sets the <i>lower motor current limit</i> for coolStep operation by scaling the <i>IRUN</i> current setting.	0 1	0: 1/2 of IRUN 1: 1/4 of IRUN
TCOOL THRS	Lower velocity threshold for switching on coolStep and stop on stall. Below this velocity coolStep becomes disabled (not used in STEP/DIR mode). Adapt to the lower limit of the velocity range where stallGuard2 gives a stable result. <i>Hint:</i> May be adapted to disable coolStep during acceleration and deceleration phase by setting identical to VMAX.		Specifies lower coolStep velocity by comparing the threshold value to <i>TSTEP</i>
THIGH	Upper velocity threshold value for coolStep and stop on stall. Above this velocity coolStep becomes disabled. Adapt to the velocity range where stallGuard2 gives a stable result.		Also controls additional functions like switching to fullstepping.
Status word	Description	Range	Comment
CSACTUAL	This status value provides the <i>actual motor current scale</i> as controlled by coolStep. The value goes up to the <i>IRUN</i> value and down to the portion of <i>IRUN</i> as specified by <i>SEIMIN</i> .	031	1/32, 2/32, 32/32

12.3 Tuning coolStep

Before tuning coolStep, first tune the stallGuard2 threshold level *SGT*, which affects the range of the load measurement value *SG_RESULT*. coolStep uses *SG_RESULT* to operate the motor near the optimum load angle of $+90^{\circ}$.

The current increment speed is specified in *SEUP*, and the current decrement speed is specified in *SEDN*. They can be tuned separately because they are triggered by different events that may need different responses. The encodings for these parameters allow the coil currents to be increased much more quickly than decreased, because crossing the lower threshold is a more serious event that may require a faster response. If the response is too slow, the motor may stall. In contrast, a slow response to crossing the upper threshold does not risk anything more serious than missing an opportunity to save power.

coolStep operates between limits controlled by the current scale parameter IRUN and the seimin bit.

12.3.1 Response Time

For fast response to increasing motor load, use a high current increment step *SEUP*. If the motor load changes slowly, a lower current increment step can be used to avoid motor oscillations. If the filter controlled by *sfilt* is enabled, the measurement rate and regulation speed are cut by a factor of four.

Hint

The most common and most beneficial use is to adapt coolStep for operation at the typical system target operation velocity and to set the velocity thresholds according. As acceleration and decelerations normally shall be quick, they will require the full motor current, while they have only a small contribution to overall power consumption due to their short duration.

12.3.2 Low Velocity and Standby Operation

Because coolStep is not able to measure the motor load in standstill and at very low RPM, a lower velocity threshold is provided for enabling coolStep. It should be set to an application specific default value. Below this threshold the normal current setting via *IRUN* respectively *IHOLD* is valid. An upper threshold is provided by the *VHIGH* setting. Both thresholds can be set as a result of the stallGuard2 tuning process.

13 STEP/DIR Interface

The STEP and DIR inputs provide a simple, standard interface compatible with many existing motion controllers. The microPlyer STEP pulse interpolator brings the smooth motor operation of high-resolution microstepping to applications originally designed for coarser stepping. In case an external step source is used, the complete integrated motion controller can be switched off.

13.1 Timing

Figure 13.1 shows the timing parameters for the STEP and DIR signals, and the table below gives their specifications. When the *dedge* mode bit in the *CHOPCONF* register is set, both edges of STEP are active. If *dedge* is cleared, only rising edges are active. STEP and DIR are sampled and synchronized to the system clock. An internal analog filter removes glitches on the signals, such as those caused by long PCB traces. If the signal source is far from the chip, and especially if the signals are carried on cables, the signals should be filtered or differentially transmitted.

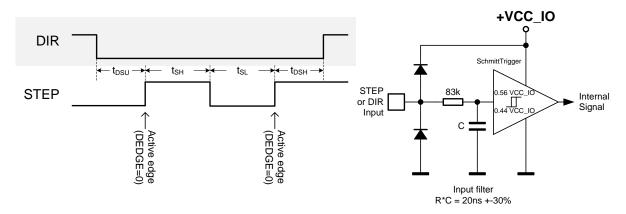


Figure 13.1 STEP and DIR timing, Input pin filter

STEP and DIR interface timing	AC-Characteristics						
	clock period is t _{CLK}						
Parameter	Symbol Conditions		Min	Тур	Max	Unit	
step frequency (at maximum	f _{STEP}	dedge=0			1∕2 f _{CLK}		
microstep resolution)		dedge=1			¹∕₄ f _{clk}		
fullstep frequency	f _{FS}				f _{CLK} /512		
STEP input low time *)	t _{SL}		max(t _{FILTSD} , t _{CLK} +20)	100		ns	
STEP input high time *)	t _{SH}		max(t _{FILTSD} , t _{CLK} +20)	100		ns	
DIR to STEP setup time	t _{DSU}		20			ns	
DIR after STEP hold time	t _{DSH}		20			ns	
STEP and DIR spike filtering time	t _{FILTSD}	rising and falling	13	20	30	ns	
*)		edge					
STEP and DIR sampling relative	t _{SDCLKHI}	before rising edge		\mathbf{t}_{FILTSD}		ns	
to rising CLK input		of CLK input					

*) These values are valid with full input logic level swing, only. Asymmetric logic levels will increase filtering delay t_{FILTSD} , due to an internal input RC filter.

13.2 Changing Resolution

The TMC2160 includes an internal microstep table with 1024 sine wave entries to generate sinusoidal motor coil currents. These 1024 entries correspond to one electrical revolution or four fullsteps. The microstep resolution setting determines the step width taken within the table. Depending on the DIR input, the microstep counter is increased (DIR=0) or decreased (DIR=1) with each STEP pulse by the step width. The microstep resolution determines the increment respectively the decrement. At maximum resolution, the sequencer advances one step for each step pulse. At half resolution, it advances two steps. Increment is up to 256 steps for fullstepping. The sequencer has special provision to allow seamless switching between different microstep rates at any time. When switching to a lower microstep resolution, it calculates the nearest step within the target resolution and reads the current vector at that position. This behavior especially is important for low resolutions like fullstep and halfstep, because any failure in the step sequence would lead to asymmetrical run when comparing a motor running clockwise and counterclockwise.

EXAMPLES:	
Fullstep:	Cycles through table positions: 128, 384, 640 and 896 (45°, 135°, 225° and 315° electrical position, both coils on at identical current). The coil current in each position corresponds to the RMS-Value (0.71 * amplitude). Step size is 256 (90° electrical)
Half step:	The first table position is 64 (22.5° electrical), Step size is 128 (45° steps)
Quarter step:	The first table position is 32 (90°/8=11.25° electrical), Step size is 64 (22.5° steps)

This way equidistant steps result and they are identical in both rotation directions. Some older drivers also use zero current (table entry 0, 0°) as well as full current (90°) within the step tables. This kind of stepping is avoided because it provides less torque and has a worse power dissipation in driver and motor.

Step position	table position	current coil A	current coil B
Half step 0	64	38.3%	92.4%
Full step 0	128	70.7%	70.7%
Half step 1	192	92.4%	38.3%
Half step 2	320	92.4%	-38.3%
Full step 1	384	70.7%	-70.7%
Half step 3	448	38.3%	-92.4%
Half step 4	576	-38.3%	-92.4%
Full step 2	640	-70.7%	-70.7%
Half step 5	704	-92.4%	-38.3%
Half step 6	832	-92.4%	38.3%
Full step 3	896	-70.7%	70.7%
Half step 7	960	-38.3%	92.4%

13.3 microPlyer and Stand Still Detection


For each active edge on STEP, microPlyer produces microsteps at 256x resolution, as shown in Figure 13.2. It interpolates the time in between of two step impulses at the step input based on the last step interval. This way, from 2 microsteps (128 microstep to 256 microstep interpolation) up to 256 microsteps (full step input to 256 microsteps) are driven for a single step pulse.

Enable microPlyer by setting the *intpol* bit in the *CHOPCONF* register. *GCONF.faststandstill* allows reduction of standstill detection time to 2¹⁸ clocks (-20ms)

The step rate for the interpolated 2 to 256 microsteps is determined by measuring the time interval of the previous step period and dividing it into up to 256 equal parts. The maximum time between two microsteps corresponds to 2^{20} (roughly one million system clock cycles), for an even distribution of 256 microsteps. At 12 MHz system clock frequency, this results in a minimum step input frequency of 12 Hz for microPlyer operation (50 Hz with *faststandstill* = 1). A lower step rate causes the *STST* bit to be set, which indicates a standstill event. At that frequency, microsteps occur at a rate of (system clock frequency)/ 2^{16} - 256 Hz. When a stand still is detected, the driver automatically switches the motor to holding current *IHOLD*.

Hint

microPlyer only works perfectly with a stable STEP frequency. Do not use the *dedge* option if the STEP signal does not have a 50% duty cycle.

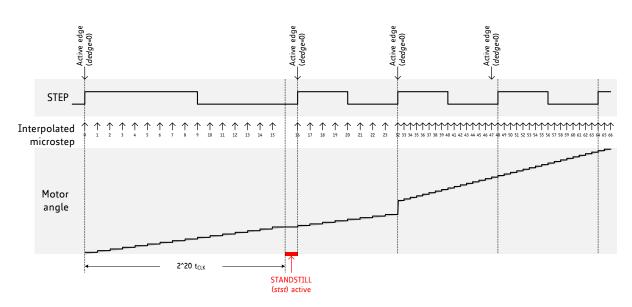



In Figure 13.2, the first STEP cycle is long enough to set the standstill bit *stst*. This bit is cleared on the next STEP active edge. Then, the external STEP frequency increases. After one cycle at the higher rate microPlyer adapts the interpolated microstep rate to the higher frequency. During the last cycle at the slower rate, microPlyer did not generate all 16 microsteps, so there is a small jump in motor angle between the first and second cycles at the higher rate. With the flag *GCONF.faststandstill* enabled, standstill detection is after 2^18 clocks (rather than 2^20 clocks) without step pulse. This allows faster current reduction for energy saving in drives with short stand still times.

14 DIAG Outputs

Operation with an external motion controller often requires quick reaction to certain states of the stepper motor driver. Therefore, the DIAG outputs supply a configurable set of different real time information complementing the STEP/DIR interface.

Both, the information available at DIAGO and DIAG1 can be selected as well as the type of output (low active open drain – default setting, or high active push-pull). In order to determine a reset of the driver, DIAGO always shows a power-on reset condition by pulling low during a reset condition. Figure 14.1 shows the available signals and control bits.

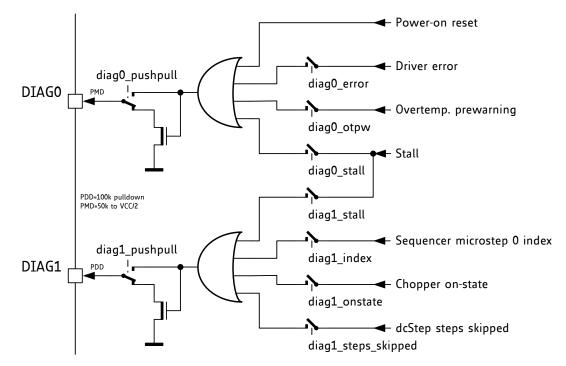


Figure 14.1 DIAG outputs

The stall output signal allows stallGuard2 to be handled by the external motion controller like a stop switch. The index output signals the microstep counter zero position, to allow the application to reference the drive to a certain current pattern. Chopper on-state shows the on-state of both coil choppers (alternating) when working in spreadCycle or constant off time in order to determine the duty cycle. The dcStep skipped information is an alternative way to find out when dcStep runs with a velocity below the step velocity. It toggles with each step not taken by the sequencer.

Attention

The duration of the index pulse corresponds to the duration of the microstep. When working without interpolation at less than 256 microsteps, the index time goes down to two CLK clock cycles.

15 dcStep

dcStep is an automatic commutation mode for the stepper motor. It allows the stepper to run with its target velocity as commanded by the Step signal, as long as it can cope with the load. In case the motor becomes overloaded, it slows down to a velocity, where the motor can still drive the load. This way, the stepper motor never stalls and can drive heavy loads as fast as possible. Its higher torque available at lower velocity, plus dynamic torque from its flywheel mass allow compensating for mechanical torque peaks. In case the motor becomes completely blocked, the stall flag becomes set.

15.1 User Benefits

dc Step™	Motor Application Acceleration Energy efficiency Cheaper motor	-	never loses steps works as fast as possible automatically as high as possible highest at speed limit does the job!
-----------------	--	---	--

15.2 Designing-In dcStep

In a classical application, the operation area is limited by the maximum torque required at maximum application velocity. A safety margin of up to 50% torque is required, in order to compensate for unforeseen load peaks, torque loss due to resonance and aging of mechanical components. dcStep allows using up to the full available motor torque. Even higher short time dynamic loads can be overcome using motor and application flywheel mass without the danger of a motor stall. With dcStep the nominal application load can be extended to a higher torque only limited by the safety margin near the holding torgue area (which is the highest torgue the motor can provide). Additionally, maximum application velocity can be increased up to the actually reachable motor velocity.

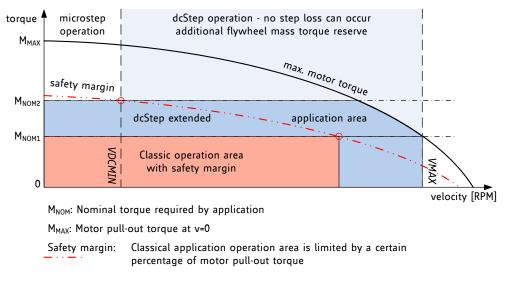


Figure 15.1 dcStep extended application operation area

Ouick Start

For a quick start, see the Quick Configuration Guide in chapter 18. For detail configuration procedure see Application Note AN003 - dcStep

15.3 Stall Detection in dcStep Mode

While dcStep is able to decelerate the motor upon overload, it cannot avoid a stall in every operation situation. Once the motor is blocked, or it becomes decelerated below a motor dependent minimum velocity where the motor operation cannot safely be detected any more, the motor may stall and loose steps. A stallGuard2 load value also is available during dcStep operation. The range of values is limited to 0 to 255, in certain situations up to 511 will be read out. In order to enable stallGuard, also set *TCOOLTHRS* corresponding to a velocity slightly above *VDCMIN* or up to *VMAX*.

Stall detection in this mode may trigger falsely due to resonances, when flywheel loads are loosely coupled to the motor axis.

Parameter	Description	Range	Comment
vhighfs & vhighchm	These chopper configuration flags in CHOPCONF need to be set for dcStep operation. As soon as VDCMIN becomes exceeded, the chopper becomes switched to fullstepping.	0/1	set to 1 for dcStep
TOFF	dcStep often benefits from an increased off time value in <i>CHOPCONF</i> . Settings >2 should be preferred.	2 15	Settings 815 do not make any difference to setting 8 for dcStep operation.
VDCMIN	This is the lower threshold for dcStep operation when using internal ramp generator. Below this threshold, the motor operates in normal microstep mode. In dcStep operation, the motor operates at minimum <i>VDCMIN</i> , even when it is completely blocked. Tune together with <i>DC_TIME</i> setting. Activation of stealthChop also disables dcStep.	0 2^22	0: Disable dcStep Set to the lower velocity limit for dcStep operation.
DC_TIME	This setting controls the reference pulse width for dcStep load measurement. It must be optimized for robust operation with maximum motor torque. A higher value allows higher torque and higher velocity, a lower value allows operation down to a lower velocity as set by <i>VDCMIN</i> .	0 1023	Lower limit for the setting is: t_{BLANK} (as defined by <i>TBL</i>) in clock cycles + <i>n</i> with <i>n</i> in the range 1 to 100 (for a typical motor)
	Check best setting under nominal operation conditions, and re-check under extreme operating conditions (e.g. lowest operation supply voltage, highest motor temperature, and highest supply voltage, lowest motor temperature).		
DC_SG	This setting controls stall detection in dcStep mode. Increase for higher sensitivity.A stall can be used as an error condition by issuing a hard stop for the motor. Stop the motor upon an impulse on the stall output (configure DIAG0 or DIAG1 to signal a stall). This way the	0 255	Set slightly higher than <i>DC_TIME I</i> 16

15.4 dcStep with STEP/DIR Interface

The TMC2160 provides two ways to use dcStep when interfaced to an external motion controller. The first way gives direct control of the dcStep step execution to the external motion controller, which must react to motor overload and is allowed to override a blocked motor situation. The second way assumes that the external motion controller cannot directly react to dcStep signals. The TMC2160 automatically reduces the motor velocity or stops the motor upon overload. In order to allow the motion controller to react to the reduced real motor velocity in this mode, the counter *LOST_STEPS* gives the number of steps which have been commanded, but not taken by the motor controller. The motion controller can later on read out *LOST_STEPS* and drive any missing number of steps. In case of a blocked motor it tries moving it with the minimum velocity as programmed by *VDCMIN*.

Enabling dcStep automatically sets the chopper to constant TOFF mode with slow decay only. This way, no re-configuration is required when switching from microstepping mode to dcStep and back.

dcStep operation is controlled by three pins in STEP and DIR mode:

- DCEN Forces the driver to dcStep operation if high. A velocity-based activation of dcStep is controlled by *TPWMTHRS* when using stealthChop operation for low velocity settings. In this case, dcStep is disabled while in stealthChop mode, i.e. at velocities below the stealthChop switching velocity.
- DCO Informs the motion controller when motor is not ready to take a new step (low level). The motion controller shall react by delaying the next step until DCO becomes high. The sequencer can buffer up to the effective number of microsteps per fullstep to allow the motion controller to react to assertion of DCO. In case the motor is blocked this wait-situation can be terminated after a timeout by providing a long > 1024 clock STEP input, or via the internal VDCMIN setting.
- DCIN Commands the driver to wait with step execution and to disable DCO. This input can be used for synchronization of multiple drivers operating with dcStep.

15.4.1 Using LOST_STEPS for dcStep Operation

This is the simplest possibility to integrate dcStep with an external motion controller: The external motion controller enables dcStep using DCEN or the internal velocity threshold. The TMC2160 tries to follow the steps. In case it needs to slow down the motor, it counts the difference between incoming steps on the STEP signal and steps going to the motor. The motion controller can read out the difference and compensate for the difference after the motion or on a cyclic basis. Figure 15.2 shows the principle (simplified).

In case the motor driver needs to postpone steps due to detection of a mechanical overload in dcStep, and the motion controller does not react to this by pausing the step generation, *LOST_STEPS* becomes incremented or decremented (depending on the direction set by DIR) with each step which is not taken. This way, the number of lost steps can be read out and executed later on or be appended to the motion. As the driver needs to slow down the motor while the overload situation persists, the application will benefit from a high microstepping resolution, because it allows more seamless acceleration or deceleration in dcStep operation. In case the application is completely blocked, *VDCMIN* sets a lower limit to the step execution. If the motor velocity falls below this limit, however an unknown number of steps is lost and the motor position is not exactly known any more. DCIN allows for step synchronization of two drivers: it stops the execution of steps if low and sets DCO low.

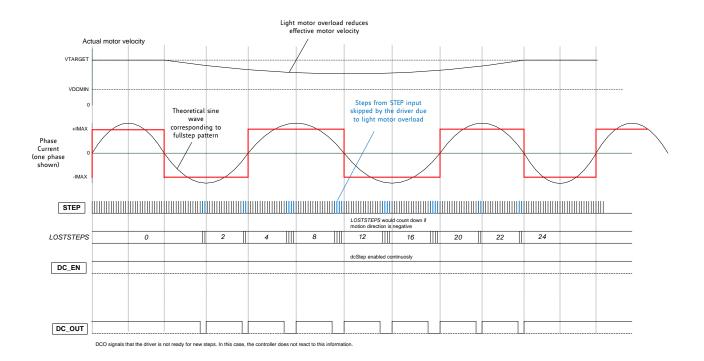


Figure 15.2 Motor moving slower than STEP input due to light overload. LOSTSTEPS incremented

15.4.2 DCO Interface to Motion Controller

In STEP/DIR mode, DCEN enables dcStep. It is up to the external motion controller to enable dcStep either, once a minimum step velocity is exceeded within the motion ramp, or to use the automatic threshold *VDCMIN* for dcStep enable.

The STEP/DIR interface works in microstep resolution, even if the internal step execution is based on fullstep. This way, no switching to a different mode of operation is required within the motion controller. The dcStep output DCO signals if the motor is ready for the next step based on the dcStep measurement of the motor. If the motor has not yet mechanically taken the last step, this step cannot be executed, and the driver stops automatically before execution of the next fullstep. This situation is signaled by DCO. The external motion controller shall stop step generation if DCOUT is low and wait until it becomes high again. Figure 15.4 shows this principle. The driver buffers steps during the waiting period up to the number of microstep setting minus one. In case, DCOUT does not go high within the lower step limit time e.g. due to a severe motor overload, a step can be enforced: override the stop status by a long STEP pulse with min. 1024 system clocks length. When using internal clock, a pulse length of minimum 125µs is recommended.


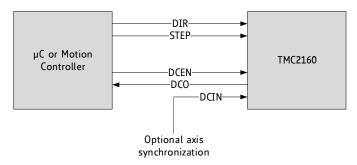


Figure 15.3 Full signal interconnection for dcStep

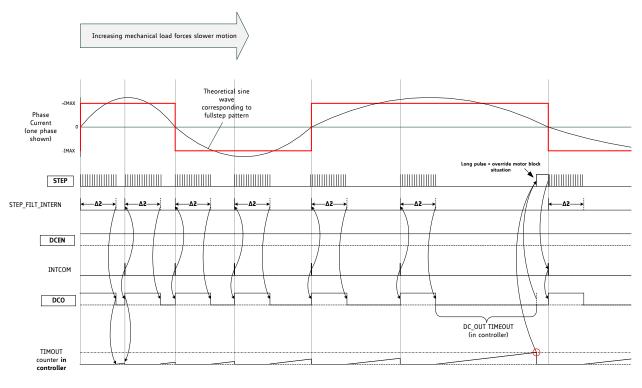

 $\Delta 2$ = MRES (number of microsteps per fullstep)

Figure 15.4 DCO Interface to motion controller - step generator stops when DCO is asserted

16 Sine-Wave Look-up Table

The TMC2160 driver provides a programmable look-up table for storing the microstep current wave. As a default, the table is pre-programmed with a sine wave, which is a good starting point for most stepper motors. Reprogramming the table to a motor specific wave allows drastically improved microstepping especially with low-cost motors.

16.1 User Benefits

Microstepping	-	extremely improved with low cost motors
Motor	-	runs smooth and quiet
Torque	-	reduced mechanical resonances yields improved torque

16.2 Microstep Table

In order to minimize required memory and the amount of data to be programmed, only a quarter of the wave becomes stored. The internal microstep table maps the microstep wave from 0° to 90°. It becomes symmetrically extended to 360°. When reading out the table the 10-bit microstep counter *MSCNT* addresses the fully extended wave table. The table is stored in an incremental fashion, using each one bit per entry. Therefore only 256 bits (*ofs00* to *ofs255*) are required to store the quarter wave. These bits are mapped to eight 32 bit registers. Each *ofs* bit controls the addition of an inclination Wx or Wx+1 when advancing one step in the table. When Wx is 0, a 1 bit in the table at the actual microstep position means "add one" when advancing to the next microstep. As the wave can have a higher inclination than 1, the base inclinations Wx can be programmed to -1, 0, 1, or 2 using up to four flexible programmable segments within the quarter wave. This way even negative inclination can be realized. The four inclination segments are controlled by the position registers X1 to X3. Inclination segment 0 goes from M1 to X2-1 with its base inclination controlled by W1, etc.

When modifying the wave, care must be taken to ensure a smooth and symmetrical zero transition when the quarter wave becomes expanded to a full wave. The maximum resulting swing of the wave should be adjusted to a range of -248 to 248, in order to give the best possible resolution while leaving headroom for the hysteresis-based chopper to add an offset.

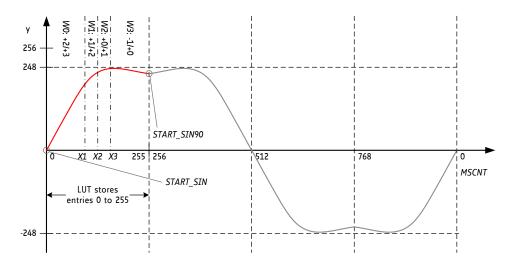


Figure 16.1 LUT programming example

When the microstep sequencer advances within the table, it calculates the actual current values for the motor coils with each microstep and stores them to the registers *CUR_A* and *CUR_B*. However, the incremental coding requires an absolute initialization, especially when the microstep table becomes modified. Therefore *CUR_A* and *CUR_B* become initialized whenever *MSCNT* passes zero.

Two registers control the starting values of the tables:

- As the starting value at zero is not necessarily 0 (it might be 1 or 2), it can be programmed into the starting point register *START_SIN*.
- In the same way, the start of the second wave for the second motor coil needs to be stored in START_SIN90. This register stores the resulting table entry for a phase shift of 90° for a 2phase motor.

Hint

Refer chapter 5.3 for the register set and for the default table function stored in the drivers. The default table is a good base for realizing an own table. The TMC2160-EVAL comes with a calculation tool for own waves.

Initialization example for the default microstep table:

<i>MSLUT[0]</i> = %10101010101010101010101010100 = 0xAAAAB554
<i>MSLUT[1]</i> = %01001010101010101010101010101010 = 0x4A9554AA
MSLUT[2]= %001001001001001001001001001001001 = 0x24492929
<i>MSLUT</i> [3]= %0001000000100000100001000100010 = 0x10104222
MSLUT[4]= %1111101111111111111111111111111111111
<i>MSLUT[5]</i> = %1011010110111011101110111011101 = 0xB5BB777D
<i>MSLUT</i> [6]= %0100100100101010101010101010101 = 0x49295556
MSLUT[7]= %00000000100000010000100010010 = 0x00404222

MSLUTSEL= 0xFFF8056: X1=128, X2=255, X3=255 W3=%01, W2=%01, W1=%01, W0=%10

MSLUTSTART= 0x00F70000: START_SIN_0= 0, START_SIN90= 247

17 Emergency Stop

The driver provides a negative active enable pin ENN to safely switch off all power MOSFETs. This allows putting the motor into freewheeling. Further, it is a safe hardware function whenever an emergency-stop not coupled to software is required. Some applications may require the driver to be put into a state with active holding current or with a passive braking mode. This is possible by programming the pin DCIN to act as a step disable function. Set GCONF flag *stop_enable* to activate this option. Whenever DCIN becomes pulled up, the motor will stop abruptly and go to the power down state, as configured via *IHOLD*, *IHOLD_DELAY* and stealthChop standstill options. Disabling the driver via ENN will require three clock cycles to safely switch off the driver.

18 Quick Configuration Guide

This guide is meant as a practical tool to come to a first configuration and do a minimum set of measurements and decisions for tuning the driver. It does not cover all advanced functionalities but concentrates on the basic function set to make a motor run smoothly. Once the motor runs, you may decide to explore additional features, e.g. freewheeling and further functionality in more detail. A current probe on one motor coil is a good aid to find the best settings, but it is not a must.

CURRENT SETTING AND FIRST STEPS WITH STEALTHCHOP

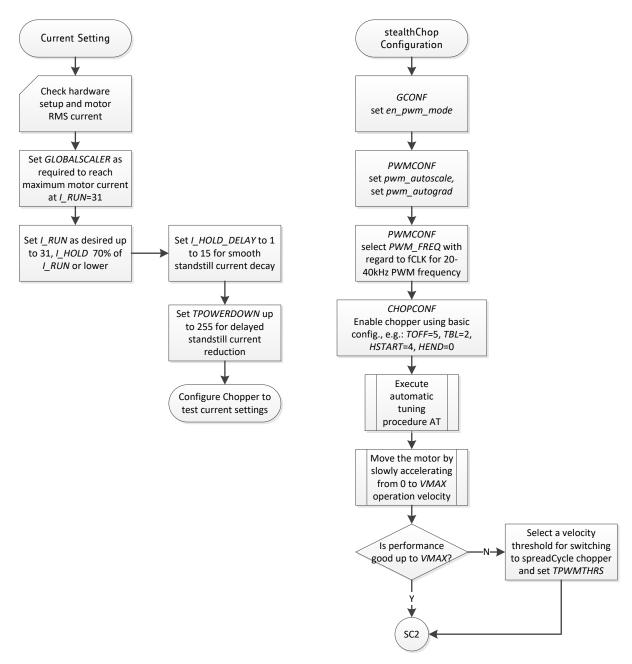
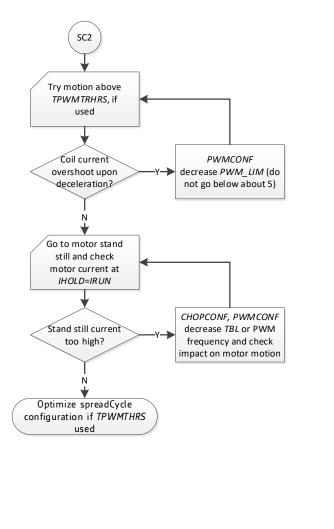


Figure 18.1 Current setting and first steps with stealthChop

TUNING STEALTHCHOP AND SPREADCYCLE



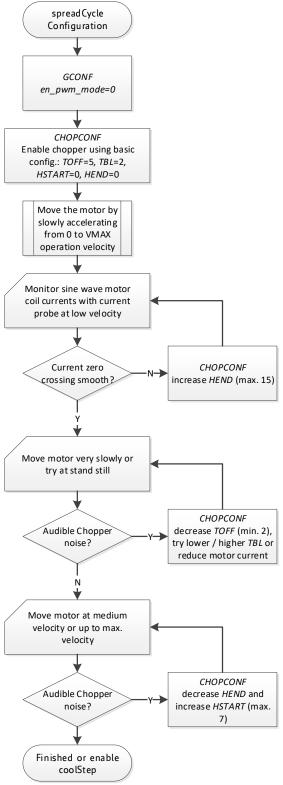
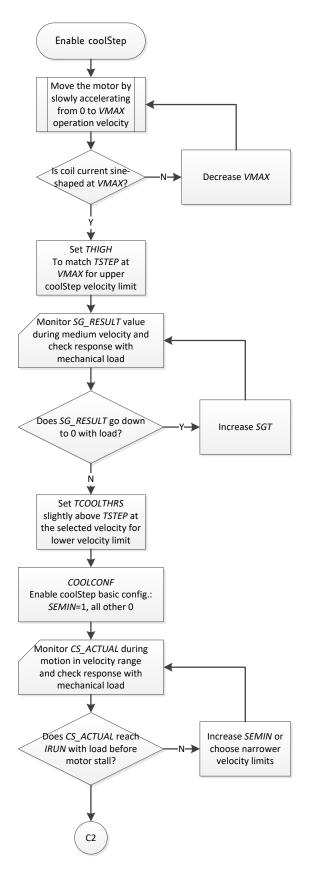


Figure 18.2 Tuning stealthChop and spreadCycle



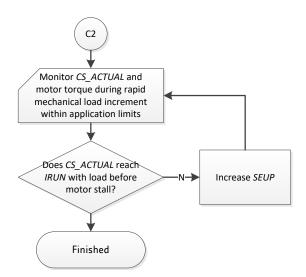


Figure 18.3 Enabling coolStep (only in combination with spreadCycle)

SETTING UP DCSTEP

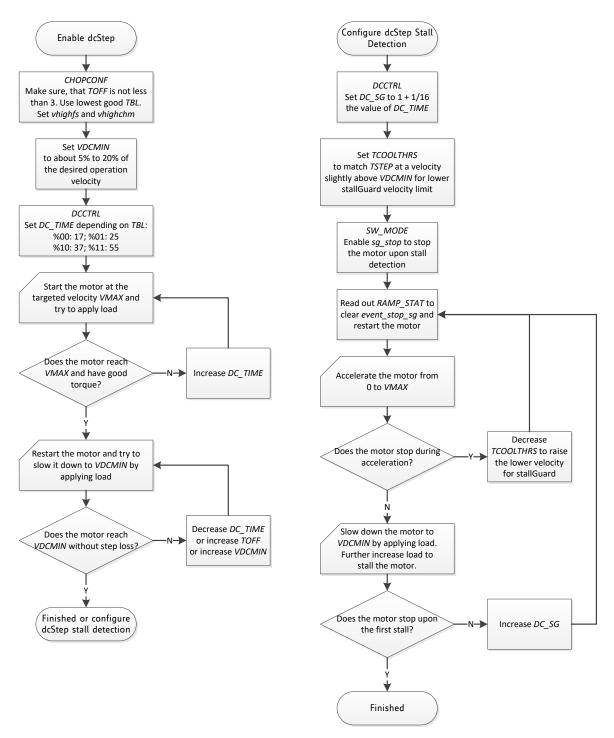


Figure 18.4 Setting up dcStep (using TMC4361 as motion controller)

19 Getting Started

Please refer to the TMC2160 evaluation board to allow a quick start with the device, and in order to allow interactive tuning of the device setup in your application. Chapter 18 will guide you through the process of correctly setting up all registers.

19.1 Initialization Examples

SPI datagram example sequence to enable the driver for step and direction operation and initialize the chopper for spreadCycle operation and for stealthChop at <30 RPM @ 12MHz clock:

SPI send: 0xEC000100C3; // CHOPCONF: TOFF=3, HSTRT=4, HEND=1, TBL=2, CHM=0 (spreadCycle) SPI send: 0x9000061F0A; // IHOLD_IRUN: IHOLD=10, IRUN=31 (max. current), IHOLDDELAY=6 SPI send: 0x910000000A; // TPOWERDOWN=10: Delay before power down in stand still SPI send: 0x8000000004; // EN_PWM_MODE=1 enables stealthChop (with default PWM_CONF) SPI send: 0x93000001F4; // TPWM_THRS=500 yields a switching velocity about 35000 = ca. 30RPM

Hint

Tune the configuration parameters for your motor and application for optimum performance.

20 Standalone Operation

For standalone operation, no SPI interface is required to configure the TMC2160. All pins with suffix CFG0 to CFG6 have a special meaning in this mode and can bei tied either to VCC_IO or to GND.

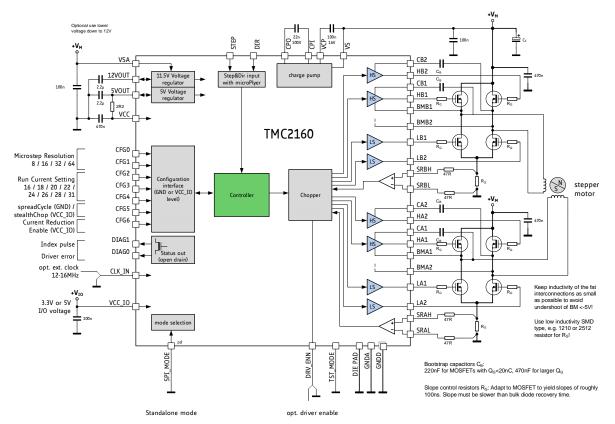


Figure 20.1 Standalone operation with TMC2160 (pins shown with their standalone mode names)

To activate standalone mode, tie pin SPI_MODE to GND and pin SD_MODE high. In this mode, the driver acts as a pure STEP and DIR driver. SPI and single wire are off. The driver works in spreadCycle mode or stealthChop mode. With regard to the register set, the following settings are activated:

GCONF settings:

GCONF.diag0_error = 1: DIAG0 works in open drain mode and signals driver error. GCONF.diag1_index = 1: DIAG1 works in open drain mode and signals microstep table index position.

The following settings are affected by the CFG pins in order to ensure correct configuration:

CFG0/CFG1: CONFIGURATION OF MICROSTEP RESOLUTION FOR STEP INPUT				
CFG1	CFG0	1icrostep Setting		
GND	GND	8 microsteps, MRES=5		
GND	VCC_IO	16 microsteps, MRES=4		
VCC_IO	GND	32 microsteps, MRES=3		
VCC_IO	VCC_IO	64 microsteps, <i>MRES</i> =2		

CFG4/CF	CFG4/CFG3/CFG2: CONFIGURATION OF RUN CURRENT			
CFG4	CFG3	CFG2	IRUN Setting	
GND	GND	GND	IRUN=16	
GND	GND	VCC_IO	IRUN=18	
GND	VCC_IO	GND	IRUN=20	
GND	VCC_IO	VCC_IO	IRUN=22	
VCC_IO	GND	GND	IRUN=24	
VCC_IO	GND	VCC_IO	IRUN=26	
VCC_IO	VCC_IO	GND	IRUN=28	
VCC_IO	VCC_IO	VCC_IO	IRUN=31	

CFG5: SELECTION OF CHOPPER MODE		
CFG5	Chopper Setting	
GND	spreadCycle operation. (<i>TOFF</i> =3)	
VCC_IO	stealthChop operation. (GCONF.en_PWM_mode=1)	

CFG6: CONFIGURATION OF HOLD CURRENT REDUCTION			
CFG6*) Chopper Setting			
GND	No hold current reduction. IHOLD=IRUN		
VCC_IO Reduction to 50%. IHOLD=1/2 IRUN			

Hint

Be sure to allow the motor to rest for at least 100ms (assuming a minimum of 10MHz f_{CLK}) before starting a motion using stealthChop. This will allow the current regulation to set the initial motor current.

*) CFG6: Attention

CFG6 pin draws significant current (20mA) when driven to a different level than CFG5, because the output driver tries to make CFG6 level equal to CFG5. Therefore, a 0 Ohm resistor is required to pull up/down CFG6. Due to this, setting CFG6 different from CFG5 is only recommended with external VCC_IO supply at 3.3V level.

21 External Reset

The chip is loaded with default values during power on via its internal power-on reset. In order to reset the chip to power on defaults, any of the supply voltages monitored by internal reset circuitry (VSA, +5VOUT or VCC_IO) must be cycled. VCC is not monitored. Therefore, VCC must not be switched off during operation of the chip. As +5VOUT is the output of the internal voltage regulator, it cannot be cycled via an external source except by cycling VSA. It is easiest and safest to cycle VCC_IO in order to completely reset the chip. Also, current consumed from VCC_IO is low and therefore it has simple driving requirements. Due to the input protection diodes not allowing the digital inputs to rise above VCC_IO level, all inputs must be driven low during this reset operation. When this is not possible, an input protection resistor may be used to limit current flowing into the related inputs.

In case, VCC becomes supplied by an external source, make sure that VCC is at a stable value above the lower operation limit once the reset ends. This normally is satisfied when generating a 3.3V VCC_IO from the +5V supply supplying the VCC pin, because it will then come up with a certain delay.

22 Clock Oscillator and Input

The clock is the timing reference for all functions: the chopper, dcStep, blank time, etc. Many parameters are scaled with the clock frequency; thus, a precise reference allows a more deterministic result. The factory-trimmed on-chip clock oscillator provides a good and stable timing for most use cases.

22.1 Using the Internal Clock

Directly tie the CLK input to GND near to the IC if the internal clock oscillator is to be used. It will be sufficient for applications, where a velocity precision of roughly +-4% is tolerable.

22.2 Using an External Clock

When an external clock is available, a frequency of 10 MHz to 16 MHz is recommended for optimum performance. The duty cycle of the clock signal is uncritical, as long as minimum high or low input time for the pin is satisfied (refer to electrical characteristics). Up to 18 MHz can be used, when the clock duty cycle is 50%. Make sure, that the clock source supplies clean CMOS output logic levels and steep slopes when using a high clock frequency. The external clock input is enabled with the second positive polarity seen on the CLK input.

Hint

Switching off the external clock frequency prevents the driver from operating normally. Therefore, an internal watchdog switches back to internal clock in case the external signal is missing for more than roughly 32 internal clock cycles.

22.2.1 Considerations on the Frequency

A higher frequency allows faster step rates, faster SPI operation and higher chopper frequencies. On the other hand, it causes more power dissipation in the TMC2160 digital core and 5V voltage regulator. Generally a frequency of 10 MHz to 12 MHz should be sufficient for most applications. At higher clock frequency, the VSA supply voltage should be connected to a lower voltage for applications working at more than 24V nominal supply voltage. For reduced requirements concerning the motor dynamics, a clock frequency of down to 8 MHz (or even lower) can be considered.

23 Absolute Maximum Ratings

The maximum ratings may not be exceeded under any circumstances. Operating the circuit at or near more than one maximum rating at a time for extended periods shall be avoided by application design.

Parameter	Symbol	Min	Max	Unit
Supply voltage operating with inductive load	V _{VS} , V _{VSA}	-0.5	60	V
Supply and bridge voltage short time peak (limited by	V _{VSMAX}		64	V
peak voltage on charge pump output and Cxx pins*)	VSMAX			
VSA when different from VS	VVSAMAX	-0.5	60	V
Peak voltages on Cxx bootstrap pins and VCP	V _{CxCP}		76	V
Supply voltage V12	V _{12VOUT}	-0.5	14	V
Peak voltages on BM pins (due to stray inductivity)	V _{BMx}	-6	V _{VS} +6	V
Peak voltages on Cxx bootstrap pins relative to BM	V _{CxBMx}	-0.5	16	V
I/O supply voltage on VCC_IO	V _{VIO}	-0.5	5.5	V
digital VCC supply voltage (normally supplied by 5VOUT)	V _{vcc}	-0.5	5.5	V
Logic input voltage	VI	-0.5	V _{VIO} +0.5	V
Maximum current to <i>I</i> from digital pins	I _{IO}		+/-500	mA
and analog low voltage I/Os (short time peak current)				
5V regulator output current (internal plus external load)	I _{5VOUT}		30	mA
5V regulator continuous power dissipation (V_{VSA} -5V) * I_{SVOUT}	P _{5VOUT}		1	W
12V regulator output current (internal plus external load)	I _{12VOUT}		20	mA
12V regulator continuous power dissipation (V_{VSA} -12V) *	P _{12VOUT}		0.5	W
I _{12VOUT}				
Junction temperature	T	-50	150	°C
Storage temperature	T _{stg}	-55	150	°C
ESD-Protection for interface pins (Human body model, HBM)	V _{esdap}		4	kV
ESD-Protection for handling (Human body model, HBM)	V _{ESD}		1	kV

*) Stray inductivity of power routing will lead to ringing of the supply voltage when driving an inductive load. This ringing results from the fast switching slopes of the driver outputs in combination with reverse recovery of the body diodes of the output driver MOSFETs. Even small trace inductivities as well as stray inductivity of sense resistors can easily generate a few volts of ringing leading to temporary voltage overshoot. This should be considered when working near the maximum voltage.

24 Electrical Characteristics

24.1 Operational Range

Parameter	Symbol	Min	Max	Unit
Junction temperature	Tj	-40	125	°C
Supply voltage for motor and bridge	V _{VS}	10	55	V
Supply voltage VSA	V _{VSA}	10	50	V
Supply voltage for VSA and 12OUT (internal gate voltage	V _{12VOUT} ,	10	13	V
regulator bridged)	V _{VSA}			
Lower Supply voltage (reduced spec, short to GND		8		V
protection not functional), lower limit depending on	V _{VS}			
MOSFETs gate threshold voltage and load current				
I/O supply voltage on VCC_IO	V _{VIO}	3.00	5.25	V

24.2 DC and Timing Characteristics

DC characteristics contain the spread of values guaranteed within the specified supply voltage range unless otherwise specified. Typical values represent the average value of all parts measured at +25°C. Temperature variation also causes stray to some values. A device with typical values will not leave Min/Max range within the full temperature range.

Power supply current	DC-Chara	DC-Characteristics				
	$V_{VS} = V_{VSA}$	= 24.0V				
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
Total supply current, driver	Is	f _{CLK} =12MHz / internal		18	24	mA
disabled I_{VS} + I_{VSA}		clock				
VSA supply current (VS and VSA	I _{VSA}	f _{CLK} =12MHz / internal		15		mA
separated)		clock, driver disabled				
Total supply current, operating,	Is	f _{CLK} =12MHz, 23.4kHz		25		mA
MOSFETs AOD4126, I_{VS} + I_{VSA}		chopper, no load				
Internal current consumption	I _{VCC}	f _{CLK} =12MHz		10		mA
from 5V supply on VCC pin						
Internal current consumption	I _{VCC}	f _{CLK} =16MHz		12.5		mA
from 5V supply on VCC pin						
IO supply current on VCC_IO	I _{VIO}	no load on outputs,		15	30	μA
(typ. at 5V)		inputs at $V_{\rm IO}$ or GND				
		Excludes pullup /				
		pull-down resistors				

Motor driver section	DC- and Timing-Characteristics V _{VS} = 24.0V; Tj=50°C					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
RDS _{ON} lowside off driver	RONL	Gate off		1.8	3	Ω
RDS _{ON} highside off driver	R _{ONH}	Gate off		2.2	3.5	Ω
Gate drive current low side	I _{SLPONO}	DRVSTRENGTH=0		200		mA
MOSFET turning on at 2V V_{GS}	I _{SLPON2}	DRVSTRENGTH=2		400		mA
	I _{SLPON3}	DRVSTRENGTH=3		600		mA
Gate drive current high side	I _{SLPONO}	DRVSTRENGTH=0		150		mA
MOSFET turning on at $2V V_{GS}$	I _{SLPON2}	DRVSTRENGTH=2		300		mA
	I _{SLPON3}	DRVSTRENGTH=3		450		mA
BBM time via internal delay (start	t _{ввмо}	BBMCLKS=0	75	100		ns
of gate switching off to start of		BBMTIME=0				
gate switching on)	t _{BBM16}	BBMTIME=16		200		ns
	t _{BBM16}	BBMTIME=24		375	500	ns

Charge pump	DC-Chara	DC-Characteristics					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit	
Charge pump output voltage	V _{VCP} -V _{VS}	operating	V _{12VOUT} -	V _{12VOUT} -		V	
			2	1			
Charge pump voltage threshold	V_{VCP} - V_{VS}	rising, using internal	4.5	5	6.5	V	
for undervoltage detection		5V regulator voltage					
Charge pump frequency	f _{CP}			1/16			
				f _{CLKOSC}			

Linear regulator	DC-Characteristics V _{VS} = V _{VSA} = 24.0V					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
Output voltage	V _{5VOUT}	T _J = 25°C	4.80	5.0	5.20	V
Deviation of output voltage over the full temperature range	V _{5VOUT} (DEV)	drivers disabled T」 = full range		+/-30	+/-100	mV
Deviation of output voltage over the full supply voltage range	V _{5VOUT} (Dev)	drivers disabled, internal clock T _A = 25°C V _{VSA} = 10V to 30V			+/-50	mV / 10V
Output voltage	V _{12VOUT}	operating, internal clock TJ = 25°C	10.8	11.5	12.2	V

Clock oscillator and input	Timing-Cl	Timing-Characteristics					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit	
Clock oscillator frequency	f _{CLKOSC}	tj=-50°C		11.7		MHz	
(factory calibrated)	f _{clkosc}	t _J =50°C	11.5	12.0	12.5	MHz	
	f _{CLKOSC}	tj=150°C		12.1		MHz	
External clock frequency	f _{CLK}		4	10-16	18	MHz	
(operating)							
External clock high / low level	t _{clkh} /	CLK driven to	10			ns	
time	t _{clkl}	0.1 $V_{\rm VIO}$ / 0.9 $V_{\rm VIO}$					
External clock timeout detection	t _{CLKH1}	CLK driven high	32		48	cycles	
in cycles of internal f _{CLKOSC}						f _{CLKOSC}	

Short detection	DC-Chara	DC-Characteristics					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit	
Short to GND / Short to VS detector delay (Start of gate switch on to short detected)	t _{sdo}	FILT_ISENSE=0 S2xx_LEVEL=6 shortdelay=0	0.5	0.85	1.1	μs	
Including 100ns filtering time	t _{SD1}	shortdelay=1	1.1	1.6	2.2	μs	
Short detector level S2VS	V _{BM}	S2VS_LEVEL=15	1.4	1.56	1.72	V	
(measurement includes drop in sense resistor)		S2VS_LEVEL=6	0.55	0.625	0.70	V	
Short detector level S2G	Vs - V _{BM}	<i>S2G_LEVEL</i> =15; VS<52V	1.2	1.56	1.9	V	
		<i>S2G_LEVEL</i> =15; VS<55V	0.85			V	
		<i>S2G_LEVEL=</i> 6; VS<52V	0.46	0.625	0.80	V	

Detector levels	DC-Chara	cteristics				
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
V _{VSA} undervoltage threshold for RESET	V _{UV_VSA}	V _{VSA} rising	3.6	4	4.6	V
$V_{\mbox{svout}}$ undervoltage threshold for RESET	V _{UV_5VOUT}	V _{svout} rising		3.5		V
$V_{\text{VCC_IO}}$ undervoltage threshold for RESET	V _{UV_VIO}	V _{vcc_10} rising (delay typ. 10µs)	2.0	2.5	3.0	V
V _{VCC_I0} undervoltage detector hysteresis	$V_{\text{UV}_\text{VIOHYST}}$			0.3		V
Overtemperature prewarning 120°C	T _{OTPW}	Temperature rising	100	120	140	°C
Overtemperature shutdown 136 °C	T _{OT136}	Temperature rising		136		°C
Overtemperature shutdown 143 °C	T _{OT143}	Temperature rising		143		°C
Overtemperature shutdown 150 °C	Тот150	Temperature rising	135	150	170	°C

Sense resistor voltage levels	DC-Characteristics f _{CLK} =16MHz					
Parameter	Symbol	Conditions	Min	Тур	Max	Unit
Sense input peak threshold	V _{SRT}	GLOBALSCALER=0		325		mV
voltage (low sensitivity)		csactual=31				
(V _{SRxH} -V _{SRxL})		sin_x=248				
		Hyst.=0; I _{BRxy} =0				
Sense input tolerance / motor	I _{COIL}	GLOBALSCALER=0	-5		+5	%
current full scale tolerance						
-using internal reference						

Digital pins	DC-Chara	DC-Characteristics						
Parameter	Symbol	Conditions	Min	Тур	Max	Unit		
Input voltage low level	VINLO		-0.3		$0.3 \ V_{\text{VIO}}$	V		
Input voltage high level	V_{INHI}		$0.7 \ V_{\text{VIO}}$		V _{VI0} +0.3	V		
Input Schmitt trigger hysteresis	VINHYST			0.12		V		
				V_{VIO}				
Output voltage low level	VOUTLO	I_{OUTLO} = 2mA			0.2	V		
Output voltage high level	VOUTHI	I_{OUTHI} = -2mA	V _{VI0} -0.2			V		
Input leakage current	$\mathbf{I}_{\text{ILEAK}}$		-10		10	μA		
Pullup / pull-down resistors	R _{PU} /R _{PD}		132	166	200	kΩ		
Digital pin capacitance	С			3.5		рF		

24.3 Thermal Characteristics

The following table shall give an idea on the thermal resistance of the package. The thermal resistance for a four-layer board will provide a good idea on a typical application. Actual thermal characteristics will depend on the PCB layout, PCB type and PCB size. The thermal resistance will benefit from thicker CU (inner) layers for spreading heat horizontally within the PCB. Also, air flow will reduce thermal resistance.

Parameter	Symbol	Conditions	Тур	Unit
Typical power dissipation	PD	stealthChop or spreadCycle, 40 or 20kHz chopper, 24V, internal supply regulators	0.6	W
Thermal resistance junction to ambient on a multilayer board	R _{tmja}	Dual signal and two internal power plane board (2s2p) as defined in JEDEC EIA JESD51-5 and JESD51-7 (FR4, 35µm CU, 70mm x 133mm, d=1.5mm)	21	K/W
Thermal resistance junction to board	R _{tjb}	PCB temperature measured within 1mm distance to the package leads	8	K/W
Thermal resistance junction to case	R _{TJC}	Junction temperature to heat slug of package	3	K/W

Table 24.1 Thermal characteristics TQFP48-EP

The thermal resistance in an actual layout can be tested by checking for the heat up caused by the standby power consumption of the chip. When no motor is attached, all power seen on the power supply is dissipated within the chip.

25 Layout Considerations

25.1 Exposed Die Pad

The TMC2160 uses its die attach pad to dissipate heat from the gate drivers and the linear regulator to the board. For best electrical and thermal performance, use a reasonable amount of solid, thermally conducting vias between the die attach pad and the ground plane. The printed circuit board should have a solid ground plane spreading heat into the board and providing for a stable GND reference.

25.2 Wiring GND

All signals of the TMC2160 are referenced to their respective GND. Directly connect all GND pins under the device to a common ground area (GND, GNDP, GNDA and die attach pad). The GND plane right below the die attach pad should be treated as a virtual star point. For thermal reasons, the PCB top layer shall be connected to a large PCB GND plane spreading heat within the PCB.

Attention


```
Place the TMC2160 near to the MOSFET bridge and sense resistor GND in order to avoid ringing leading to GND differences and to dangerous inductive peak voltages.
```


25.3 Supply Filtering


The 5VOUT output voltage ceramic filtering capacitor (2.2 to 4.7 μ F recommended) should be placed as close as possible to the 5VOUT pin, with its GND return going directly to the GNDA pin. This ground connection shall not be shared with other loads or additional vias to the GND plane. Use as short and as thick connections as possible. For best microstepping performance and lowest chopper noise an additional filtering capacitor should be used for the VCC pin to GND, to avoid digital part ripple influencing motor current regulation. Therefore, place a ceramic filtering capacitor (470nF recommended) as close as possible (1-2mm distance) to the VCC pin with GND return going to the ground plane. VCC can be coupled to 5VOUT using a 2.2 Ω or 3.3 Ω resistor in order to supply the digital logic from 5VOUT while keeping ripple away from this pin. A 100 nF filtering capacitor should be placed as close as possible to the VSA pin to ground plane.

Please carefully read chapters 3.3 and 3.4 to understand the special considerations with regard to layout and component selection for the external MOSFET power bridges.

25.4 Layout Example

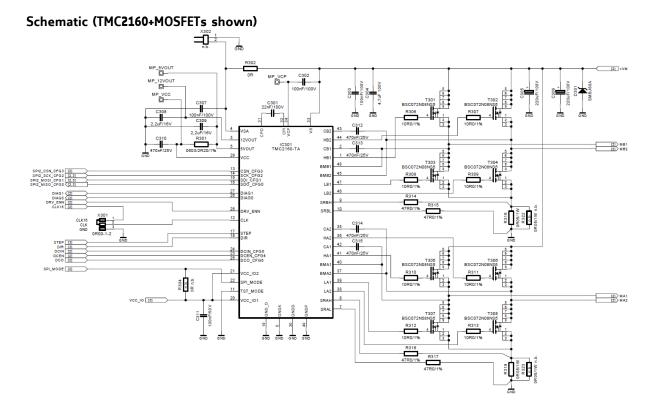

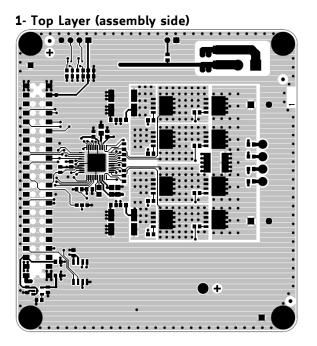


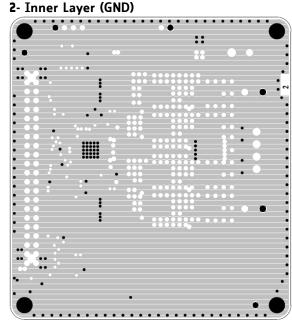

:.

•

•




•

•

:

:



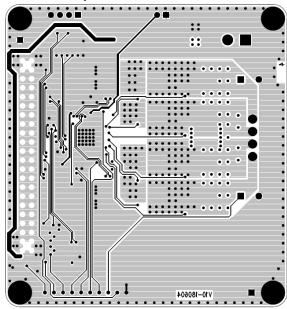

Components

•••


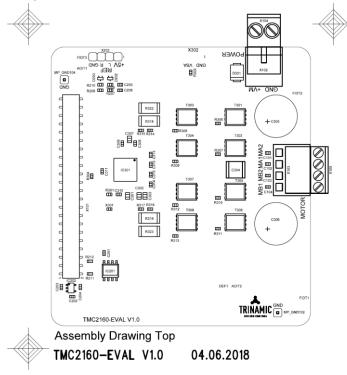


Figure 25.1 Layout example

26 Package Mechanical Data

26.1 Dimensional Drawings TQFP48-EP

Drawings not to scale.

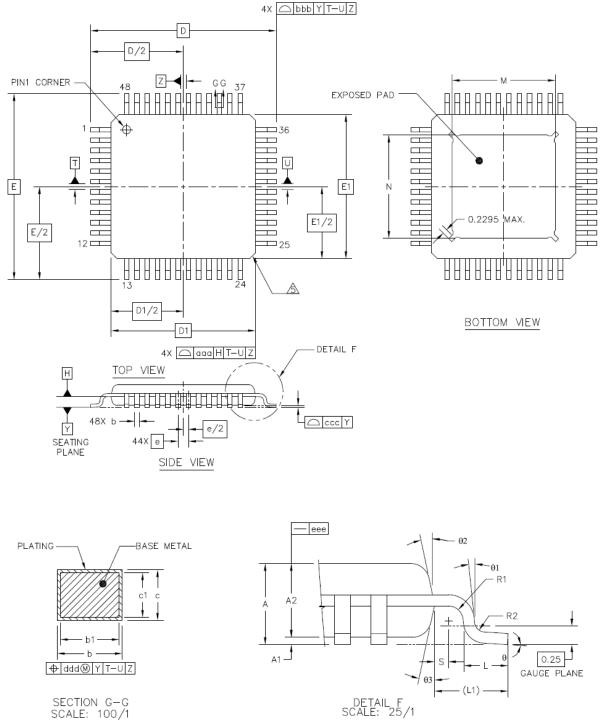



Parameter	Ref	Min	Nom	Max
total thickness	Α	-	-	1.2
stand off	A1	0.05	-	0.15
mold thickness	A2	0.95	1	1.05
lead width (plating)	b	0.17	0.22	0.27
lead width	b1	0.17	0.2	0.23
lead frame thickness (plating)	c	0.09	-	0.2
lead frame thickness	c1	0.09	-	0.16
body size X (over pins)	D		9.0	
body size Y (over pins)	E		9.0	
body size X	D1		7.0	
body size Y	E1		7.0	
lead pitch	e		0.5	
lead	L	0.45	0.6	0.75
footprint	L1		1 REF	
	Θ	0°	3.5°	7°
	Θ1	0°	-	-
	Θ2	11°	12°	13°
	Θ3	11°	12°	13°
	R1	0.08	-	-
	R2	0.08	-	0.2
	S	0.2	-	-
exposed die pad size X	М	4.9	5	5.1
exposed die pad size Y	Ν	4.9	5	5.1
package edge tolerance	aaa			0.2
lead edge tolerance	bbb			0.2
coplanarity	ccc			0.08
lead offset	ddd			0.08
mold flatness	eee			0.05

26.2 Package Codes

Туре	Package	Temperature range	Code & marking
TMC2160-TA	TQFP-EP48 (RoHS)	-40°C +125°C	TMC2160-TA

27 Disclaimer

TRINAMIC Motion Control GmbH & Co. KG does not authorize or warrant any of its products for use in life support systems, without the specific written consent of TRINAMIC Motion Control GmbH & Co. KG. Life support systems are equipment intended to support or sustain life, and whose failure to perform, when properly used in accordance with instructions provided, can be reasonably expected to result in personal injury or death.

Information given in this data sheet is believed to be accurate and reliable. However no responsibility is assumed for the consequences of its use nor for any infringement of patents or other rights of third parties which may result from its use.

Specifications are subject to change without notice.

All trademarks used are property of their respective owners.

28 ESD Sensitive Device

The TMC2160 is an ESD sensitive CMOS device sensitive to electrostatic discharge. Take special care to use adequate grounding of personnel and machines in manual handling. After soldering the devices to the board, ESD requirements are more relaxed. Failure to do so can result in defect or decreased reliability.



29 Table of Figures

FIGURE 1.1 TMC2160 STEP/DIR APPLICATION DIAGRAM	5
FIGURE 1.2 TMC2160 STANDALONE DRIVER APPLICATION DIAGRAM	6
FIGURE 1.3 AUTOMATIC MOTOR CURRENT POWER DOWN	
FIGURE 1.4 ENERGY EFFICIENCY WITH COOLSTEP (EXAMPLE)	
FIGURE 2.1 TMC2160-TA PACKAGE AND PINNING TQFP-EP 48 (7X7MM ² BODY, 9X9MM ² WITH LEADS)	
FIGURE 3.1 STANDARD APPLICATION CIRCUIT	
FIGURE 3.2 EXTERNAL GATE VOLTAGE SUPPLY	
FIGURE 3.3 MILLER CHARGE DETERMINES SWITCHING SLOPE	
FIGURE 3.4 SLOPES, MILLER PLATEAU AND BLANK TIME	
FIGURE 3.5 BRIDGE PROTECTION OPTIONS FOR POWER ROUTING INDUCTIVITY	
FIGURE 3.6 RINGING OF OUTPUT (BLUE) AND GATE VOLTAGES (YELLOW, CYAN) WITH UNTUNED BRIGE	
FIGURE 3.7 SWITCHING EVENT WITH OPTIMIZED COMPONENTS (WITHOUT / AFTER BULK DIODE CONDUCTION)	
FIGURE 3.8 EXAMPLE FOR BRIDGE WITH TUNED COMPONENTS (SEE SCOPE SHOTS)	
FIGURE 4.1 SPI TIMING	
FIGURE 6.1 MOTOR COIL SINE WAVE CURRENT WITH STEALTHCHOP (MEASURED WITH CURRENT PROBE)	
FIGURE 6.2 STEALTHCHOP2 AUTOMATIC TUNING PROCEDURE	
FIGURE 6.3 SCOPE SHOT: GOOD SETTING FOR PWM_REG	
FIGURE 6.4 SCOPE SHOT: TOO SMALL SETTING FOR PWM_REG DURING AT#2	
FIGURE 6.5 SUCCESSFULLY DETERMINED PWM_GRAD(_AUTO) AND PWM_OFS(_AUTO)	
FIGURE 6.6 VELOCITY BASED PWM SCALING (PWM_AUTOSCALE=0)	
FIGURE 6.7 TPWMTHRS FOR OPTIONAL SWITCHING TO SPREADCYCLE	
FIGURE 7.1 CHOPPER PHASES	55
FIGURE 7.2 NO LEDGES IN CURRENT WAVE WITH SUFFICIENT HYSTERESIS (MAGENTA: CURRENT A, YELLOW & BLUE: SENSE RESISTOR VOLTAGES A AND B)	57
FIGURE 7.3 SPREADCYCLE CHOPPER SCHEME SHOWING COIL CURRENT DURING A CHOPPER CYCLE	
FIGURE 7.3 SPREADCICLE CHOPPER SCHEME SHOWING COLL CORRENT DURING A CHOPPER CICLE	
FIGURE 7.5 ZERO CROSSING WITH CLASSIC CHOPPER AND CORRECTION USING SINE WAVE OFFSET	
FIGURE 9.1 CHOICE OF VELOCITY DEPENDENT MODES	
FIGURE 10.1 SHORT DETECTION	
FIGURE 10.1 SHORT DETECTION	
FIGURE 11.2 EXAMPLE: OPTIMUM SGT SETTING AND STALLGUARD2 READING WITH AN EXAMPLE MOTOR	
FIGURE 12.1 COOLSTEP ADAPTS MOTOR CURRENT TO THE LOAD	
FIGURE 13.1 STEP AND DIR TIMING, INPUT PIN FILTER	
FIGURE 13.2 MICROPLYER MICROSTEP INTERPOLATION WITH RISING STEP FREQUENCY (EXAMPLE: 16 TO 256)	
FIGURE 14.1 DIAG OUTPUTS	
FIGURE 15.1 DCSTEP EXTENDED APPLICATION OPERATION AREA	
FIGURE 15.2 MOTOR MOVING SLOWER THAN STEP INPUT DUE TO LIGHT OVERLOAD. LOSTSTEPS INCREMENTED	
FIGURE 15.3 FULL SIGNAL INTERCONNECTION FOR DCSTEP	
FIGURE 15.4 DCO INTERFACE TO MOTION CONTROLLER – STEP GENERATOR STOPS WHEN DCO IS ASSERTED	
FIGURE 16.1 LUT PROGRAMMING EXAMPLE	
FIGURE 18.1 CURRENT SETTING AND FIRST STEPS WITH STEALTHCHOP	86
FIGURE 18.2 TUNING STEALTHCHOP AND SPREADCYCLE	
FIGURE 18.3 ENABLING COOLSTEP (ONLY IN COMBINATION WITH SPREADCYCLE)	
FIGURE 18.4 SETTING UP DCSTEP (USING TMC4361 AS MOTION CONTROLLER)	89
FIGURE 20.1 STANDALONE OPERATION WITH TMC2160 (PINS SHOWN WITH THEIR STANDALONE MODE NAMES)	
FIGURE 25.1 LAYOUT EXAMPLE	
FIGURE 26.1 DIMENSIONAL DRAWINGS TQFP48-EP	102
FIGURE 26.1 DIMENSIONAL DRAWINGS TQFF48-EF	

30 Revision History

Version	Date	Author	Description
		BD= Bernhard Dwersteg	
V0.91	2018-MAY-25	BD	First version of datasheet based on datasheet TMC5160 V1.04
V1.00	2018-JUN-06	BD	Added errata / limitations for initial tuning of AT#1 / AT#2 phase Minor wording, added evaluation board drawing
V1.01	2018-OKT-29	BD	Minor changes, added -T suffix option, S2G >52V hints/limits updated

Table 30.1 Document Revisions

31 References

[TMC2160-EVAL] TMC2160-EVAL Manual

[AN001] Trinamic Application Note 001 - Parameterization of spreadCycle™, <u>www.trinamic.com</u>

[AN002] Trinamic Application Note 002 - Parameterization of stallGuard2[™] & coolStep[™], <u>www.trinamic.com</u>

[AN003] Trinamic Application Note 003 - dcStep™, <u>www.trinamic.com</u>

Calculation sheet TMC2160_Calculations.xlsx