

Technical documentation



Support & training



**BQ40Z50-R2** SLUSCS4C - JUNE 2017 - REVISED APRIL 2021

# BQ40Z50-R2 1-Series, 2-Series, 3-Series, and 4-Series Li-Ion Battery Pack Manager

# 1 Features

- Fully integrated 1-series, 2-series, 3-series, and 4-series Li-ion or Li-polymer cell battery pack manager and protection
- Next-generation patented Impedance Track<sup>™</sup> technology accurately measures available charge in Li-ion and Li-polymer batteries
- High-side N-CH protection FET drive
- Integrated cell balancing while charging or at rest ٠
- Suitable for batteries between 100 mAh and 29 Ah
- Full array of programmable protection features
  - Voltage
  - Current
  - Temperature
  - Charge timeout
  - CHG/DSG FETs
  - AFE
- Sophisticated charge algorithms
  - JEITA
  - Enhanced charging
  - Adaptive charging
  - Cell balancing
- Supports TURBO Mode 2.0 ٠
- Supports battery trip point (BTP)
- Diagnostic lifetime data monitor and black box • recorder
- LED display •
- Supports two-wire SMBus v1.1 interface
- SHA-1 authentication •
- IATA support •
- Compact package: 32-lead QFN (RSM)

## 2 Applications

- **Tablets**
- Drones
- UPS/battery backup systems
- Medical equipment
- Handheld vacuum cleaners and vacuum robots


## **3 Description**

The BQ40Z50-R2 device, incorporating patented Impedance Track<sup>™</sup> technology, is a fully integrated, single-chip, pack-based solution that provides a rich array of features for gas gauging, protection, and authentication for 1-series, 2-series, 3-series, and 4series cell Li-ion and Li-polymer battery packs.

Using its integrated high-performance analog peripherals, the BQ40Z50-R2 device measures and maintains an accurate record of available capacity, voltage, current, temperature, and other critical parameters in Li-ion or Li-polymer batteries, and reports this information to the system host controller over an SMBus v1.1 compatible interface.

**Device Information** 

PART NUMBER	PACKAGE	BODY SIZE (NOM)			
BQ40Z50-R2	VQFN (32)	4.00 mm × 4.00 mm			

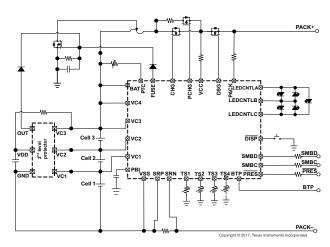

**Simplified Schematic** 





# **Table of Contents**

1 Features	1
2 Applications	
3 Description	1
4 Revision History	
5 Description (continued)	3
6 Pin Configuration and Functions	3
6.1 Pin Equivalent Diagrams	
7 Specifications	
7.1 Absolute Maximum Ratings	
7.2 ESD Ratings	
7.3 Recommended Operating Conditions	8
7.4 Thermal Information	
7.5 Supply Current	9
7.6 Power Supply Control	
7.7 AFE Power-On Reset	
7.8 AFE Watchdog Reset and Wake Timer	
7.9 Current Wake Comparator 7.10 VC1, VC2, VC3, VC4, BAT, PACK	
7.10 VC1, VC2, VC3, VC4, BAT, PACK 7.11 SMBD, SMBC	
7.12 PRES, BTP_INT, DISP	11
7.13 LEDCNTLA, LEDCNTLB, LEDCNTLC	
7.14 Coulomb Counter	
7.15 CC Digital Filter	
7.16 ADC	
7.17 ADC Digital Filter	
7.18 CHG, DSG FET Drive	
7.19 PCHG FET Drive	
7.20 FUSE Drive	
7.21 Internal Temperature Sensor	14
7.22 TS1, TS2, TS3, TS4	
7.23 PTC, PTCEN	
7.24 Internal 1.8-V LDO	
7.25 High-Frequency Oscillator	15

7.26 Low-Frequency Oscillator	
7.27 Voltage Reference 1	16
7.28 Voltage Reference 2	16
7.29 Instruction Flash	16
7.30 Data Flash	17
7.31 OLD, SCC, SCD1, SCD2 Current Protection	
Thresholds	17
7.32 Timing Requirements: OLD, SCC, SCD1,	
SCD2 Current Protection Timing	
7.33 Timing Requirements: SMBus	
7.34 Timing Requirements: SMBus XL	
7.35 Typical Characteristics	
8 Detailed Description	
8.1 Overview	
8.2 Functional Block Diagram	
8.3 Feature Description	25
8.4 Device Functional Modes	
9 Application and Implementation	29
9.1 Application Information	29
9.2 Typical Applications	
10 Power Supply Recommendations	
11 Layout	
11.1 Layout Guidelines	
11.2 Layout Example	
12 Device and Documentation Support	
12.1 Third-Party Products Disclaimer	
12.2 Documentation Support	
12.3 Support Resources	
12.4 Trademarks	
12.5 Electrostatic Discharge Caution	
12.6 Glossary	46
13 Mechanical, Packaging, and Orderable	
Information	46

# **4 Revision History**

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision B (July 2018) to Revision C (April 2021)	Page
Changed all occurrences of OCD to OLD throughout the data sheet	1
Changes from Revision A (October 2017) to Revision B (July 2018)	Page
Changed Pin Configuration and Functions	5
Changed System Present	



# **5** Description (continued)


The BQ40Z50-R2 device supports TURBO Mode 2.0 by providing the available max power and max current to the host system. The device also supports Battery Trip Point to send a BTP interrupt signal to the host system at the preset state of charge thresholds.

The BQ40Z50-R2 provides software-based 1st- and 2nd-level safety protection against overvoltage, undervoltage, overcurrent, short-circuit current, overload, and overtemperature conditions, as well as other pack- and cell-related faults.

SHA-1 authentication, with secure memory for authentication keys, enables identification of genuine battery packs.

The compact 32-lead QFN package minimizes solution cost and size for smart batteries while providing maximum functionality and safety for battery gauging applications.

## **6** Pin Configuration and Functions

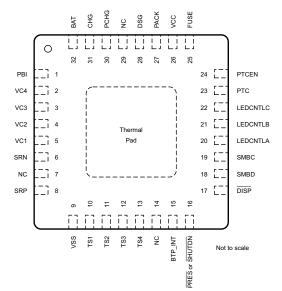

#### Table 6-1. Pin Functions

PIN NUMBER	PIN NAME	TYPE	DESCRIPTION
1	PBI	P <sup>(1)</sup>	Power supply backup input pin. Connect to the 2.2-µF capacitor to VSS.
2	VC4	IA	Sense voltage input pin for the most positive cell, and balance current input for the most positive cell. Should be connected to the positive terminal of the fourth cell from the bottom of the stack with a 100- $\Omega$ series resistor and a 0.1- $\mu$ F capacitor to VC3. If not used, connect to VC3.
3	VC3	IA	Sense voltage input pin for the third-most positive cell, balance current input for the third-most positive cell, and return balance current for the most positive cell. Should be connected to the positive terminal of the third cell from the bottom of the stack with a 100- $\Omega$ series resistor and a 0.1- $\mu$ F capacitor to VC2. If not used, connect to VC2.
4	VC2	IA	Sense voltage input pin for the second-most positive cell, balance current input for the second-most positive cell, and return balance current for the third-most positive cell. Should be connected to the positive terminal of the second cell from the bottom of the stack with a $100-\Omega$ series resistor and a $0.1-\mu$ F capacitor to VC1. If not used, connect to VC1.
5	VC1	IA	Sense voltage input pin for the least positive cell, balance current input for the least positive cell, and return balance current for the second-most positive cell. Should be connected to the positive terminal of the first cell from the bottom of the stack with a $100-\Omega$ series resistor and a $0.1-\mu$ F capacitor to VSS.



6     SRN     1     Analog input pin connected to the internal coulomb counter peripheral for integrating a small voltage between SRP and SRN where SRP is the top of the sense resistor.       7     NC      Not internally connected. It is okay to leave floating or to its to VSS.       8     SRP     1     Analog input pin connected. It is okay to leave floating or to its to VSS.       9     VSS     P     Device ground       10     TS1     IA     Temperature sensor 1 themistor input pin. Connect to themistor-1. If not used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 2 thermistor input pin. Connect to thermistor-2. If not used, connect directly to VSS and configure data flash accordingly.       12     TS3     IA     Temperature sensor 3 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 4 thermistor input pin. Connect to therefloaten.       16     PTE_INT     O     Battery Trip Point (BTP) interrupt output. If not used, connect directly to VSS.       17     DISP      Display control for LEDs. If not used, connect directly to VSS.       18     SMBD     I/OD     SMBUs datap in <		Table 6-1. Pin Functions (continued)					
6     SRN     I     Integrating a small voltage between SRP and SRN where SRP is the top of the sense resistor.       7     NC     —     Not internally connected. It is okay to leave floating or to lie to VSS.       8     SRP     I     Analog input pin connected to the internal coulomb counter peripheral for integrating a small voltage between SRP and SRN where SRP is the top of the sense resistor.       9     VSS     P     Device ground       10     TS1     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-1. If not used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-3. If not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-3. If not used, connect directly to VSS and configure data flash accordingly.       14     NC     —     Not Internally connect directly to VSS and configure data flash accordingly.       14     NC     —     Not Internally connect directly to VSS and configure data flash accordingly.       14     NC     —     Not Internally connect directly to VSS and configure data flash accordingly.       14     NC     —     Not	PIN NUMBER	PIN NAME	TYPE	DESCRIPTION			
8     SRP     1     Analog input pin connected to the internal coulomb counter peripheral for integrating a small voltage between SRP and SRN where SRP is the top of the sense resistor.       9     VSS     P     Device ground       10     TS1     IA     Temperature sensor 1 themistor input pin. Connect to themistor-1. If not used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 3 themistor input pin. Connect to themistor-2. If not used, connect directly to VSS and configure data flash accordingly.       12     TS3     IA     Temperature sensor 3 themistor input pin. Connect to themistor-4. If not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 3 themistor input pin. Connect to themistor-4. If not used, connect directly to VSS and configure data flash accordingly.       14     NC     —     Not Internally connected. It is okay to leave floating or to to VSS.       16     PRES or SHUTDN     I     stuttown input for embedded pack. Apullup is not required for this pin. If not used, connect directly to VSS.       18     SMBD     I/OD     SMBus data pin       19     SMBC     I/OD     SMBus data pin       20     LEDCNTLA     —     IED display segment that	6	SRN	I	integrating a small voltage between SRP and SRN where SRP is the top of			
8     SRP     I     Integrating a small voltage between SRP and SRN where SRP is the top of the sense resistor.       9     VSS     P     Device ground       10     TS1     IA     Temperature sensor 1 themistor input pin. Connect to thermistor-1. If not used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 2 thermistor input pin. Connect to thermistor-3. If not used, connect directly to VSS and configure data flash accordingly.       12     TS3     IA     Temperature sensor 3 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.       14     NC      Not internally connected. It is okay to leave floating or to tie to VSS.       16     BTP_INT     O     Battery Trip Point (BTP) interrupt output. If not used, connect directly to VSS.       18     SMBD     I/OD     SMBus clock pin       20     LEDCNTLA      Display control for LEDs. If not used, connect directly to VSS.       21     LEDCNTLB      ED display segment that drives the external LEDs depending on the fir	7	NC	_	Not internally connected. It is okay to leave floating or to tie to VSS.			
10     TS1     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-1. If not used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 1 thermistor input pin. Connect to thermistor-2 if not used, connect directly to VSS and configure data flash accordingly.       12     TS3     IA     Temperature sensor 3 thermistor input pin. Connect to thermistor-3 if not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 4 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.       14     NC     —     Not internally connected. It is okay to leave floating or to ite to VSS.       15     BTP_INT     O     Battery Trip Point (BTP) Interrupt output. If not used, connect directly to VSS.       16     PRES or SHUTDN     I     Host system present input for removable battery pack or emergency system system system system system system flast drives the external LEDs depending on the fireware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.       20     LEDCNTLA     —     IED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.       21     LEDCNTLB	8	SRP	I	integrating a small voltage between SRP and SRN where SRP is the top of			
IU     ISI     IA     used, connect directly to VSS and configure data flash accordingly.       11     TS2     IA     Temperature sensor 2 thermistor input pin. Connect to thermistor-2. If not used, connect directly to VSS and configure data flash accordingly.       12     TS3     IA     Temperature sensor 3 thermistor input pin. Connect to thermistor-3. If not used, connect directly to VSS and configure data flash accordingly.       13     TS4     IA     Temperature sensor 3 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.       14     NC     -     Not internally connected. It is okay to leave floating or to te to VSS.       15     BTP_INT     O     Battery Trip Point (BTP) interrupt output. If not used, connect directly to VSS.       16     PRES or SHUTDN     I     used, connect directly to VSS.       17     DISP     -     Display control for LEDs. If not used, connect directly to VSS.       18     SMBD     I/OD     SMBus clock pin       20     LEDCNTLA     -     ED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-k0 resistor.       21     LEDCNTLB     -     ED display segment th	9	VSS	Р	Device ground			
11   152   μA   used, connect directly to VSS and configure data flash accordingly.     12   TS3   μA   Temperature sensor 3 thermistor input pin. Connect to thermistor-3. If not used, connect directly to VSS and configure data flash accordingly.     13   TS4   μA   Temperature sensor 4 thermistor input pin. Connect to thermistor-4. If not used, connect directly to VSS and configure data flash accordingly.     14   NC   —   Not internally connected. It is okay to leave floating or to tie to VSS.     15   BTP_INT   O   Battery Trip Point (BTP) interrupt output. If not used, connect directly to VSS.     16   PRES or SHUTDN   I   Host system present input for embedded pack. A pullup is not required for this pin. If n used, connect directly to VSS.     17   DISP   —   Display control for LEDs. If not used, connect directly to VSS.     18   SMBD   I/OD   SMBus data pin     19   SMBC   I/OD   SMBus data pin     20   LEDCNTLA   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be lef	10	TS1	IA				
12   153   1A   used, connect directly to VSS and configure data flash accordingly.     13   TS4   IA   Temperature sensor 4 thermistor input pin. Connect to thermistor.4. If not used, connect directly to VSS and configure data flash accordingly.     14   NC   -   Not internally connected. It is okay to leave floating or to tie to VSS.     15   BTP_INT   O   Battery Trip Point (BTP) interrupt output. If not used, connect directly to VS.     16   PRES or SHUTDN   I   Host system present input for embode battery pack or emergency system shutdown input for embode de pack. A pullup is not required for this pin. If n used, connect directly to VSS.     17   DISF   -   Display control for LEDs. If not used, connect directly to VSS.     18   SMBD   I/OD   SMBus data pin     19   SMBC   I/OD   SMBus clock pin     20   LEDCNTLA   -   firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   -   firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC   -   firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23 </td <td>11</td> <td>TS2</td> <td>IA</td> <td></td>	11	TS2	IA				
13   154   IA   used, connect directly to VSS and configure data flash accordingly.     14   NC   —   Not internally connected. It is okay to leave floating or to ite to VSS.     15   BTP_INT   O   Battery Trip Point (BTP) interupt output. If not used, connect directly to VS.     16   PRES or SHUTDN   I   Host system present input for removable battery pack or emergency system shutdown input for embedded pack. A pullup is not required for this pin. If n used, connect directly to VSS.     17   DISP   —   Display control for LEDs. If not used, connect directly to VSS.     18   SMBD   I/OD   SMBus data pin     20   LEDCNTLA   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.	12	TS3	IA				
15     BTP_INT     O     Battery Trip Point (BTP) interrupt output. If not used, connect directly to VS       16     PRES or SHUTDN     I     Host system present input for removable battery pack or emergency system shutdown input for embedded pack. A pullup is not required for this pin. If n used, connect directly to VSS.       17     DISP     —     Display control for LEDs. If not used, connect directly to VSS.       18     SMBD     I/OD     SMBus data pin       19     SMBC     I/OD     SMBus clock pin       20     LEDCNTLA     —     LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.       21     LEDCNTLB     —     LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.       22     LEDCNTLC     —     LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.       23     PTC     IA     Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.       24     PTCEN     IA     Safety PTC thermistor enable input pin. Connect to BAT. To	13	TS4	IA				
16   PRES or SHUTDN   I   Host system present input for removable battery pack or emergency system shutdown input for embedded pack. A pullup is not required for this pin. If n used, connect directly to VSS.     17   DISP   —   Display control for LEDs. If not used, connect directly to VSS.     18   SMBD   I/OD   SMBus data pin     19   SMBC   I/OD   SMBus data pin     20   LEDCNTLA   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor enable input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN VSS.     26   VCC   P   Secondary power supply input     27   PACK   IA </td <td>14</td> <td>NC</td> <td>—</td> <td>Not internally connected. It is okay to leave floating or to tie to VSS.</td>	14	NC	—	Not internally connected. It is okay to leave floating or to tie to VSS.			
16   PRES or SHUTDN   I   shutdown input for embedded pack. A pullup is not required for this pin. If n used, connect directly to VSS.     17   DISP   —   Display control for LEDs. If not used, connect directly to VSS.     18   SMBD   I/OD   SMBus data pin     19   SMBC   I/OD   SMBus clock pin     20   LEDCNTLA   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN VSS.     26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin.     28	15	BTP_INT	0	Battery Trip Point (BTP) interrupt output. If not used, connect directly to VSS.			
18   SMBD   I/OD   SMBus data pin     19   SMBC   I/OD   SMBus clock pin     20   LEDCNTLA    LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB    LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC    IED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect VSS.     26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin     28   DSG   O   Fuse sense input pin     29   NC   -   NOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     30   PCHG   O   PMOS Precharge FE	16	PRES or SHUTDN	I	shutdown input for embedded pack. A pullup is not required for this pin. If r			
19   SMBC   I/OD   SMBus clock pin     20   LEDCNTLA    LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB    Ifmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC    firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC    firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN VSS.     25   FUSE   O   Fuse drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31 <t< td=""><td>17</td><td>DISP</td><td></td><td>Display control for LEDs. If not used, connect directly to VSS.</td></t<>	17	DISP		Display control for LEDs. If not used, connect directly to VSS.			
20   LEDCNTLA    LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB    LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC    firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC    firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     24   PTCEN   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     25   FUSE   O   Fuse drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected	18	SMBD	I/OD	SMBus data pin			
20   LEDCNTLA   —   firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     21   LEDCNTLB   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     22   LEDCNTLC   —   LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN VSS.     25   FUSE   O   Fuse drive output pin. If not used, connect directly to VSS.     26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin.     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     29   NC   —   Not internally connected. It is okay to leave floating or to te to VSS.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or con	19	SMBC	I/OD	SMBus clock pin			
21LEDCNTLB—firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.22LEDCNTLC—LED display segment that drives the external LEDs depending on the firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.23PTCIASafety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.24PTCENIASafety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN to VSS.25FUSEOFuse drive output pin. If not used, connect directly to VSS.26VCCPSecondary power supply input27PACKIAPack sense input pin28DSGONMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.30PCHGOPMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.31CHGONMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	20	LEDCNTLA	_	firmware configuration. If LEDs are not used, these pins can be left floating or			
22   LEDCNTLC   —   firmware configuration. If LEDs are not used, these pins can be left floating connected to VSS through a 20-kΩ resistor.     23   PTC   IA   Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN VSS.     24   PTCEN   IA   Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN to VSS.     25   FUSE   O   Fuse drive output pin. If not used, connect directly to VSS.     26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	21	LEDCNTLB	_	firmware configuration. If LEDs are not used, these pins can be left floating or			
23PTCIAVSS.24PTCENIASafety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN to VSS.25FUSEOFuse drive output pin. If not used, connect directly to VSS.26VCCPSecondary power supply input27PACKIAPack sense input pin28DSGONMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.29NCNot internally connected. It is okay to leave floating or to tie to VSS.30PCHGOPMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.31CHGONMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	22	LEDCNTLC	_	firmware configuration. If LEDs are not used, these pins can be left floating or			
24PTCENIAboth PTC and PTCEN to VSS.25FUSEOFuse drive output pin. If not used, connect directly to VSS.26VCCPSecondary power supply input27PACKIAPack sense input pin28DSGONMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.29NC—Not internally connected. It is okay to leave floating or to tie to VSS.30PCHGOPMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.31CHGONMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	23	РТС	IA	Safety PTC thermistor input pin. To disable, connect both PTC and PTCEN to VSS.			
26   VCC   P   Secondary power supply input     27   PACK   IA   Pack sense input pin     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     29   NC   —   Not internally connected. It is okay to leave floating or to tie to VSS.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	24	PTCEN	IA	Safety PTC thermistor enable input pin. Connect to BAT. To disable, connect both PTC and PTCEN to VSS.			
27   PACK   IA   Pack sense input pin     28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     29   NC   —   Not internally connected. It is okay to leave floating or to tie to VSS.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	25	FUSE	0	Fuse drive output pin. If not used, connect directly to VSS.			
28   DSG   O   NMOS Discharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     29   NC   —   Not internally connected. It is okay to leave floating or to tie to VSS.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	26	VCC	Р	Secondary power supply input			
28   DSG   0   connected to VSS through a 20-kΩ resistor.     29   NC   —   Not internally connected. It is okay to leave floating or to tie to VSS.     30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	27	PACK	IA	Pack sense input pin			
30   PCHG   O   PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.     31   CHG   O   NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	28	DSG	0				
30 PCHG 0 connected to VSS through a 20-kΩ resistor.   31 CHG O NMOS Charge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-kΩ resistor.	29	NC		Not internally connected. It is okay to leave floating or to tie to VSS.			
CHG Connected to VSS through a 20-kΩ resistor.	30	РСНБ	0	PMOS Precharge FET drive output pin. If not used, it can be left floating or connected to VSS through a 20-k $\Omega$ resistor.			
32 BAT P Primary power supply input pin	31	СНБ	0				
	32	BAT	Р	Primary power supply input pin			

(1) P = Power Connection, O = Digital Output, AI = Analog Input, I = Digital Input, I/OD = Digital Input/Output



# 6.1 Pin Equivalent Diagrams

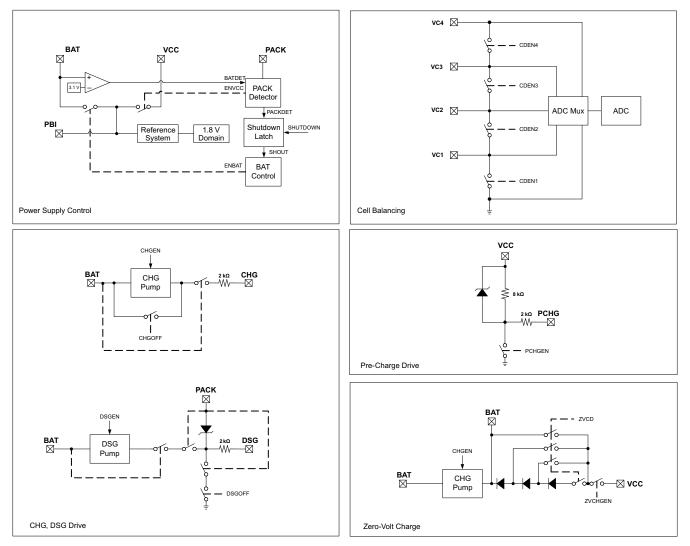


Figure 6-1. Pin Equivalent Diagram 1

BQ40Z50-R2 SLUSCS4C – JUNE 2017 – REVISED APRIL 2021



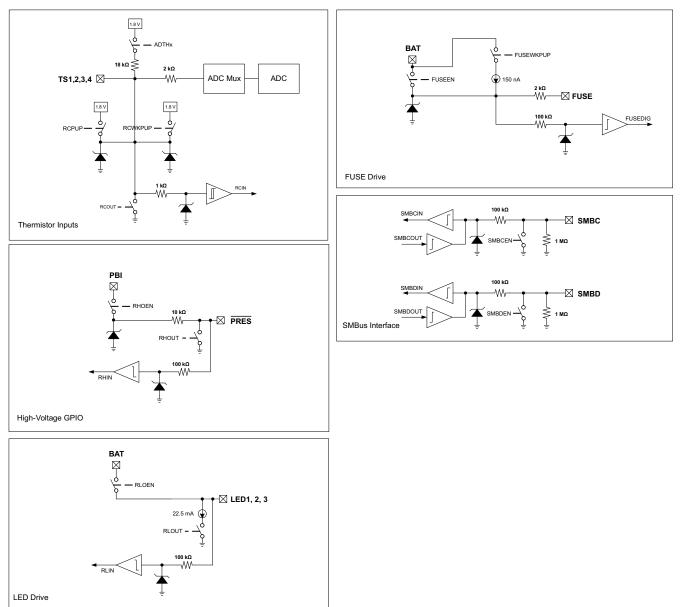


Figure 6-2. Pin Equivalent Diagram 2



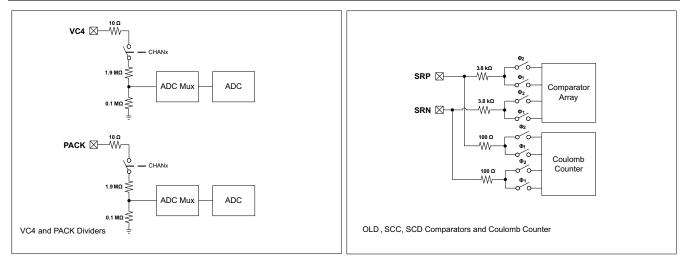


Figure 6-3. Pin Equivalent Diagram 3



# 7 Specifications

# 7.1 Absolute Maximum Ratings

Over-operating free-air temperature range (unless otherwise noted)<sup>(1)</sup>

		MIN	MAX	UNIT
Supply voltage range, V <sub>CC</sub>	BAT, VCC, PBI	-0.3	30	V
	PACK, SMBC, SMBD, PRES or SHUTDN, BTP_INT, DISP	-0.3	30	V
	TS1, TS2, TS3, TS4	-0.3	V <sub>REG</sub> + 0.3	V
	PTC, PTCEN, LEDCNTLA, LEDCNTLB, LEDCNTLC	-0.3	V <sub>BAT</sub> + 0.3	V
	SRP, SRN	-0.3	0.3	V
Input voltage range, V <sub>IN</sub>	VC4	VC3 – 0.3	VC3 + 8.5, or VSS + 30	V
VC3     VC2 -       VC2     VC1 -       VC1     VSS -	VC3	VC2 - 0.3	VC2 + 8.5, or VSS + 30	V
	VC2	VC1 – 0.3	VC1 + 8.5, or VSS + 30	V
	VSS - 0.3	VSS + 8.5, or VSS + 30	V	
Output voltage range,	CHG, DSG	-0.3	32	
Vo	PCHG, FUSE	-0.3	30	V
Maximum VSS current, I	SS		50	mA
Storage temperature, T <sub>S</sub>	TG	-65	150	°C
Lead temperature (solde	ring, 10 s), T <sub>SOLDER</sub>		300	°C

(1) Stresses beyond those listed under *absolute maximum ratings* may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated under *recommended operating conditions* is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

## 7.2 ESD Ratings

			VALUE	UNIT	
V	Electrostatic	Human-body model (HBM), per ANSI/ESDA/JEDEC JS-001 <sup>(1)</sup>	±2000	V	
V <sub>(ESD)</sub>	discharge	Charged-device model (CDM), per JEDEC specification JESD22-C101 <sup>(2)</sup>	±500	v	

(1) JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

(2) JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.

## 7.3 Recommended Operating Conditions

			MIN	NOM	MAX	UNIT
V <sub>CC</sub>	Supply voltage	BAT, VCC, PBI	2.2		26	V
V <sub>SHUTDOWN-</sub>	Shutdown voltage	V <sub>PACK</sub> < V <sub>SHUTDOWN</sub> -	1.8	2.0	2.2	V
V <sub>SHUTDOWN+</sub>	Start-up voltage	V <sub>PACK</sub> > V <sub>SHUTDOWN</sub> + V <sub>HYS</sub>	2.05	2.25	2.45	V
V <sub>HYS</sub>	Shutdown voltage hysteresis	V <sub>SHUTDOWN+</sub> – V <sub>SHUTDOWN-</sub>		250		mV



## 7.3 Recommended Operating Conditions (continued)

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

			MIN	NOM	MAX	UNIT
		PACK, SMBC, SMBD, PRES, BTP_IN, DISP			26	
		TS1, TS2, TS3, TS4			V <sub>REG</sub>	
		PTC, PTCEN, LEDCNTLA, LEDCNTLB, LEDCNTLC			V <sub>BAT</sub>	
	Input voltago rango	SRP, SRN	-0.2		0.2	v
VIN	Input voltage range	VC4	V <sub>VC3</sub>		V <sub>VC3</sub> + 5	v
		VC3	V <sub>VC2</sub>		V <sub>VC2</sub> + 5	
		VC2	V <sub>VC1</sub>		V <sub>VC1</sub> + 5	
		VC1	V <sub>VSS</sub>		$V_{VSS}$ + 5	
Vo	Output voltage range	CHG, DSG, PCHG, FUSE			26	V
C <sub>PBI</sub>	External PBI capacitor		2.2			μF
T <sub>OPR</sub>	Operating temperature		-40		85	°C

## 7.4 Thermal Information

		BQ40Z50-R2	
	THERMAL METRIC <sup>(1)</sup>	RSM (QFN)	UNIT
		32 PINS	
R <sub>0JA, High K</sub>	Junction-to-ambient thermal resistance	47.4	°C/W
R <sub>0JC(top)</sub>	Junction-to-case(top) thermal resistance	40.3	°C/W
R <sub>θJB</sub>	Junction-to-board thermal resistance	14.7	°C/W
Ψ <sub>JT</sub>	Junction-to-top characterization parameter	0.8	°C/W
Ψ <sub>JB</sub>	Junction-to-board characterization parameter	14.4	°C/W
R <sub>0JC(bottom)</sub>	Junction-to-case(bottom) thermal resistance	3.8	°C/W

(1) For more information about traditional and new thermal metrics, see the *Semiconductor and IC Package Thermal Metrics* application report, SPRA953.

## 7.5 Supply Current

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to  $85^{\circ}C$  and VCC = 2.2 V to 20 V (unless otherwise noted)

P	PARAMETER	TEST CONDITIONS	MIN	ТҮР	MAX	UNIT	
INORMAL	NORMAL mode	CHG on. DSG on, no Flash write		336		μA	
1	SLEEP mode	CHG off, DSG on, no SBS communication		75			
SLEEP		CHG off, DSG off, no SBS communication		52		μA	
I <sub>SHUTDOWN</sub>	SHUTDOWN mode			1.6		μA	

# 7.6 Power Supply Control

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>SWITCHOV</sub>	BAT to V <sub>CC</sub> ver- switchover voltage	V <sub>BAT</sub> < V <sub>SWITCHOVER-</sub>	1.95	2.1	2.2	V
V <sub>SWITCHOV</sub>	V <sub>CC</sub> to BAT switchover voltage	V <sub>BAT</sub> > V <sub>SWITCHOVER-</sub> + V <sub>HYS</sub>	2.9	3.1	3.25	V

# 7.6 Power Supply Control (continued)

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>HYS</sub>	Switchover voltage hysteresis	V <sub>SWITCHOVER+</sub> – V <sub>SWITCHOVER-</sub>		1000		mV
I <sub>LKG</sub>	Input Leakage current	BAT pin, BAT = 0 V, VCC = 25 V, PACK = 25 V			1	
		PACK pin, BAT = 25 V, VCC = 0 V, PACK = 0 V			1	Αu
		BAT and PACK terminals, BAT = 0 V, VCC = 0 V, PACK = 0 V, PBI = 25 V			1	ы, (

# 7.7 AFE Power-On Reset

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

F	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>REGIT-</sub>	Negative-going voltage input	V <sub>REG</sub>	1.51	1.55	1.59	V
V <sub>HYS</sub>	Power-on reset hysteresis	V <sub>REGIT+</sub> – V <sub>REGIT-</sub>	70	100	130	mV
t <sub>RST</sub>	Power-on reset time		200	300	400	μs

# 7.8 AFE Watchdog Reset and Wake Timer

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

I	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
IM/DT		t <sub>WDT</sub> = 500	372	500	628	
	AFE watchdog	t <sub>WDT</sub> = 1000	744	1000	1256	-
	timeout	t <sub>WDT</sub> = 2000	1488	2000	2512	ms
		t <sub>WDT</sub> = 4000	2976	4000	5024	
		t <sub>WAKE</sub> = 250	186	250	314	
	AFE wake timer	t <sub>WAKE</sub> = 500	372	500	628	ma
t <sub>WAKE</sub>	AFE wake unler	t <sub>WAKE</sub> = 1000	744	1000	1256	ms
		t <sub>WAKE</sub> = 512	1488	2000	2512	
t <sub>FETOFF</sub>	FET off delay after reset	t <sub>FETOFF</sub> = 512	409	512	614	ms

## 7.9 Current Wake Comparator

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>WAKE</sub>		V <sub>WAKE</sub> = ±0.625 mV	±0.3	±0.625	±0.9	
	Wake voltage	V <sub>WAKE</sub> = ±1.25 mV	±0.6	±1.25	±1.8	mV
	threshold	V <sub>WAKE</sub> = ±2.5 mV	±1.2	±2.5	±3.6	
		V <sub>WAKE</sub> = ±5 mV	±2.4	±5.0	±7.2	
V <sub>WAKE(DRIFT)</sub>	Temperature drift of V <sub>WAKE</sub> accuracy			0.5%		°C
twake	Time from application of current to wake interrupt				700	μs



## 7.9 Current Wake Comparator (continued)

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	МАХ	UNIT
t <sub>WAKE(SU)</sub>	Wake comparator startup time			500	1000	μs

## 7.10 VC1, VC2, VC3, VC4, BAT, PACK

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
		VC1–VSS, VC2–VC1, VC3–VC2, VC4–VC3	0.1980	0.2000	0.2020	
к	Scaling factor	BAT-VSS, PACK-VSS	0.049	0.050	0.051	—
		V <sub>REF2</sub>	0.490	0.500	0.510	
V	Input voltage range	VC1–VSS, VC2–VC1, VC3–VC2, VC4–VC3	-0.2		5	V
VIN		BAT-VSS, PACK-VSS	-0.2		20	
I <sub>LKG</sub>	Input leakage current	VC1, VC2, VC3, VC4, cell balancing off, cell detach detection off, ADC multiplexer off			1	μΑ
R <sub>CB</sub>	Internal cell balance resistance	$R_{DS(ON)}$ for internal FET switch at 2 V < V <sub>DS</sub> < 4 V			200	Ω
I <sub>CD</sub>	Internal cell detach check current	VCx > VSS + 0.8 V	30	50	70	μΑ

## 7.11 SMBD, SMBC

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
VIH	Input voltage high	SMBC, SMBD, V <sub>REG</sub> = 1.8 V	1.3			V
VIL	Input voltage low	SMBC, SMBD, V <sub>REG</sub> = 1.8 V			0.8	V
V <sub>OL</sub>	Output low voltage	SMBC, SMBD, V <sub>REG</sub> = 1.8 V, I <sub>OL</sub> = 1.5 mA			0.4	V
C <sub>IN</sub>	Input capacitance			5		pF
I <sub>LKG</sub>	Input leakage current				1	μA
R <sub>PD</sub>	Pulldown resistance		0.7	1.0	1.3	MΩ

# 7.12 PRES, BTP\_INT, DISP

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>IH</sub>	High-level input		1.3			V
V <sub>IL</sub>	Low-level input				0.55	V
Vau Out		V <sub>BAT</sub> > 5.5 V, I <sub>OH</sub> = -0 μA	3.5			V
V <sub>OH</sub>	Output voltage high	V <sub>BAT</sub> > 5.5 V, I <sub>OH</sub> = -10 μA	1.8			v
V <sub>OL</sub>	Output voltage low	I <sub>OL</sub> = 1.5 mA			0.4	V
C <sub>IN</sub>	Input capacitance			5		pF
I <sub>LKG</sub>	Input leakage current				1	μA
R <sub>O</sub>	Output reverse resistance	Between PRES or BTP_INT or DISP and PBI	8			kΩ



# 7.13 LEDCNTLA, LEDCNTLB, LEDCNTLC

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>IH</sub>	High-level input		1.45			V
V <sub>IL</sub>	Low-level input				0.55	V
V <sub>OH</sub>	Output voltage high	V <sub>BAT</sub> > 3.0 V, I <sub>OH</sub> = -22.5 mA	V <sub>BAT</sub> – 1.6			V
V <sub>OL</sub>	Output voltage low	I <sub>OL</sub> = 1.5 mA			0.4	V
I <sub>SC</sub>	High level output current protection		-30	-45	-6 0	mA
I <sub>OL</sub>	Low level output current	V <sub>BAT</sub> > 3.0 V, V <sub>OH</sub> = 0.4 V	15.75	22.5	29.25	mA
ILEDCNTLX	Current matching between LEDCNTLx	V <sub>BAT</sub> = V <sub>LEDCNTLx</sub> + 2.5 V		±1%		
C <sub>IN</sub>	Input capacitance			20		pF
I <sub>LKG</sub>	Input leakage current				1	μA
f <sub>LEDCNTLx</sub>	Frequency of LED pattern			124		Hz

# 7.14 Coulomb Counter

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Input voltage range		-0.1		0.1	V
Full scale range		-V <sub>REF1</sub> /10		V <sub>REF1</sub> /10	V
Integral nonlinearity <sup>(1)</sup>	16-bit, best fit over input voltage range		±5.2	±22.3	LSB
Offset error	16-bit, Post-calibration		±5	±10	μV
Offset error drift	15-bit + sign, Post-calibration		0.2	0.3	µV/°C
Gain error	15-bit + sign, over input voltage range		±0.2%	±0.8%	FSR
Gain error drift	15-bit + sign, over input voltage range			150	PPM/°C
Effective input resistance		2.5			MΩ

(1) 1 LSB =  $V_{REF1}/(10 \times 2^N) = 1.215/(10 \times 2^{15}) = 3.71 \,\mu V$ 

# 7.15 CC Digital Filter

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Conversion time	Single conversion		250		ms
Effective resolution	Single conversion	15			Bits

# 7.16 ADC

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT	
Input voltage range	Internal reference (V <sub>REF1</sub> )	-0.2		1	V	
	External reference (V <sub>REG</sub> )	-0.2		0.8 × V <sub>REG</sub>	v	
Full scale range	V <sub>FS</sub> = V <sub>REF1</sub> or V <sub>REG</sub>	$-V_{FS}$		V <sub>FS</sub>	V	



# 7.16 ADC (continued)

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Integral nonlinearity <sup>(1)</sup>	16-bit, best fit, –0.1 V to 0.8 × V <sub>REF1</sub>			±6.6	LSB
	16-bit, best fit, -0.2 V to -0.1 V			±13.1	LSB
Offset error <sup>(2)</sup>	16-bit, Post-calibration, V <sub>FS</sub> = V <sub>REF1</sub>		±67	±157	μV
Offset error drift	16-bit, Post-calibration, V <sub>FS</sub> = V <sub>REF1</sub>		0.6	3	µV/°C
Gain error	16-bit, -0.1 V to 0.8 × V <sub>FS</sub>		±0.2%	±0.8%	FSR
Gain error drift	16-bit, -0.1 V to 0.8 × V <sub>FS</sub>			150	PPM/°C
Effective input resistance		8			MΩ

(1) 1 LSB =  $V_{REF1}/(2^N)$  = 1.225/(2<sup>15</sup>) = 37.4 µV (when t<sub>CONV</sub> = 31.25 ms)

(2) For VC1–VSS, VC2–VC1, VC3–VC2, VC4–VC3, VC4–VSS, PACK–VSS, and V<sub>REF1</sub>/2, the offset error is multiplied by (1/ADC multiplexer scaling factor (K)).

# 7.17 ADC Digital Filter

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to  $85^{\circ}C$  and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
	Single conversion			31.25		
Conversion time	Single conversion			15.63		
	Single conversion			7.81		ms
	Single conversion			1.95		
Resolution	No missing codes		16			Bits
	With sign, t <sub>CONV</sub> = 31.25 ms		14	15		
Effective resolution	With sign, t <sub>CONV</sub> = 15.63 ms		13	14		Bits
	With sign, t <sub>CONV</sub> = 7.81 ms		11	12		
	With sign, t <sub>CONV</sub> = 1.95 ms		9	10		

# 7.18 CHG, DSG FET Drive

PARAMET	ER	TEST CONDITIONS	MIN	ТҮР	MAX	UNIT
	Output voltage	Ratio <sub>DSG</sub> = (V <sub>DSG</sub> – V <sub>BAT</sub> )/V <sub>BAT</sub> , 2.2 V < V <sub>BAT</sub> < 4.92 V, 10 MΩ between PACK and DSG	2.133	2.333	2.433	
	ratio	Ratio <sub>CHG</sub> = (V <sub>CHG</sub> – V <sub>BAT</sub> )/V <sub>BAT</sub> , 2.2 V < V <sub>BAT</sub> < 4.92 V, 10 MΩ between BAT and CHG	2.133	2.333	2.433	
V	Output voltage,	$V_{DSG(ON)}$ = $V_{DSG}$ − $V_{BAT}$ , $V_{BAT}$ ≥ 4.92 V, 10 MΩ between PACK and DSG, $V_{BAT}$ = 18 V	10.5	11.5	12	V
V <sub>(FETON)</sub>	CHG and DSG on	$V_{CHG(ON)}$ = $V_{CHG}$ − $V_{BAT}$ , $V_{BAT}$ ≥ 4.92 V, 10 MΩ between BAT and CHG, $V_{BAT}$ = 18 V	10.5	11.5	12	v
V <sub>(FETOFF)</sub>	Output voltage, CHG and DSG off	$V_{DSG(OFF)}$ = $V_{DSG}$ – $V_{PACK}$ , 10 M $\Omega$ between PACK and DSG	-0.4		0.4	V
		$V_{CHG(OFF)}$ = $V_{CHG}$ – $V_{BAT},~10~M\Omega$ between BAT and CHG	-0.4		0.4	
t <sub>R</sub>	Piece time	$V_{DSG}$ from 0% to 35% $V_{DSG (ON)(TYP)}$ , $V_{BAT} ≥ 2.2$ V, $C_L = 4.7$ nF between DSG and PACK, 5.1 kΩ between DSG and $C_L$ , 10 MΩ between PACK and DSG		200	500	
	Rise time	$V_{CHG}$ from 0% to 35% $V_{CHG (ON)(TYP)}$ , $V_{BAT} ≥ 2.2$ V, $C_L = 4.7$ nF between CHG and BAT, 5.1 kΩ between CHG and $C_L$ , 10 MΩ between BAT and CHG		200	500	μs



# 7.18 CHG, DSG FET Drive (continued)

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
t <sub>F</sub> Fall time	$V_{DSG}$ from $V_{DSG(ON)(TYP)}$ to 1 V, $V_{BAT} ≥ 2.2$ V, $C_L = 4.7$ nF between DSG and PACK, 5.1 kΩ between DSG and $C_L$ , 10 MΩ between PACK and DSG		40	300		
	$V_{CHG}$ from $V_{CHG(ON)(TYP)}$ to 1 V, $V_{BAT} ≥ 2.2$ V, $C_L = 4.7$ nF between CHG and BAT, 5.1 kΩ between CHG and $C_L$ , 10 MΩ between BAT and CHG		40	200	μs	

# 7.19 PCHG FET Drive

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMET	ER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>(FETON)</sub>	Output voltage, PCHG on	$V_{PCHG(ON)}$ = $VV_{CC}$ – $V_{PCHG},~10~M\Omega$ between $V_{CC}$ and PCHG	6	7	8	V
V <sub>(FETOFF)</sub>	Output voltage, PCHG off	$V_{PCHG(OFF)}$ = $VV_{CC}$ – $V_{PCHG},$ 10 M $\Omega$ between $V_{CC}$ and PCHG	-0.4		0.4	V
t <sub>R</sub>	Rise time	$V_{PCHG}$ from 10% to 90% $V_{PCHG(ON)(TYP)}$ , $VV_{CC} \ge 8$ V, $C_L$ = 4.7 nF between PCHG and $V_{CC}$ , 5.1 k $\Omega$ between PCHG and $C_L$ , 10 M $\Omega$ between $V_{CC}$ and CHG		40	200	μs
t <sub>F</sub>	Fall time	$V_{PCHG}$ from 90% to 10% $V_{PCHG(ON)(TYP)}$ , $V_{CC} ≥ 8$ V, $C_L = 4.7$ nF between PCHG and $V_{CC}$ , 5.1 kΩ between PCHG and $C_L$ , 10 MΩ between $V_{CC}$ and CHG		40	200	μs

# 7.20 FUSE Drive

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	2	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Varia	Output voltage high	$V_{BAT} \ge 8 \text{ V}, \text{ C}_{L} = 1 \text{ nF}, \text{ I}_{AFEFUSE} = 0 \mu\text{A}$	6	7	8.65	V
V <sub>OH</sub>		$V_{BAT}$ < 8 V, $C_{L}$ = 1 nF, $I_{AFEFUSE}$ = 0 $\mu$ A	V <sub>BAT</sub> – 0.1		$V_{BAT}$	v
V <sub>IH</sub>	High-level input		1.5	2.0	2.5	V
I <sub>AFEFUSE(PU)</sub>	Internal pullup current	V <sub>BAT</sub> ≥ 8 V, V <sub>AFEFUSE</sub> = VSS		150	330	nA
R <sub>AFEFUSE</sub>	Output impedance		2	2.6	3.2	kΩ
C <sub>IN</sub>	Input capacitance			5		pF
t <sub>DELAY</sub>	Fuse trip detection delay		128		256	μs
t <sub>RISE</sub>	Fuse output rise time	V <sub>BAT</sub> ≥ 8 V, C <sub>L</sub> = 1 nF, V <sub>OH</sub> = 0 V to 5 V		5	20	μs

## 7.21 Internal Temperature Sensor

PARAME	ETER	TEST CONDITIONS	MIN	ТҮР	MAX	UNIT
Internal		V <sub>TEMPP</sub>	-1.9	-2.0	-2.1	
V <sub>TEMP</sub>	temperature sensor voltage drift	$V_{\text{TEMPP}} - V_{\text{TEMPN}}$ , assured by design	0.177	0.178	0.179	mV/°C



# 7.22 TS1, TS2, TS3, TS4

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
N	Input voltage	TS1, TS2, TS3, TS4, V <sub>BIAS</sub> = V <sub>REF1</sub>	-0.2		0.8 × V <sub>REF1</sub>	V
V <sub>IN</sub>	range	TS1, TS2, TS3, TS4, V <sub>BIAS</sub> = V <sub>REG</sub>	-0.2		$0.8 \times V_{REG}$	v
R <sub>NTC(PU)</sub>	Internal pullup resistance	TS1, TS2, TS3, TS4	14.4	18	21.6	kΩ
R <sub>NTC(DRIFT)</sub>	Resistance drift over temperature	TS1, TS2, TS3, TS4	-360	-280	-200	PPM/°C

# 7.23 PTC, PTCEN

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to  $85^{\circ}C$  and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETE	R	TEST CONDITIONS	MIN	TYP	MAX	UNIT
R <sub>PTC(TRIP)</sub>	PTC trip resistance		1.2	2.5	3.95	MΩ
V <sub>PTC(TRIP)</sub>	PTC trip voltage	V <sub>PTC(TRIP)</sub> = V <sub>PTCEN</sub> - V <sub>PTC</sub>	200	500	890	mV
I <sub>PTC</sub>	Internal PTC current bias	T <sub>A</sub> = -40°C to 110°C	200	290	350	nA
t <sub>PTC(DELAY)</sub>	PTC delay time	$T_A = -40^{\circ}C$ to $110^{\circ}C$	40	80	145	ms

# 7.24 Internal 1.8-V LDO

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

P/	ARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>REG</sub>	Regulator voltage		1.6	1.8	2.0	V
$\Delta V_{O(TEMP)}$	Regulator output over temperature	$\Delta V_{\text{REG}} / \Delta T_{\text{A}}$ , I <sub>REG</sub> = 10 mA		±0.25%		
$\Delta V_{O(LINE)}$	Line regulation	$\Delta V_{\text{REG}} / \Delta V_{\text{BAT}}$ , $V_{\text{BAT}}$ = 10 mA	-0 .6%		0.5%	
$\Delta V_{O(LOAD)}$	Load regulation	$\Delta V_{\text{REG}} / \Delta I_{\text{REG}}$ , $I_{\text{REG}}$ = 0 mA to 10 mA	-1.5%		1.5%	
I <sub>REG</sub>	Regulator output current limit	$V_{\text{REG}} = 0.9 \times V_{\text{REG(NOM)}}, V_{\text{IN}} > 2.2 \text{ V}$	20			mA
I <sub>SC</sub>	Regulator short- circuit current limit	$V_{\text{REG}} = 0 \times V_{\text{REG(NOM)}}$	25	40	55	mA
PSRR <sub>REG</sub>	Power supply rejection ratio	$\Delta V_{BAT}/\Delta V_{REG}$ , I <sub>REG</sub> = 10 mA ,V <sub>IN</sub> > 2.5 V, f = 10 Hz		40		dB
V <sub>SLEW</sub>	Slew rate enhancement voltage threshold	V <sub>REG</sub>	1.58	1.65		V

# 7.25 High-Frequency Oscillator

PARAMET	ER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
f <sub>HFO</sub>	Operating frequency			16.78		MHz
£	Fraguanavarrar	$T_A = -20^{\circ}C$ to 70°C, includes frequency drift	-2.5%	±0.25%	2.5%	
THFO(ERR)	Frequency error	$T_A = -40^{\circ}C$ to 85°C, includes frequency drift	-3.5%	±0.25%	3.5%	

# 7.25 High-Frequency Oscillator (continued)

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
t <sub>HFO(SU)</sub> Start-up time	$T_A = -20^{\circ}$ C to 85°C, oscillator frequency within +/- 3% of nominal			4	ms
	oscillator frequency within +/-3% of nominal			100	μs

# 7.26 Low-Frequency Oscillator

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
f <sub>LFO</sub>	Operating frequency			262.144		kHz
f	Frequency error	$T_A = -20^{\circ}C$ to 70°C, includes frequency drift	-1.5%	±0.25%	1.5%	
TLFO(ERR)		$T_A = -40^{\circ}C$ to 85°C, includes frequency drift	-2.5	±0.25	2.5	
f <sub>LFO(FAIL)</sub>	Failure detection frequency		30	80	100	kHz

# 7.27 Voltage Reference 1

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>REF1</sub>	Internal reference voltage	T <sub>A</sub> = 25°C, after trim	1.21	1.215	1.22	V
Internal reference		$T_A = 0^{\circ}C$ to 60°C, after trim		±50		PPM/°C
VREF1(DRIFT)	voltage drift	$T_A = -40^{\circ}C$ to 85°C, after trim		±80		PPIVI/ C

# 7.28 Voltage Reference 2

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>REF2</sub>	Internal reference voltage	T <sub>A</sub> = 25°C, after trim	1.22	1.225	1.23	V
V	Internal reference RIFT) voltage drift	T <sub>A</sub> = 0°C to 60°C, after trim		±50		PPM/°C
V <sub>REF2</sub> (DRIFT)		$T_A = -40^{\circ}C$ to 85°C, after trim		±80		

# 7.29 Instruction Flash

PARAMETER		TEST CONDITIONS	MIN	TYP	MAX	UNIT
	Data retention		10			Years
	Flash programming write cycles		1000			Cycles
t <sub>PROGWORD</sub>	Word programming time	$T_A = -40^{\circ}C$ to $85^{\circ}C$			40	μs
t <sub>MASSERASE</sub>	Mass-erase time	$T_A = -40^{\circ}C \text{ to } 85^{\circ}C$			40	ms
t <sub>PAGEERASE</sub>	Page-erase time	$T_A = -40^{\circ}C \text{ to } 85^{\circ}C$			40	ms
I <sub>FLASHREAD</sub>	Flash-read current	$T_A = -40^{\circ}C \text{ to } 85^{\circ}C$			2	mA
I <sub>FLASHWRITE</sub>	Flash-write current	$T_A = -40^{\circ}C \text{ to } 85^{\circ}C$			5	mA



## 7.29 Instruction Flash (continued)

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER	1		TEST CONDITIONS	MIN	TYP	MAX	UNIT
I <sub>FLASHERASE</sub>	Flash-erase current	$T_A = -40^{\circ}C$ to $85^{\circ}C$				15	mA

## 7.30 Data Flash

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAMETER			TEST CONDITIONS	MIN	TYP	MAX	UNIT
	Data retention			10			Years
	Flash programming write cycles			20000			Cycles
t <sub>PROGWORD</sub>	Word programming time	T <sub>A</sub> = –40°C to 85°C				40	μs
t <sub>MASSERASE</sub>	Mass-erase time	$T_A = -40^{\circ}C$ to $85^{\circ}C$				40	ms
t <sub>PAGEERASE</sub>	Page-erase time	$T_A = -40^{\circ}C$ to $85^{\circ}C$				40	ms
IFLASHREAD	Flash-read current	$T_A = -40^{\circ}C$ to $85^{\circ}C$				1	mA
I <sub>FLASHWRITE</sub>	Flash-write current	$T_A = -40^{\circ}C$ to $85^{\circ}C$				5	mA
I <sub>FLASHERASE</sub>	Flash-erase current	T <sub>A</sub> = –40°C to 85°C				15	mA

## 7.31 OLD, SCC, SCD1, SCD2 Current Protection Thresholds

PARAME	TER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>OLD</sub>	OLD detection threshold	V <sub>OLD</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1	-16.6	·	-100	mV
V OLD	voltage range	V <sub>OLD</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 0	-8.3		-50	IIIV
ΔV <sub>OLD</sub>	OLD detection threshold	V <sub>OLD</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1		-5.56		m)/
voltage program	voltage program step	V <sub>OLD</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 0		-2.78		mV
Vaca	SCC detection threshold	V <sub>SCC</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1	44.4		200	m) (
	voltage range	$V_{SCC} = V_{SRP} - V_{SRN}$ , AFE PROTECTION CONTROL[RSNS] = 0	22.2		100	- mV
A) /	SCC detection threshold voltage program step	V <sub>SCC</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1		22.2	2	- mV
ΔV <sub>SCC</sub>		$V_{SCC} = V_{SRP} - V_{SRN}$ , AFE PROTECTION CONTROL[RSNS] = 0		11.1		
V	SCD1 detection	V <sub>SCD1</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1	-44.4		-200	mV
V <sub>SCD1</sub>	threshold voltage range	$V_{SCD1} = V_{SRP} - V_{SRN}$ , AFE PROTECTION CONTROL[RSNS] = 0	-22.2		-100	IIIV
۸\/	SCD1 detection	$V_{SCD1} = V_{SRP} - V_{SRN}$ , AFE PROTECTION CONTROL[RSNS] = 1		-22.2		mV
∆V <sub>SCD1</sub>	threshold voltage program step	$V_{SCD1} = V_{SRP} - V_{SRN}$ , AFE PROTECTION CONTROL[RSNS] = 0		-11.1		IIIV
	SCD2 detection	V <sub>SCD2</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1	-44.4		-200	
V <sub>SCD2</sub>	threshold voltage range	$V_{SCD2} = V_{SRP} - V_{SRN,}$ AFE PROTECTION CONTROL[RSNS] = 0	-22.2		-100	mV



# 7.31 OLD, SCC, SCD1, SCD2 Current Protection Thresholds (continued)

Typical values stated where  $T_A = 25^{\circ}$ C and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}$ C to 85°C and VCC = 2.2 V to 26 V (unless otherwise noted)

PARAME	TER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
$\Delta V_{SCD2}$	SCD2 detection threshold voltage program step	V <sub>SCD2</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 1		-22.2		mV
		V <sub>SCD2</sub> = V <sub>SRP</sub> – V <sub>SRN,</sub> AFE PROTECTION CONTROL[RSNS] = 0		-11.1		
V <sub>OFFSET</sub>	OLD, SCC, and SCDx offset error	Post-trim	-2.5		2.5	mV
V <sub>SCALE</sub>		No trim	-10%		10%	
		Post-trim	-5%		5%	

# 7.32 Timing Requirements: OLD, SCC, SCD1, SCD2 Current Protection Timing

Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to  $85^{\circ}C$  and VCC = 2.2 V to 26 V (unless otherwise noted)

			MIN	NOM	MAX	UNIT
t <sub>OLD</sub>	OLD detection delay time		1		31	ms
Δt <sub>OLD</sub>	OLD detection delay time program step			2		ms
t <sub>scc</sub>	SCC detection delay time		0		915	μs
Δt <sub>SCC</sub>	SCC detection delay time program step			61		μs
t <sub>SCD1</sub>	SCD1 detection delay time	AFE PROTECTION CONTROL[SCDDx2] = 0	0		915	μs
		AFE PROTECTION CONTROL[SCDDx2] = 1	0		1850	
	SCD1 detection	AFE PROTECTION CONTROL[SCDDx2] = 0		61		
∆t <sub>SCD1</sub>	delay time program step	AFE PROTECTION CONTROL[SCDDx2] = 1		121		μs
+	SCD2 detection	AFE PROTECTION CONTROL[SCDDx2] = 0	0		458	
t <sub>SCD2</sub>	delay time	AFE PROTECTION CONTROL[SCDDx2] = 1	0		915	μs
	SCD2 detection	AFE PROTECTION CONTROL[SCDDx2] = 0		30.5		
∆t <sub>SCD2</sub>	delay time program step	AFE PROTECTION CONTROL[SCDDx2] = 1		61		μs
t <sub>DETECT</sub>	Current fault detect time	$V_{SRP}$ – $V_{SRN}$ = $V_{T}$ – 3 mV for OLD, SCD1, and SC2, $V_{SRP}$ – $V_{SRN}$ = $V_{T}$ + 3 mV for SCC			160	μs
t <sub>ACC</sub>	Current fault delay time accuracy	Max delay setting	-10%		10%	

## 7.33 Timing Requirements: SMBus

			MIN	NOM	MAX	UNIT
f <sub>SMB</sub>	SMBus operating frequency	SLAVE mode, SMBC 50% duty cycle	10		100	kHz
f <sub>MAS</sub>	SMBus master clock frequency	MASTER mode, no clock low slave extend		51.2		kHz
t <sub>BUF</sub>	Bus free time between start and stop		4.7			μs



## 7.33 Timing Requirements: SMBus (continued)


Typical values stated where  $T_A = 25^{\circ}C$  and VCC = 14.4 V, Min/Max values stated where  $T_A = -40^{\circ}C$  to  $85^{\circ}C$  and VCC = 2.2 V to 26 V (unless otherwise noted)

			MIN	NOM	MAX	UNIT
t <sub>HD(START)</sub>	Hold time after (repeated) start		4.0			μs
t <sub>SU(START)</sub>	Repeated start setup time		4.7			μs
t <sub>SU(STOP)</sub>	Stop setup time		4.0			μs
t <sub>HD(DATA)</sub>	Data hold time		300			ns
t <sub>SU(DATA)</sub>	Data setup time		250			ns
t <sub>TIMEOUT</sub>	Error signal detect time		25		35	ms
t <sub>LOW</sub>	Clock low period		4.7			μs
t <sub>HIGH</sub>	Clock high period		4.0		50	μs
t <sub>R</sub>	Clock rise time	10% to 90%			1000	ns
t <sub>F</sub>	Clock fall time	90% to 10%			300	ns
t <sub>LOW(SEXT)</sub>	Cumulative clock low slave extend time				25	ms
t <sub>LOW(MEXT)</sub>	Cumulative clock low master extend time				10	ms


## 7.34 Timing Requirements: SMBus XL

			MIN	NOM	MAX	UNIT
f <sub>SMBXL</sub>	SMBus XL operating frequency	SLAVE mode	40		400	kHz
t <sub>BUF</sub>	Bus free time between start and stop		4.7			μs
t <sub>HD(START)</sub>	Hold time after (repeated) start		4.0			μs
t <sub>SU(START)</sub>	Repeated start setup time		4.7			μs
t <sub>SU(STOP)</sub>	Stop setup time		4.0			μs
t <sub>TIMEOUT</sub>	Error signal detect time		5		20	ms
t <sub>LOW</sub>	Clock low period				20	μs
t <sub>HIGH</sub>	Clock high period				20	μs



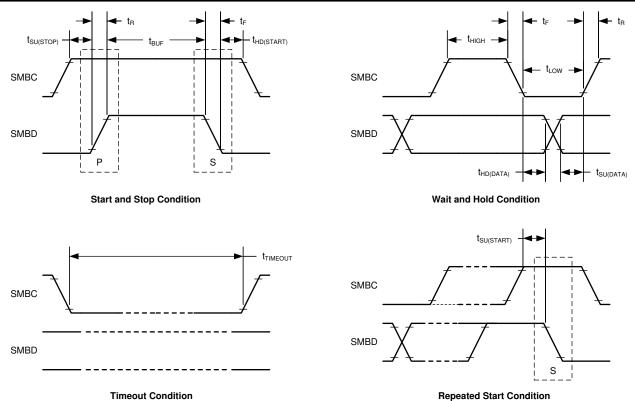



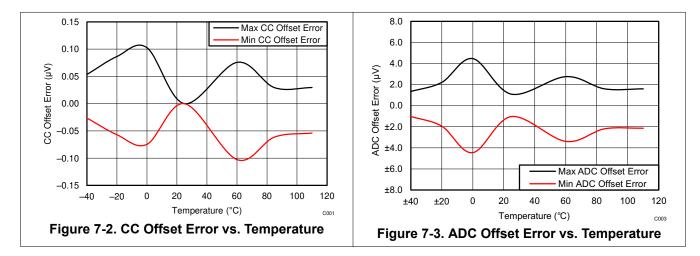


# 7.35 Typical Characteristics

EXAS


INSTRUMENTS

www.ti.com



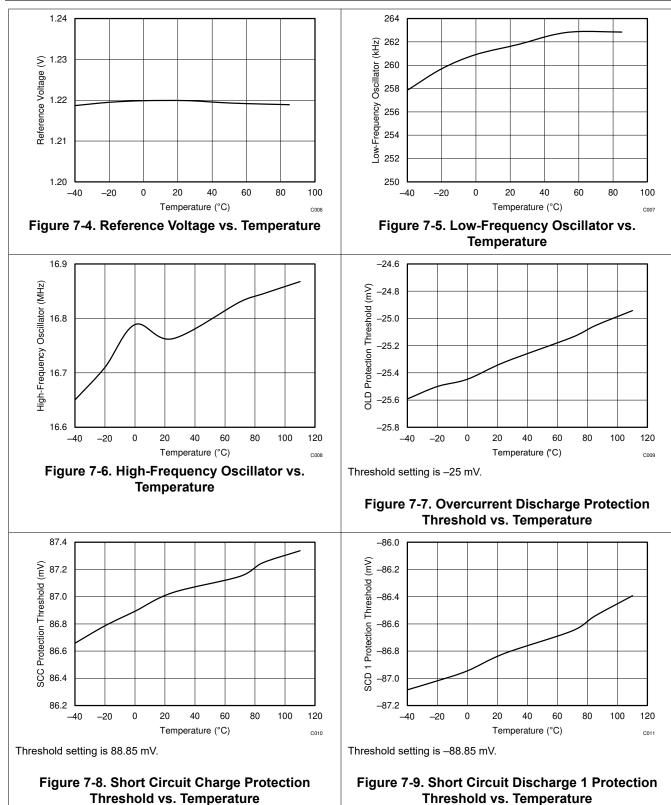




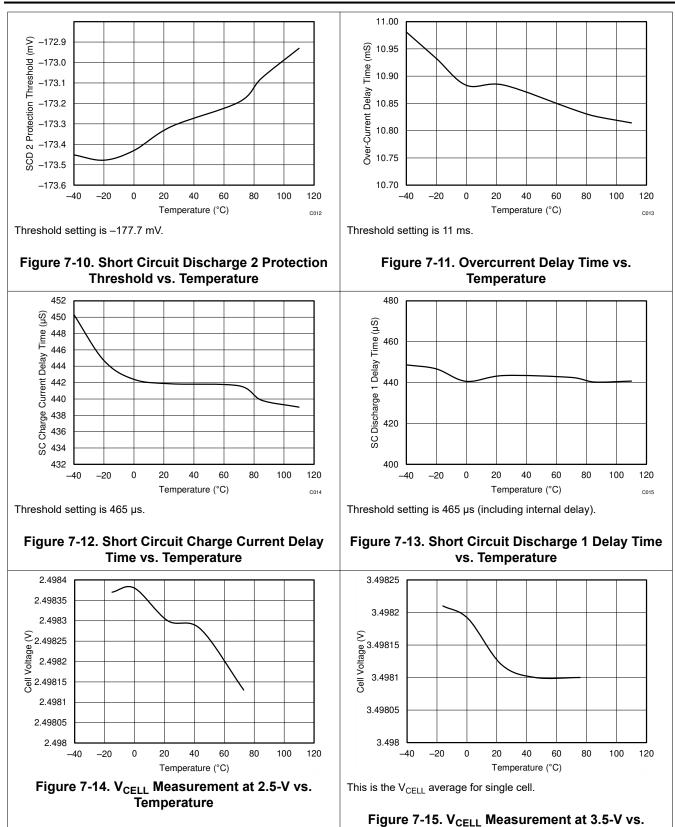

Temperature



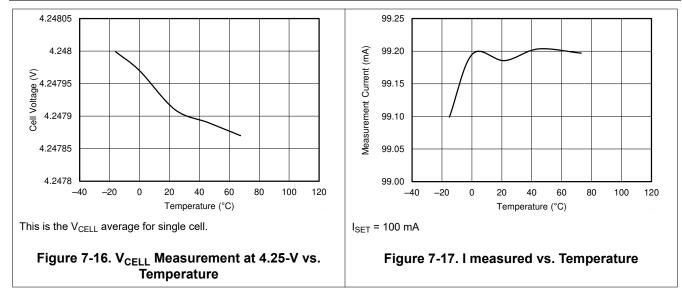




# 8 Detailed Description

## 8.1 Overview

The BQ40Z50-R2 device, incorporating patented Impedance Track<sup>™</sup> technology, provides cell balancing while charging or at rest. This fully integrated, single-chip, pack-based solution, including a diagnostic lifetime data monitor and black box recorder, provides a rich array of features for gas gauging, protection, and authentication for 1-series, 2-series, 3-series, and 4-series cell Li-ion and Li-polymer battery packs.

## 8.2 Functional Block Diagram

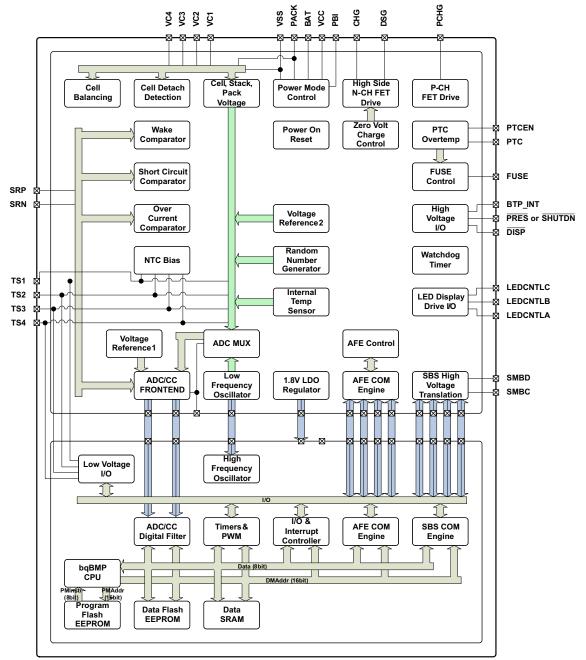

Copyright © 2017, Texas Instruments Incorporated



## 8.3 Feature Description

#### 8.3.1 Primary (1st Level) Safety Features

The BQ40Z50-R2 supports a wide range of battery and system protection features that can easily be configured. See the *BQ40Z50-R2 Technical Reference Manual* (SLUUBK0) for detailed descriptions of each protection function.

The primary safety features include:

- Cell Overvoltage Protection
- Cell Undervoltage Protection
- Cell Undervoltage Protection Compensated
- Overcurrent in Charge Protection
- Overcurrent in Discharge Protection
- Overload in Discharge Protection
- Short Circuit in Charge Protection
- Short Circuit in Discharge Protection
- Overtemperature in Charge Protection
- Overtemperature in Discharge Protection
- Undertemperature in Charge Protection
- Undertemperature in Discharge Protection
- Overtemperature FET protection
- Precharge Timeout Protection
- Host Watchdog Timeout Protection
- Fast Charge Timeout Protection
- Overcharge Protection
- Overcharging Voltage Protection
- Overcharging Current Protection
- Over Precharge Current Protection

## 8.3.2 Secondary (2nd Level) Safety Features

The secondary safety features of the BQ40Z50-R2 can be used to indicate more serious faults via the FUSE pin. This pin can be used to blow an in-line fuse to permanently disable the battery pack from charging or discharging. See the *BQ40Z50-R2 Technical Reference Manual* (SLUUBK0) for detailed descriptions of each protection function.

The secondary safety features provide protection against:

- Safety Overvoltage Permanent Failure
- Safety Undervoltage Permanent Failure
- Safety Overtemperature Permanent Failure
- Safety FET Overtemperature Permanent Failure
- Qmax Imbalance Permanent Failure
- Impedance Imbalance Permanent Failure
- Capacity Degradation Permanent Failure
- Cell Balancing Permanent Failure
- Fuse Failure Permanent Failure
- PTC Permanent Failure
- Voltage Imbalance At Rest Permanent Failure
- Voltage Imbalance Active Permanent Failure
- Charge FET Permanent Failure
- Discharge FET Permanent Failure
- AFE Register Permanent Failure
- AFE Communication Permanent Failure
- Second Level Protector Permanent Failure
- Instruction Flash Checksum Permanent Failure
- Open Cell Connection Permanent Failure



- Data Flash Permanent Failure
- Open Thermistor Permanent Failure

#### 8.3.3 Charge Control Features

The BQ40Z50-R2 charge control features include:

- Supports JEITA temperature ranges. Reports charging voltage and charging current according to the active temperature range
- Handles more complex charging profiles. Allows for splitting the standard temperature range into two subranges and allows for varying the charging current according to the cell voltage
- Reports the appropriate charging current needed for constant current charging and the appropriate charging voltage needed for constant voltage charging to a smart charger using SMBus broadcasts
- Reduces the charge difference of the battery cells in a fully charged state of the battery pack gradually using a voltage-based cell balancing algorithm during charging. A voltage threshold can be set up for cell balancing to be active. This prevents fully charged cells from overcharging and causing excessive degradation and also increases the usable pack energy by preventing premature charge termination.
- Supports precharging/0-volt charging
- Supports charge inhibit and charge suspend if battery pack temperature is out of temperature range
- Reports charging fault and also indicates charge status via charge and discharge alarms

## 8.3.4 Gas Gauging

The BQ40Z50-R2 uses the Impedance Track algorithm to measure and calculate the available capacity in battery cells. The BQ40Z50-R2 accumulates a measure of charge and discharge currents and compensates the charge current measurement for the temperature and state-of-charge of the battery. The BQ40Z50-R2 estimates self-discharge of the battery and also adjusts the self-discharge estimation based on temperature. The device also has TURBO Mode 2.0 support, which enables the BQ40Z50-R2 to provide the necessary data for the MCU to determine what level of peak power consumption can be applied without causing a system reset or transient battery voltage level spike to trigger termination flags. See the *BQ40Z50-R2 Technical Reference Manual* (SLUUBK0) for further details.

## 8.3.5 Configuration

#### 8.3.5.1 Oscillator Function

The BQ40Z50-R2 fully integrates the system oscillators and does not require any external components to support this feature.

#### 8.3.5.2 System Present Operation

The BQ40Z50-R2 checks the  $\overline{PRES}$  pin periodically (1 s). If  $\overline{PRES}$  input is pulled to ground by the external system, the BQ40Z50-R2 detects this as system present.

#### 8.3.5.3 Emergency Shutdown

For battery maintenance, the emergency shutdown feature enables a push button action connecting the SHUTDN pin to shut down an embedded battery pack system before removing the battery. A high-to-low transition of the SHUTDN pin signals the BQ40Z50-R2 to turn off the CHG and DSG FETs, disconnecting the power from the system to safely remove the battery pack. The CHG and DSG FETs can be turned on again by another high-to-low transition detected by the SHUTDN pin or when a data flash configurable timeout is reached.

#### 8.3.5.4 1-Series, 2-Series, 3-Series, or 4-Series Cell Configuration

In a 1-series cell configuration, VC4 is shorted to VC, VC2, and VC1. In a 2-series cell configuration, VC4 is shorted to VC3 and VC2. In a 3-series cell configuration, VC4 is shorted to VC3.

#### 8.3.5.5 Cell Balancing

The device supports cell balancing by bypassing the current of each cell during charging or at rest. If the device's internal bypass is used, up to 10 mA can be bypassed and multiple cells can be bypassed at the same time. Higher cell balance current can be achieved by using an external cell balancing circuit. In external cell balancing mode, only one cell at a time can be balanced.



The cell balancing algorithm determines the amount of charge needed to be bypassed to balance the capacity of all cells.

## 8.3.6 Battery Parameter Measurements

#### 8.3.6.1 Charge and Discharge Counting

The BQ40Z50-R2 uses an integrating delta-sigma analog-to-digital converter (ADC) for current measurement, and a second delta-sigma ADC for individual cell and battery voltage and temperature measurement.

The integrating delta-sigma ADC measures the charge/discharge flow of the battery by measuring the voltage drop across a small-value sense resistor between the SRP and SRN terminals. The integrating ADC measures bipolar signals from -0.1 V to 0.1 V. The BQ40Z50-R2 detects charge activity when  $V_{SR} = V_{(SRP)} - V_{(SRN)}$  is positive, and discharge activity when  $V_{SR} = V_{(SRP)} - V_{(SRN)}$  is negative. The BQ40Z50-R2 continuously integrates the signal over time, using an internal counter. The fundamental rate of the counter is 0.26 nVh.

#### 8.3.7 Battery Trip Point (BTP)

Required for WIN8 OS, the battery trip point (BTP) feature indicates when the RSOC of a battery pack has depleted to a certain value set in a DF register. This feature enables a host to program two capacity-based thresholds that govern the triggering of a BTP interrupt on the BTP\_INT pin, and the setting or clearing of the *OperationStatus[BTP\_INT]* on the basis of *RemainingCapacity()*.

An internal weak pullup is applied when the BTP feature is active. Depending on the system design, an external pullup may be required to put on the BTP\_INT pin. See *Section 7.12* for details.

#### 8.3.8 Lifetime Data Logging Features

The BQ40Z50-R2 offers lifetime data logging for several critical battery parameters. The following parameters are updated every 10 hours if a difference is detected between values in RAM and data flash:

- Maximum and Minimum Cell Voltages
- Maximum Delta Cell Voltage
- Maximum Charge Current
- Maximum Discharge Current
- Maximum Average Discharge Current
- Maximum Average Discharge Power
- Maximum and Minimum Cell Temperature
- Maximum Delta Cell Temperature
- Maximum and Minimum Internal Sensor Temperature
- Maximum FET Temperature
- Number of Safety Events Occurrences and the Last Cycle of the Occurrence
- Number of Valid Charge Termination and the Last Cycle of the Valid Charge Termination
- Number of Qmax and Ra Updates and the Last Cycle of the Qmax and Ra Updates
- Number of Shutdown Events
- Cell Balancing Time for Each Cell

(This data is updated every 2 hours if a difference is detected.)

Total FW Runtime and Time Spent in Each Temperature Range

(This data is updated every 2 hours if a difference is detected.)

## 8.3.9 Authentication

The BQ40Z50-R2 supports authentication by the host using SHA-1.

#### 8.3.10 LED Display

The BQ40Z50-R2 can drive a 3-, 4-, or 5- segment LED display for remaining capacity indication and/or a permanent fail (PF) error code indication.

## 8.3.11 IATA Support

The BQ40Z50-R2 supports IATA with several new commands and procedures. See the *BQ40Z50-R2 Technical Reference Manual* (SLUUBK0) for further details.



#### 8.3.12 Voltage

The BQ40Z50-R2 updates the individual series cell voltages at 0.25-s intervals. The internal ADC of the BQ40Z50-R2 measures the voltage, and scales and calibrates it appropriately. This data is also used to calculate the impedance of the cell for the Impedance Track gas gauging.

#### 8.3.13 Current

The BQ40Z50-R2 uses the SRP and SRN inputs to measure and calculate the battery charge and discharge current using a 1-m $\Omega$  to 3-m $\Omega$  typ. sense resistor.

#### 8.3.14 Temperature

The BQ40Z50-R2 has an internal temperature sensor and inputs for four external temperature sensors. All five temperature sensor options can be individually enabled and configured for cell or FET temperature usage. Two configurable thermistor models are provided to allow the monitoring of cell temperature in addition to FET temperature, which use a different thermistor profile.

#### 8.3.15 Communications

The BQ40Z50-R2 uses SMBus v1.1 with MASTER mode and packet error checking (PEC) options per the SBS specification.

## 8.3.15.1 SMBus On and Off State

The BQ40Z50-R2 detects an SMBus off state when SMBC and SMBD are low for two or more seconds. Clearing this state requires that either SMBC or SMBD transition high. The communication bus will resume activity within 1 ms.

#### 8.3.15.2 SBS Commands

See the BQ40Z50-R2 Technical Reference Manual (SLUUBK0) for further details.

## 8.4 Device Functional Modes

The BQ40Z50-R2 supports three power modes to reduce power consumption:

- In NORMAL mode, the BQ40Z50-R2 performs measurements, calculations, protection decisions, and data updates in 250-ms intervals. Between these intervals, the BQ40Z50-R2 is in a reduced power stage.
- In SLEEP mode, the BQ40Z50-R2 performs measurements, calculations, protection decisions, and data updates in adjustable time intervals. Between these intervals, the BQ40Z50-R2 is in a reduced power stage. The BQ40Z50-R2 has a wake function that enables exit from SLEEP mode when current flow or failure is detected.
- In SHUTDOWN mode, the BQ40Z50-R2 is completely disabled.

See the BQ40Z50-R2 Technical Reference Manual (SLUUBK0) for further details.



# 9 Application and Implementation

#### Note


Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes, as well as validating and testing their design implementation to confirm system functionality.

## 9.1 Application Information

The BQ40Z50-R2 is a gas gauge with primary protection support, and can be used with 1-series to 4-series Li-ion/Li-polymer battery packs. To implement and design a comprehensive set of parameters for a specific battery pack, users need the Battery Management Studio (BQSTUDIO) graphical user-interface tool installed on a PC during development. The firmware installed on the BQSTUDIO tool has default values for this product, which are summarized in the *BQ40Z50-R2 Technical Reference Manual* (SLUUBK0). Using the BQSTUDIO tool, these default values can be changed to cater to specific application requirements during development once the system parameters, such as fault trigger thresholds for protection, enable/disable of certain features for operation, configuration of cells, chemistry that best matches the cell used, and more are known. This data is referred to as the "golden image."



# 9.2 Typical Applications

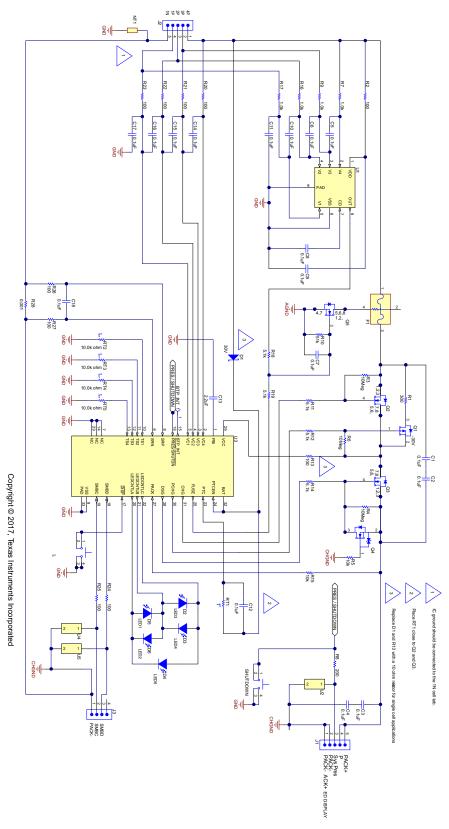





#### 9.2.1 Design Requirements

Table 9-1 shows the default settings for the main parameters. Use the BQSTUDIO tool to update the settings to meet the specific application or battery pack configuration requirements.

The device should be calibrated before any gauging test. Follow the procedures on the BQSTUDIO **Calibration** page to calibrate the device, and use the information on the BQSTUDIO **Chemistry** page to update the match chemistry profile to the device.

DESIGN PARAMETER	EXAMPLE		
Cell Configuration	3s1p (3-series with 1 parallel) <sup>(1)</sup>		
Design Capacity	4400 mAh		
Device Chemistry	1210 (LiCoO <sub>2</sub> /graphitized carbon)		
Cell Overvoltage at Standard Temperature	4300 mV		
Cell Undervoltage	2500 mV		
Shutdown Voltage	2300 mV		
Overcurrent in CHARGE Mode	6000 mA		
Overcurrent in DISCHARGE Mode	–6000 mA		
Short Circuit in CHARGE Mode	0.1 V/Rsense across SRP, SRN		
Short Circuit in DISCHARGE Mode	0.1 V/Rsense across SRP, SRN		
Safety Overvoltage	4500 mV		
Cell Balancing	Disabled		
Internal and External Temperature Sensor	External temperature sensor is used.		
Undertemperature Charging	0°C		
Undertemperature Discharging	0°C		
BROADCAST Mode	Disabled		
Battery Trip Point (BTP) with active high interrupt	Disabled		

(1) When using the device the first time and if a 1-s or 2-s battery pack is used, then a charger or power supply should be connected to the PACK+ terminal to prevent device shutdown. Then update the cell configuration (see the *BQ40Z50-R2 Technical Reference Manual* [SLUUBK0] for details) before removing the charger connection.

## 9.2.2 Detailed Design Procedure

#### 9.2.2.1 High-Current Path

The high-current path begins at the PACK+ terminal of the battery pack. As charge current travels through the pack, it finds its way through protection FETs, a chemical fuse, the Li-ion cells and cell connections, and the sense resistor, and then returns to the PACK– terminal (see Figure 9-2). In addition, some components are placed across the PACK+ and PACK– terminals to reduce effects from electrostatic discharge.

#### 9.2.2.1.1 Protection FETs

Select the N-channel charge and discharge FETs for a given application. Most portable battery applications are a good match for the CSD17308Q3. The TI CSD17308Q3 is a 47A, 30-V device with Rds(on) of 8.2 m $\Omega$  when the gate drive voltage is 8 V.

If a precharge FET is used, R1 is calculated to limit the precharge current to the desired rate. Be sure to account for the power dissipation of the series resistor. The precharge current is limited to  $(V_{CHARGER} - V_{BAT})/R1$  and maximum power dissipation is  $(V_{charger} - V_{bat})^2/R1$ .

The gates of all protection FETs are pulled to the source with a high-value resistor between the gate and source to ensure they are turned off if the gate drive is open.

Capacitors C1 and C2 help protect the FETs during an ESD event. Using two devices ensures normal operation if one becomes shorted. To have good ESD protection, the copper trace inductance of the capacitor leads



must be designed to be as short and wide as possible. Ensure that the voltage ratings of both C1 and C2 are adequate to hold off the applied voltage if one of the capacitors becomes shorted.

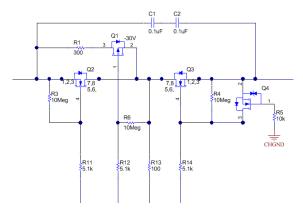


Figure 9-2. BQ40Z50-R2 Protection FETs

#### 9.2.2.1.2 Chemical Fuse

The chemical fuse (Dexerials, Uchihashi, and so on) is ignited under command from either the bq294700 secondary voltage protection IC or from the FUSE pin of the gas gauge. Either of these events applies a positive voltage to the gate of Q5, shown in Figure 9-3, which then sinks current from the third terminal of the fuse, causing it to ignite and open permanently.

It is important to carefully review the fuse specifications and match the required ignition current to that available from the N-channel FET. Ensure that the proper voltage, current, and Rds(on) ratings are used for this device. The fuse control circuit is discussed in detail in *Section* 9.2.2.2.5.

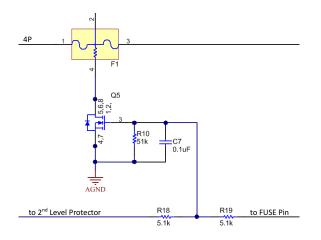


Figure 9-3. FUSE Circuit

#### 9.2.2.1.3 Li-Ion Cell Connections

For cell connections, it is important to remember that high current flows through the top and bottom connections; therefore, the voltage sense leads at these points must be made with a Kelvin connection to avoid any errors due to a drop in the high-current copper trace. The location marked 4P in Figure 9-4 indicates the Kelvin connection of the most positive battery node. The connection marked 1N is equally important. The VC5 pin (a ground reference for cell voltage measurement), which is in the older generation devices, is not in the BQ40Z50-R2 device. Therefore, the single-point connection at 1N to the low-current ground is needed to avoid an unwanted voltage drop through long traces while the gas gauge is measuring the bottom cell voltage.



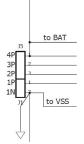


Figure 9-4. Li-Ion Cell Connections

#### 9.2.2.1.4 Sense Resistor

As with the cell connections, the quality of the Kelvin connections at the sense resistor is critical. The sense resistor must have a temperature coefficient no greater than 50 ppm in order to minimize current measurement drift with temperature. Choose the value of the sense resistor to correspond to the available overcurrent and short-circuit ranges of the BQ40Z50-R2 device. Select the smallest value possible to minimize the negative voltage generated on the BQ40Z50-R2 V<sub>SS</sub> node(s) during a short circuit. This pin has an absolute minimum of -0.3 V. Parallel resistors can be used as long as good Kelvin sensing is ensured. The device is designed to support a 1-m $\Omega$  to 3-m $\Omega$  sense resistor.

The BQ40Z50-R2 ground scheme is different from that of the older generation devices. In previous devices, the device ground (or low current ground) is connected to the SRN side of the  $R_{SENSE}$  resistor pad. In the BQ40Z50-R2 device, however, it connects the low-current ground on the SRP side of the  $R_{SENSE}$  resistor pad close to the battery 1N terminal (see *Section 9.2.2.1.3*). This is because the BQ40Z50-R2 device has one less VC pin (a ground reference pin VC5) compared to the previous devices. The pin was removed and was internally combined to SRP.

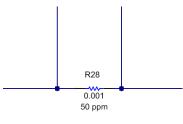


Figure 9-5. Sense Resistor

#### 9.2.2.1.5 ESD Mitigation

A pair of series  $0.1-\mu$ F ceramic capacitors is placed across the PACK+ and PACK– terminals to help in the mitigation of external electrostatic discharges. The two devices in series ensure continued operation of the pack if one of the capacitors becomes shorted.

Optionally, a tranzorb such as the SMBJ2A can be placed across the terminals to further improve ESD immunity.

#### 9.2.2.2 Gas Gauge Circuit

The gas gauge circuit includes the BQ40Z50-R2 and its peripheral components. These components are divided into the following groups: differential low-pass filter, PBI, system present, SMBus communication, fuse circuit, and LED.

#### 9.2.2.2.1 Coulomb-Counting Interface

The BQ40Z50-R2 uses an integrating delta-sigma ADC for current measurements. Add a 100- $\Omega$  resistor from the sense resistor to the SRP and SRN inputs of the device. Place a 0.1- $\mu$ F (C18) filter capacitor across the SRP and SRN inputs.



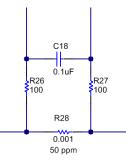


Figure 9-6. Differential Filter

#### 9.2.2.2.2 Power Supply Decoupling and PBI

The BQ40Z50-R2 device has an internal LDO that is internally compensated and does not require an external decoupling capacitor.

The PBI pin is used as a power supply backup input pin, providing power during brief transient power outages. A standard  $2.2-\mu$ F ceramic capacitor is connected from the PBI pin to ground, as shown in Figure 9-7.

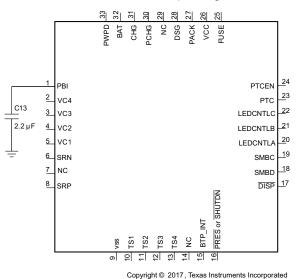


Figure 9-7. Power Supply Decoupling

#### 9.2.2.2.3 System Present

The system present signal informs the gas gauge whether the pack is installed into or removed from the system. In the host system, this pin is grounded. The PRES pin of the BQ40Z50-R2 device is occasionally sampled to test for system present. In ACTIVE mode, the PRES pin is pulsed every 250 ms for a duration of 5 ms (RHOEN is on), and just before it is turned off, the state of the PRES pin is checked to see if it is low or high. The average of the four measurements is used to determine if the PRES is asserted or not. In SLEEP mode, the PRES pin is pulsed every "Sleep Voltage Time," and the state of the PRES pin is determined. A resistor can be used to pull the signal low and the resistance must be 20 k $\Omega$  or lower to ensure that the test pulse is lower than the V<sub>IL</sub> limit. The pullup current source is typically 10  $\mu$ A to 20  $\mu$ A. When the PRES pin is not pulsed, the PRES pin is tied internally to VSS (RHOUT is on), and any pullup on the PRES pin will cause a battery drain when not charging. Refer to the PRES pin diagram in



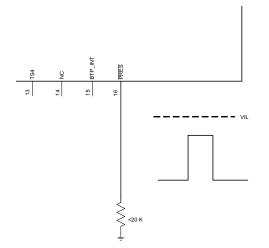


Figure 9-8. System Present Pull-Down Resistor

Because the System Present signal is part of the pack connector interface to the outside world, it must be protected from external electrostatic discharge events. The PRES pin has integrated ESD protection to 2 kV. External protection can be added to support higher ESD protection requirements. The TPD1E10B06 single-channel ESD protection diode (U2) can protect the input up to 30 kV, and the R8 reduces the holding current to release the internal SCR in the event that it triggers.

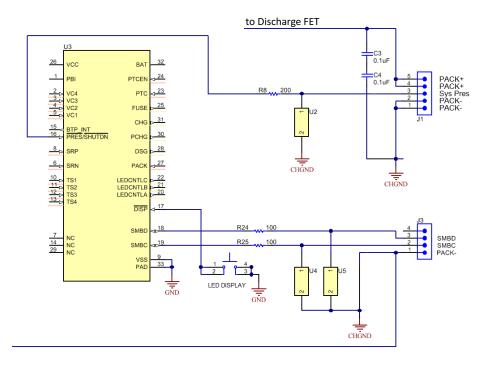


Figure 9-9. System Present ESD and Short Protection


#### 9.2.2.2.4 SMBus Communication

The SMBus clock and data pins have integrated high-voltage ESD protection circuits; however, adding TPD1E10B06 ESD protection diodes (U4 and U5) and series resistors (R24 and R25) provides more robust ESD performance.

#### Copyright © 2021 Texas Instruments Incorporated



The SMBus clock and data lines have internal pulldown. When the gas gauge senses that both lines are low (such as during removal of the pack), the device performs auto-offset calibration and then goes into SLEEP mode to conserve power.

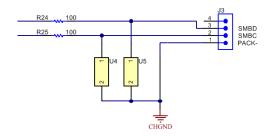

## Figure 9-10. ESD Protection for SMBus Communication

#### 9.2.2.2.5 FUSE Circuitry

The FUSE pin of the BQ40Z50-R2 device is designed to ignite the chemical fuse if one of the various safety criteria is violated. The FUSE pin also monitors the state of the secondary-voltage protection IC. Q5 ignites the chemical fuse when its gate is high. The 7-V output of the bq294700 is divided by R18 and R19, which provides adequate gate drive for Q5 while guarding against excessive back current into the bq294700 if the FUSE signal is high.

Using C7 is generally a good practice, especially for RFI immunity. C7 may be removed, if desired, because the chemical fuse is a comparatively slow device and is not affected by any sub-microsecond glitches that come from the FUSE output during the cell connection process.

If the AFEFUSE output is not used, it should be connected to VSS.

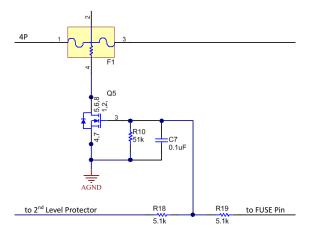


Figure 9-11. FUSE Circuit

When the BQ40Z50-R2 device is commanded to ignite the chemical fuse, the FUSE pin activates to give a typical 8-V output. The new design makes it possible to use a higher Vgs FET for Q5. This improves the robustness of the system, as well as widens the choices for Q5.

## 9.2.2.3 Secondary-Current Protection

The BQ40Z50-R2 device provides secondary overcurrent and short-circuit protection, cell balancing, cell voltage multiplexing, and voltage translation. The following section examines cell and battery inputs, pack and FET control, temperature output, and cell balancing.



#### 9.2.2.3.1 Cell and Battery Inputs

Each cell input is conditioned with a simple RC filter, which provides ESD protection during cell connect and acts to filter unwanted voltage transients. The resistor value allows some trade-off for cell balancing versus safety protection.

The integrated cell balancing FETs enable the AFE to bypass cell current around a given cell or numerous cells, effectively balancing the entire battery stack. External series resistors placed between the cell connections and the VCx I/O pins set the balancing current magnitude. The internal FETs provide a 200- $\Omega$  resistance (2 V < VDS < 4 V). Series input resistors between 100  $\Omega$  and 300  $\Omega$  are recommended for effective cell balancing.

The BAT input uses a diode (D1) to isolate and decouple it from the cells in the event of a transient dip in voltage caused by a short-circuit event.

Also, as described in *Section 9.2.2.1*, the top and bottom nodes of the cells must be sensed at the battery connections with a Kelvin connection to prevent voltage sensing errors caused by a drop in the high-current PCB copper.

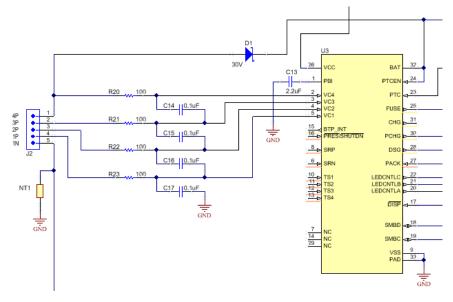


Figure 9-12. Cell and BAT Inputs

#### 9.2.2.3.2 External Cell Balancing

Internal cell balancing can only support up to 10 mA. External cell balancing is provided as another option for faster cell balancing. For details, refer to the application note, *Fast Cell Balancing Using External MOSFET* (SLUA420).

#### 9.2.2.3.3 PACK and FET Control

The PACK and V<sub>CC</sub> inputs provide power to the BQ40Z50-R2 device from the charger. The PACK input also provides a method to measure and detect the presence of a charger. The PACK input uses a 10-k $\Omega$  resistor; whereas, the V<sub>CC</sub> input uses an internal diode to guard against input transients and prevent a misoperation of the gate driver during short-circuit events.



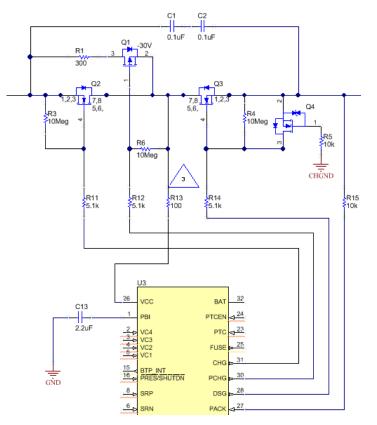


Figure 9-13. BQ40Z50-R2 PACK and FET Control

The N-channel charge and discharge FETs are controlled with 5.1-k $\Omega$  series gate resistors, which provide a switching time constant of a few microseconds. The 10-M $\Omega$  resistors ensure that the FETs are off in the event of an open connection to the FET drivers. Q4 is provided to protect the discharge FET (Q3) in the event of a reverse-connected charger. Without Q4, Q3 can be driven into its linear region and suffer severe damage if the PACK+ input becomes slightly negative.

Q4 turns on in that case to protect Q3 by shorting its gate to source. To use the simple ground gate circuit, the FET must have a low gate turn-on threshold. If it is desired to use a more standard device, such as the 2N7002 as the reference schematic, the gate should be biased up to 3.3 V with a high-value resistor. The BQ40Z50-R2 device has the capability to provide a current-limited charging path typically used for low battery voltage or low temperature charging. The BQ40Z50-R2 device uses an external P-channel, precharge FET controlled by PCHG.

#### 9.2.2.3.4 Temperature Output

For the BQ40Z50-R2 device, TS1, TS2, TS3, and TS4 provide thermistor drive-under program control. Each pin can be enabled with an integrated 18-k $\Omega$  (typical) linearization pullup resistor to support the use of a 10-k $\Omega$  at 25°C (103) NTC external thermistor, such as a Mitsubishi BN35-3H103. The reference design includes four 10-k $\Omega$  thermistors: RT2, RT3, RT4, and RT5. The BQ40Z50-R2 device supports up to four external thermistors. Connect unused thermistor pins to V<sub>SS</sub>.

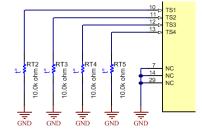


Figure 9-14. Thermistor Drive

#### 9.2.2.3.5 LEDs

Three LED control outputs provide constant current sinks for the driving external LEDs. These outputs are configured to provide voltage and control for up to five LEDs. No external bias voltage is required. Unused LEDCNTL pins can remain open or they can be connected to  $V_{SS}$ . The DISP pin should be connected to  $V_{SS}$  if the LED feature is not used.

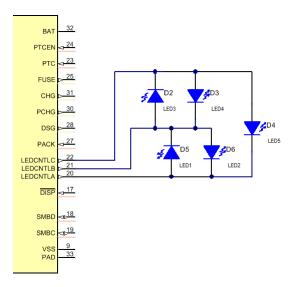


Figure 9-15. LEDs

#### 9.2.2.3.6 Safety PTC Thermistor

The BQ40Z50-R2 device provides support for a safety PTC thermistor. The PTC thermistor is connected between the PTC and BAT pins. It can be placed close to the CHG/DSG FETs to monitor the temperature. The PTC pin monitors the voltage at the pin and will trip if the thermistor resistance exceeds the defined threshold. A PTC fault is one of the permanent failure modes. It can only be cleared by a POR.

To disable, connect PTC and PTCEN to VSS.


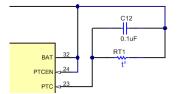


Figure 9-16. PTC Thermistor



#### 9.2.3 Application Curves



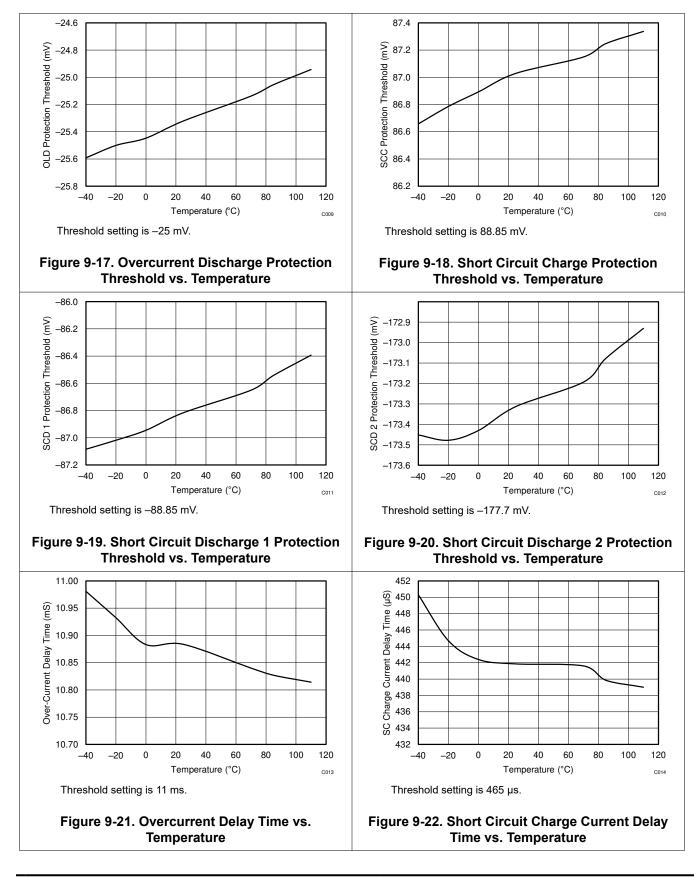

### **10 Power Supply Recommendations**

The device manages its supply voltage dynamically according to the operation conditions. Normally, the BAT input is the primary power source to the device. The BAT pin should be connected to the positive termination of the battery stack. The input voltage for the BAT pin ranges from 2.2 V to 26 V.

The VCC pin is the secondary power input, which activates when the BAT voltage falls below minimum  $V_{CC}$ . This enables the device to source power from a charger (if present) connected to the PACK pin. The VCC pin should be connected to the common drain of the CHG and DSG FETs. The charger input should be connected to the PACK pin.




## 11 Layout

## 11.1 Layout Guidelines


A battery fuel gauge circuit board is a challenging environment due to the fundamental incompatibility of highcurrent traces and ultra-low current semiconductor devices. The best way to protect against unwanted trace-totrace coupling is with a component placement, such as that shown in Figure 11-1, where the high-current section is on the opposite side of the board from the electronic devices. Clearly, this is not possible in many situations due to mechanical constraints. Still, every attempt should be made to route high-current traces away from signal traces, which enter the BQ40Z50-R2 directly. IC references and registers can be disturbed and in rare cases damaged due to magnetic and capacitive coupling from the high-current path.

#### Note

During surge current and ESD events, the high-current traces appear inductive and can couple unwanted noise into sensitive nodes of the gas gauge electronics, as illustrated in Figure 11-2.

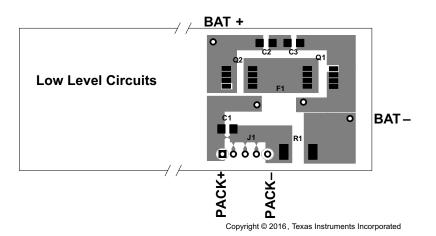

#### Figure 11-1. Separating High- and Low-Current Sections Provides an Advantage in Noise Immunity

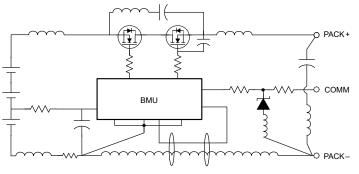


Copyright © 2016, Texas Instruments Incorporated

### Figure 11-2. Avoid Close Spacing Between High-Current and Low-Level Signal Lines


Kelvin voltage sensing is extremely important in order to accurately measure current and top and bottom cell voltages. Place all filter components as close as possible to the device. Route the traces from the sense resistor in parallel to the filter circuit. Adding a ground plane around the filter network can add additional noise immunity. Figure 11-3 and Figure 11-4 demonstrate correct Kelvin current sensing.



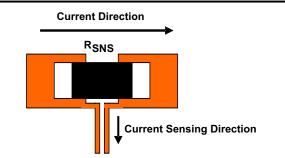

To SRP – SRN pin or HSRP – HSRN pin


### Figure 11-3. Sensing Resistor PCB Layout

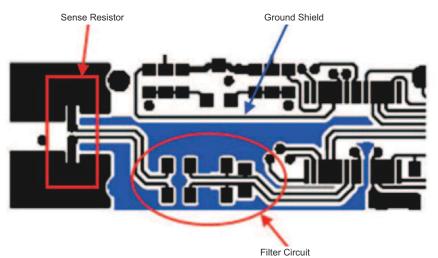



#### 11.1.1 Protector FET Bypass and Pack Terminal Bypass Capacitors

Use wide copper traces to lower the inductance of the bypass capacitor circuit. Figure 11-5 shows an example layout, demonstrating this technique.

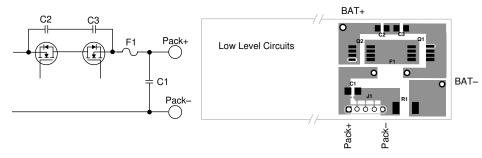

Copyright © 2016, Texas Instruments Incorporated

#### Figure 11-5. Use Wide Copper Traces to Lower the Inductance of Bypass Capacitors C1, C2, and C3

#### 11.1.2 ESD Spark Gap

Protect SMBus clock, data, and other communication lines from ESD with a spark gap at the connector. The pattern in Figure 11-6 is recommended, with 0.2-mm spacing between the points.



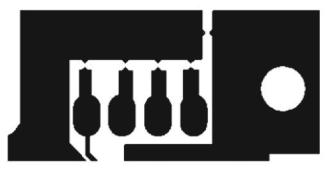


Figure 11-6. Recommended Spark-Gap Pattern Helps Protect Communication Lines from ESD

### 11.2 Layout Example


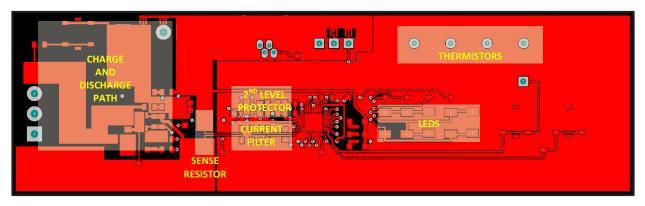


Figure 11-7. Top Layer

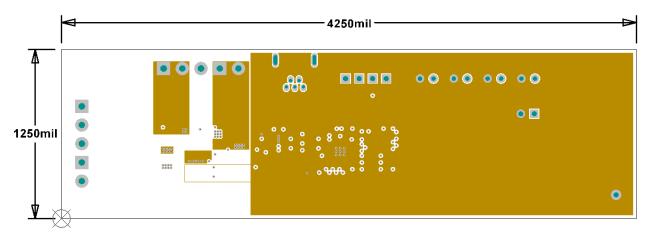

#### Figure 11-8. Internal Layer 1



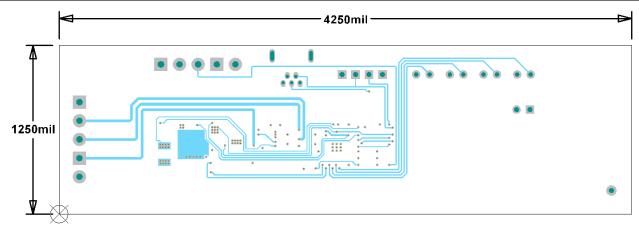


Figure 11-9. Internal Layer 2

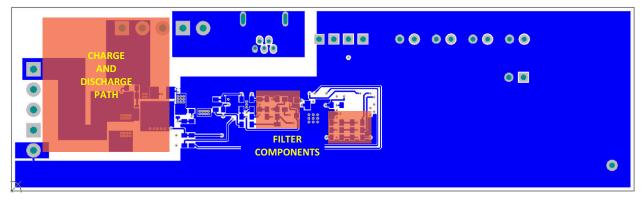


Figure 11-10. Bottom Layer



### 12 Device and Documentation Support

### **12.1 Third-Party Products Disclaimer**

TI'S PUBLICATION OF INFORMATION REGARDING THIRD-PARTY PRODUCTS OR SERVICES DOES NOT CONSTITUTE AN ENDORSEMENT REGARDING THE SUITABILITY OF SUCH PRODUCTS OR SERVICES OR A WARRANTY, REPRESENTATION OR ENDORSEMENT OF SUCH PRODUCTS OR SERVICES, EITHER ALONE OR IN COMBINATION WITH ANY TI PRODUCT OR SERVICE.

#### **12.2 Documentation Support**

#### 12.2.1 Related Documentation

For related documentation, see the following from the BQ40Z50-R2 product page on TI.com:

- BQ40Z50-R2 Technical Reference Manual (SLUUBK0)
- BQ40Z50EVM Li-Ion Battery Pack Manager Evaluation Module User's Guide (SLUUAV7)

#### 12.2.2 Receiving Notification of Documentation Updates

To receive notification of documentation updates, navigate to the device product folder on ti.com. In the upper right corner, click on *Alert me* to register and receive a weekly digest of any product information that has changed. For change details, review the revision history included in any revised document.

#### **12.3 Support Resources**

TI E2E<sup>™</sup> support forums are an engineer's go-to source for fast, verified answers and design help — straight from the experts. Search existing answers or ask your own question to get the quick design help you need.

Linked content is provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

#### 12.4 Trademarks

Impedance Track<sup>™</sup> and TI E2E<sup>™</sup> are trademarks of Texas Instruments. All trademarks are the property of their respective owners.

#### 12.5 Electrostatic Discharge Caution



This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

#### 12.6 Glossary

TI Glossary This glossary lists and explains terms, acronyms, and definitions.

### 13 Mechanical, Packaging, and Orderable Information

The following pages include mechanical, packaging, and orderable information. This information is the most current data available for the designated devices. This data is subject to change without notice and revision of this document. For browser-based versions of this data sheet, refer to the left-hand navigation.



16-Mar-2021

### PACKAGING INFORMATION

Orderable Device	Status (1)	Package Type	Package Drawing	Pins	Package Qty	Eco Plan (2)	Lead finish/ Ball material (6)	MSL Peak Temp (3)	Op Temp (°C)	Device Marking (4/5)	Samples
BQ40Z50RSMR-R2	ACTIVE	VQFN	RSM	32	3000	RoHS & Green	NIPDAU	Level-2-260C-1 YEAR	-40 to 85	BQ40Z50	Samples
BQ40Z50RSMT-R2	ACTIVE	VQFN	RSM	32	250	RoHS & Green	NIPDAU	Level-2-260C-1 YEAR	-40 to 85	BQ40Z50	Samples

<sup>(1)</sup> The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

**PREVIEW:** Device has been announced but is not in production. Samples may or may not be available.

**OBSOLETE:** TI has discontinued the production of the device.

<sup>(2)</sup> RoHS: TI defines "RoHS" to mean semiconductor products that are compliant with the current EU RoHS requirements for all 10 RoHS substances, including the requirement that RoHS substance do not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, "RoHS" products are suitable for use in specified lead-free processes. TI may reference these types of products as "Pb-Free".

**RoHS Exempt:** TI defines "RoHS Exempt" to mean products that contain lead but are compliant with EU RoHS pursuant to a specific EU RoHS exemption.

Green: TI defines "Green" to mean the content of Chlorine (CI) and Bromine (Br) based flame retardants meet JS709B low halogen requirements of <=1000ppm threshold. Antimony trioxide based flame retardants must also meet the <=1000ppm threshold requirement.

<sup>(3)</sup> MSL, Peak Temp. - The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

<sup>(4)</sup> There may be additional marking, which relates to the logo, the lot trace code information, or the environmental category on the device.

<sup>(5)</sup> Multiple Device Markings will be inside parentheses. Only one Device Marking contained in parentheses and separated by a "~" will appear on a device. If a line is indented then it is a continuation of the previous line and the two combined represent the entire Device Marking for that device.

<sup>(6)</sup> Lead finish/Ball material - Orderable Devices may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.



www.ti.com

## PACKAGE OPTION ADDENDUM

16-Mar-2021

# PACKAGE MATERIALS INFORMATION

www.ti.com

Texas Instruments

### TAPE AND REEL INFORMATION





## QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



*All dimensions are nominal												
Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
BQ40Z50RSMR-R2	VQFN	RSM	32	3000	330.0	12.4	4.25	4.25	1.15	8.0	12.0	Q2
BQ40Z50RSMT-R2	VQFN	RSM	32	250	180.0	12.4	4.25	4.25	1.15	8.0	12.0	Q2

TEXAS INSTRUMENTS

www.ti.com

# PACKAGE MATERIALS INFORMATION

17-Mar-2021



\*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
BQ40Z50RSMR-R2	VQFN	RSM	32	3000	367.0	367.0	35.0
BQ40Z50RSMT-R2	VQFN	RSM	32	250	210.0	185.0	35.0

# **RSM 32**

4 x 4, 0.4 mm pitch

# **GENERIC PACKAGE VIEW**

## VQFN - 1 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

This image is a representation of the package family, actual package may vary. Refer to the product data sheet for package details.






# **RSM0032A**



# **PACKAGE OUTLINE**

## VQFN - 1 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

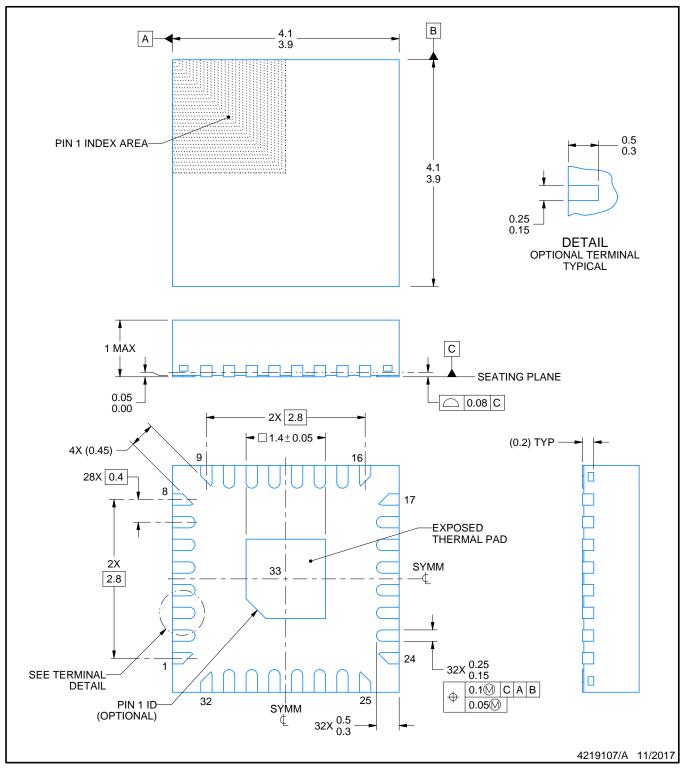

NOTES:

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M. 2. This drawing is subject to change without notice.
- 3. The package thermal pad must be soldered to the printed circuit board for thermal and mechanical performance.




# **RSM0032A**

# **EXAMPLE BOARD LAYOUT**

### VQFN - 1 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

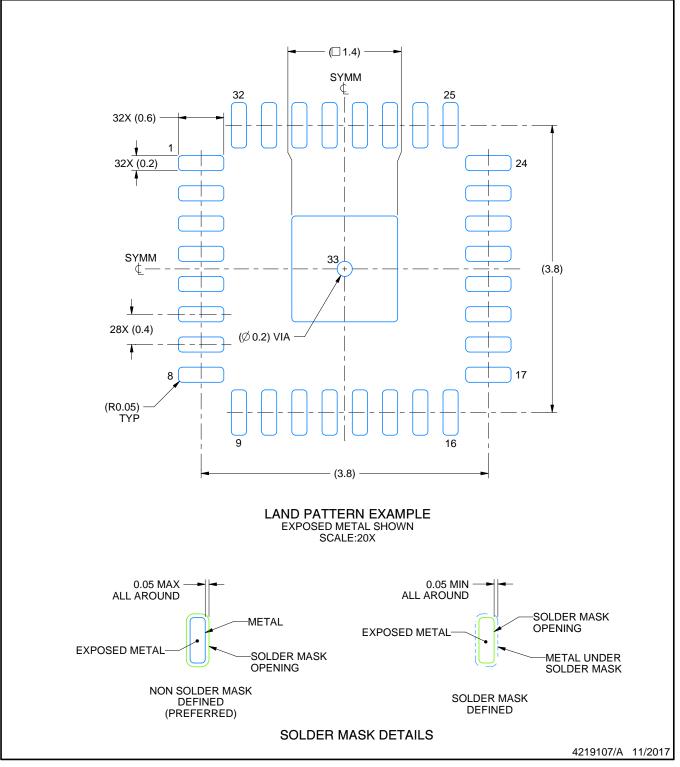

NOTES: (continued)

 This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature number SLUA271 (www.ti.com/lit/slua271).

 Vias are optional depending on application, refer to device data sheet. If any vias are implemented, refer to their locations shown on this view. It is recommended that vias under paste be filled, plugged or tented.




# **RSM0032A**

# **EXAMPLE STENCIL DESIGN**

## VQFN - 1 mm max height

PLASTIC QUAD FLATPACK - NO LEAD

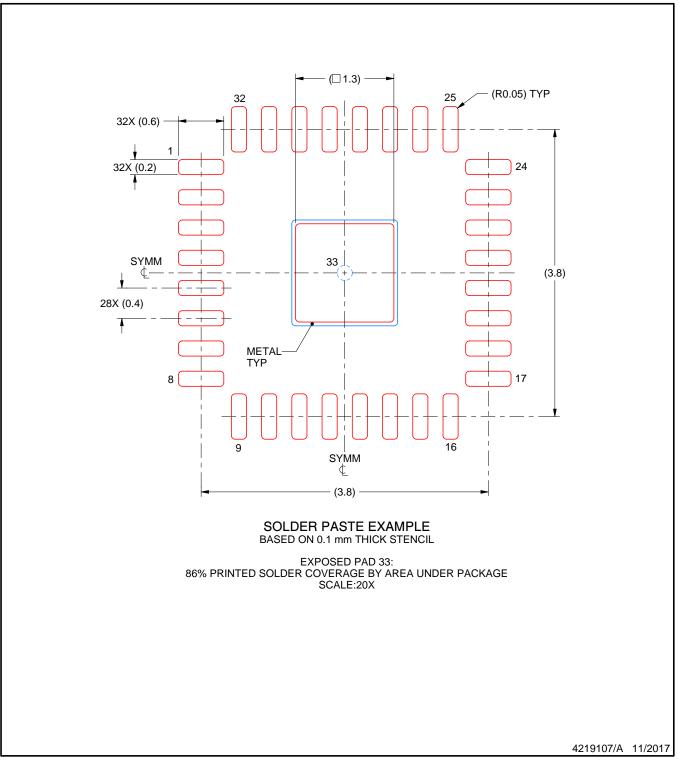

NOTES: (continued)

6. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.



### IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale (https://www.ti.com/legal/termsofsale.html) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2021, Texas Instruments Incorporated