

POWER TRANSFORMER CHASSIS MOUNT: TOROIDAL MEDICAL SERIES



VPM240-10400

Description:

The toroidal construction inherently reduces stray fields, increases efficiency and minimizes size compared to traditional EI transformers. The addition of a Flux Band further reduces the remaining stray fields. The shield between Primary and Secondary improves safety, reduces common mode signals and minimizes leakage current. Built with a Class F (155°) insulation system. A 140°C self-resetting thermal switch is included in the primary.

Electrical Specifications (@25C)

1. Maximum Power: 2500VA

2. Input Voltages: 100, 120, 220, 240VAC, 50/60Hz

3. Output Voltages: 120VAC @21.80A or 240VAC CT @ 10.40A

4. Voltage Regulation: 1.7% TYP from full load to no load

5. Temperature Rise: 55°C TYP

6. Hipot: 4000VAC, Primary to Secondary, Primary & Secondary to Shield & mounting surface

7. Efficiency: 95% TYP. @ full load

Agency File:

UL: File E122529, UL 60601-1/(R) 2012 Medical Electrical Equipment – Part 1 with 2 MOPP CE: ES 60601-1 (IEC 60601-1:2005, MOD)

cUL: C22.2 No. 60601-1:14, Medical Electrical Equipment – Part 1 CB Certified.





Dimensions: Inches (mm)

O.D.	I.D.	HT.*
8.5 (215)	2.8(71)	4.7(120)

*Add 0.188 (3) to the height for mounting hardware

Weight: 21Kg

Mounting:

Transformer is provided with one rubber pad, M8 x 120mm bolt, nut, spring and flat washer.

Connections:

Transformer is provided with 8" (203mm) long, 0.25" (6.35mm) stripped and tinned, stranded UL 1015 lead wire. Primaries are 14AWG, Secondaries are 14AWG, and Shield is 18AWG. The GRN/YEL shield lead is typically grounded. Do not lift transformer by leads!

Input Options:

100VAC: Input to Gray & Blue, jumper White & Brown, jumper Blue & Violet.120VAC: Input to White & Blue, jumper White & Brown, jumper Blue & Violet.

220VAC: Input to Gray & Violet, jumper Blue & Brown **240VAC:** Input to White and Violet, jumper Blue & Brown

Output Options:

120VAC: Output from Black & Red, jumper Black & Orange, jumper Red to Yellow

240VAC: Output from Black & Yellow, jumper Red & Orange

Primary and secondary windings are designed to be connected in series or parallel. Windings are not intended to be used independently.


RoHS Compliance: As of manufacturing date February 2016, all standard products meet the requirements of 2015/863/EU, known as the RoHS 3 initiative.


Web: www.TriadMagnetics.com Phone 951-277-0757 Fax 951-277-2757


460 Harley Knox Blvd. Perris, California 92571



Photo for illustration only

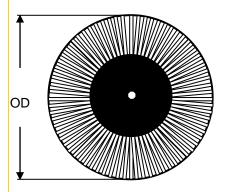

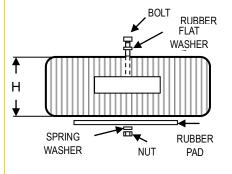

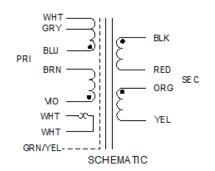

Publish Date: June 3, 2019

^{*} At printing, this document is considered "uncontrolled". Contact Triad Magnetics' website for current version